Extron

Occupancy Sensor OCS 100C • Setup Guide

The OCS 100C is a dual technology occupancy sensor that can be used to automate meeting and presentation spaces when used with Extron control products. The OCS is equipped with ultrasonic (US), infrared (PIR), and photocell sensors that can be used together to report ambient light conditions and room occupancy. Sensors can be wired directly to Extron controller products equipped with Digital I/Os ports or via eBUS, when using optional eBUS interface accessories.

The OCS requires 24 VDC for operation. If local 24 V power is not available, use the included 12 V to 24 V, USB 5 V to 24 V power converter.

NOTE: The OCS 100C is designed to detect occupancy using both the PIR and US sensors with their default settings to avoid false detections.

Front Panel Features and Control



Figure 1. OCS 100C Front Panel Features

Figure 2. OCS 100C Controls

- Ultrasonic sensors (4) Detect movement in the room, based on ultrasonic sound waves. The US sensor emits ultrasonic sound waves into an area and measures the speed of their return to detect the presence of people. Frequency changes are caused by the movement of people, which is detected by the US waves.
- Ultrasonic (US) Green LED status indicators (2) Flash when the ultrasonic sensors detect occupancy.
- Infrared/Photocell (Fresnel) lens Diffracts the incoming light and directs the light to the infrared sensor.
- Retainer Ring Holds the optional IR mask in place. Remove to access all controls and DIP switches. Insert the flat end of
 a small screwdriver into the notch in the retainer ring to lever it up and off.
- Infrared (PIR) Red LED status indicator Located behind the Fresnel lens, these LEDs flash when the infrared sensor detects occupancy.
- **Infrared Sensor** The infrared (PIR) sensor detects the presence of people based on the difference between the heat generated by moving people versus the ambient room temperature.

| Α | Switch Function | OFF | ON | Note |
|---|--|--|--|--|
| 1 | Not used | *Not used | Not used | Switch is not used. |
| 2 | Occupancy detection behavior - Dual technology mode | *Mutually exclusive (requires both PIR <u>and</u> US detection | Independent (either PIR <u>or</u> US detection) | If A2 is set to OFF , both the PIR and US sensors must be triggered (simultaneously) before the OCS reports an occupancy signal. If A2 is set to ON , the OCS reports occupancy based on only one of the sensors being triggered. When only one sensor is desired, set A2 to ON and adjust the dials accordingly. If A2 is ON , false detection when the room is not occupied increases. |
| 3 | Sensor status indicators | *LEDs enabled | LEDs disabled | Setting A3 to 0FF provides a visual notification whenever the PIR or US sensors are triggered. When the visual LED indicators are a distraction or you want to disable the flashing LEDs, A3 should be set to 0N . |
| 4 | Automatic adjust reset | *Retain learned sensor adjustments | Erase all learned settings (toggle ON , then OFF) | Only applicable when Timer (B3) or Sensitivity adjust (B4) or both are set to Automatic mode (0FF). Toggling A4 0N then 0FF will reset any stored learned adjustments. |

• DIP Switches A -

Occupancy Sensor OCS 100C • Setup Guide (Continued)

- OFF **Switch Function** ON Note В 1 Enabled **High Airflow** *Disabled If enabled (set to ON) the sensor will not detect minor changes compensator and movement. This could result in missed detection, with a low trigger-on threshold. Doorway mount *Disabled Enabled 2 3 Timer adjust Automatic *Manual Applies to the Timer (black), Infrared sensitivity (red), and Ultrasonic sensitivity (green) adjustment dials. 4 Sensitivity adjust Automatic *Manual Setting to Manual mode allows for more predicted behavior and is better suited for automating AV applications. Setting to Automatic mode allows the sensor to learn over • time the ideal timer and sensitivity adjustments for the space and usage trends. This is better suited for automating lighting applications. • All adjustment dials are disabled when set to Automatic (OFF).
- DIP Switches B (see figure 2 on the previous page)

*Default and recommended settings

NOTE: B3 and B4 must be set to **ON** for Manual mode, in order to adjust the timer, infrared sensitivity, and US sensitivity dials manually.

- Black Timer Dial The occupancy sensor has a built-in timer feature. Use the black timer dial to set the amount of time before the sensor triggers OFF. The factory default setting is 8 minutes.
 - **Timer range** 8 minutes to 42 minutes.
 - Full counter clock wise (CCW) = 8 minutes
 - Full clock wise (CW) = 42 minutes
 - Timer operation
 - When the sensor detects motion, it instantly triggers ON.
 - Once occupancy is no longer detected, the timer begins. If no motion is detected and the timer expires, then the sensor triggers OFF.

NOTE: If it takes too long for the OCS to turn off when the room is unoccupied, adjust the timer to 8 minutes and extend the timer via the configuration of the connected control processor. This setup reduces false detection.

- Test mode (8 second timer):
 - 1. Open the retainer ring.
 - 2. Rotate the black timer dial to about midway (50% or 12 o'clock).
 - 3. Return to minimum setting (full CCW).
 - 4. The timer will remain in the 8 second test mode for 1 hour, then automatically reset to 8 minutes.
 - 5. To manually force the timer out of the 8 second test mode, turn the timer adjustment approximately 1/16 inch clockwise. The setting is slightly above minimum (just above the 8 minute setting).
- Red Infrared Sensitivity Dial Adjust this dial to increase or decrease infrared sensitivity.
 - Turn clockwise (CW) to increase sensitivity. Minor movements are detected as occupancy.
 - Turn counterclockwise (CCW) to decrease sensitivity. Major movements are needed to detect occupancy.
 - The factory default setting is at 75%.
- Green Ultrasonic Sensitivity Dial Adjust this dial to increase or decrease ultrasonic sensitivity.
 - Turn clockwise (CW) to increase sensitivity. Minor movement are detected as occupancy.
 - Turn counterclockwise (CCW) to decrease sensitivity. Major movements are needed to detect occupancy.
 - The factory default setting is at 50%.
- Blue Photocell Sensitivity Dial The photocell prevents the sensor from triggering on when the area is adequately lit with natural light and motion is detected. The sensor must be mounted directly over an area that is representative of the average, natural room lighting. Before setting the photocell control, wait until the natural light is brightest (optional).

Adjust this dial to increase or decrease photocell sensitivity.

- Turn counterclockwise to decrease photocell sensitivity, causing it to activate with less light.
- Turn clockwise to increase photocell sensitivity, requiring brighter light to activate the sensor.
- Factory default is 100% (full clockwise) Photocell sensor is disabled.
- Range 10 to 1000 LUX

Recommended Setup



Figure 3. OCS 100C Front Panel Features and Controls

With the OCS in the default or recommended settings (A2 **0FF**), the OCS requires **both** the IR sensor **AND** the US sensor to detect occupancy to turn **0N**. Only one sensor (PIR <u>or</u> US) needs to trigger to reset the timer for the OCS to remain **0N** while the room is still occupied. When the OCS is in the **0FF** state, no occupancy is detected.

Follow these steps to set up the OCS to detect occupancy with minimal false detection:

NOTE: We recommend using the OCS 100C in the default settings when beginning the setup or the test mode. If needed, make slight adjustments at a time from the default sensitivity settings.

- 1. Keep all the DIP switches and rotary dials in the default positions.
- 2. Set the OCS in Test Mode.
- 3. Enter the room several times to verify if the IR detector is detecting movement (red LEDs flash).
 - If the red LEDs flash when entering the room, the default red infrared sensitivity dial is set correctly.
 - Verify the red LEDs flash with movement throughout the room.
 - Turn the red infrared sensitivity dial to decrease or increase IR sensitivity, until the red LEDs only flash when entering the room or making movements throughout the room.
 - To avoid false detections when the room is unoccupied, do not make the sensor too sensitive.
- 4. Enter the room and verify if the US detector is detecting movement (green LEDs flash).
 - If the green LEDs flash when entering the room, the default green ultrasonic range dial is set correctly. This sensor is very sensitive.
 - Verify the green LEDs flash with movement throughout the room.
 - Turn the green ultrasonic range dial to decrease or increase US sensitivity, until the green LEDs only flash when entering the room or making movements throughout the room.
 - To avoid false detections when the room is unoccupied, do not make the sensor too sensitive.
- 5. Leave the room and close the door. Wait until the Digital output state, relay or red and green LEDs stay OFF. Wait several minutes to ensure there are no false detections.
 - If the door remains open, the US sensor may detect changes.
 - If possible, wait longer, to confirm no IR or US change is registered.
- 6. Enter the room again, to confirm the Digital input state relay, red and green LEDs turn ON.

NOTE: After going through these steps and verifying the OCS is set up to accommodate the room, do not adjust the DIP switches or dials.

Automatic Mode

Out of the box, the OCS 100C can be set up in Automatic Mode, where no manual sensitivity adjustments are needed and sensitivity learning and adjustments are made automatically. For simple setup, we recommend keeping the OCS in the default settings and flipping the B4 Dip switch to the **OFF** (Auto) position. The OCS is ready to mount (see **Installation** on page 5).

Occupancy Sensor OCS 100C • Setup Guide (Continued)

Mask Patterns and Sensor Coverage

An included infrared mask may be needed to achieve the desired sensory coverage. Any area masked will block the PIR sensor from detecting motion in that area.



Figure 4. Mask Patterns and Sensor Coverage Diagrams

Installation



Figure 5. Installation Diagram

Occupancy Sensor OCS 100C • Setup Guide (Continued)

PC 1224 Wiring

ATTENTION:

- Do not connect power to the device until you have read the **ATTENTION**: on page 8 notices on the next page.
- Ne branchez pas l'alimentation à l'appareil avant d'avoir lu les mises en garde «ATTENTION: » a la page 8.
- Remove power from the system before making any connections.
- Mettez le système hors tension avant d'effectuer tout raccordement.
- The controller and the OCS 100C must share a common ground connection to avoid ground loops and a difference in grounding potential.
- Le contrôleur et l'OCS 100C doivent partager une connexion de mise à la terre commune pour éviter les risques de boucles de terre et une différence dans le potentiel de terre.

The OCS 100C requires 24 VDC to power. If the sensor is connected to a device that does not provide 24 VDC, use the included PC 1224 power module:

- 1. Connect a 12 VDC power source to the 12 VDC input on the supplied PC 1224 power converter (see figure 6), or power via the USB type-C 5 V input (see figure 7).
- 2. Wire the PC 1224 24 VDC, 75 mA max connector to the black and red wires on the OCS 100C.

NOTE: When the PC 1224 is powered via the USB 5 V input, the 24 V output is rated at 35 mA.

A 12 VDC, 1.25 A max pass-through is available to power additional 12 VDC devices, only if powered from the 12 V input.

OCS 100C Wiring Diagram







Figure 7. OCS 100C USB Power Wiring Diagram

| Wire Color | Connections | Note | | | | | |
|---|--|---|--|--|--|--|--|
| Power | | | | | | | |
| Black | Ground | Shared with all of the outputs. | | | | | |
| Red | +24 VDC | Power input. | | | | | |
| Occupancy Control Outputs | | | | | | | |
| Blue | Occupancy control output | When wiring the blue wire of the OCS to Extron products with Digital or FLEX Input ports, configure the ports as Input without pull up. The sensor provides approximately 21 VDC in the ON state and 0 VDC in the OFF state. Use the shared black ground wire | | | | | |
| Blue/White | Common | Relay contacts could be used to trigger third party devices, such as HVAC, based on | | | | | |
| Black/White Normally closed when unoccupied | | occupancy. | | | | | |
| Yellow/White | Normally open when unoccupied | | | | | | |
| Occupancy and Lighting Output | | | | | | | |
| Gray | Occupancy and photocell control output | Typically used for lighting applications. When wiring the gray wires of the OCS to Extron products with Digital or FLEX Input ports, configure the ports as Input without pull up. The output state will remain OFF 0 VDC when occupancy is detected but there is high amount of ambient or natural light in the room. Only when there is low or no ambient or natural light in the room and occupancy is detected will the output state trigger ON 21 VDC. Use the shared black ground wire. | | | | | |

Troubleshooting

| Problem | Possible Cause | Test | Solution |
|----------------------------------|---|---|---|
| Sensor remains ON. | Constant noise. | Reduce both green and red knobs by 1/8 (15%) turn or remove noise source. | Move sensor to a less noisy area within the room. |
| Sensor remains OFF | Sensitivity is set too low. | Increase both green and red knobs by 1/8 (15%) turn. | Move the sensor. If the A2 DIP switch is set to OFF, set green and red knobs to normal levels. |
| Sensor remains on too long. | Timer setting is too high. | Check DIP switch settings. | Reduce timer setting. |
| Hallway traffic turns sensor on. | Infrared sensor can see into the hallway. | Put sensor in timer test mode and walk the hallway. | Move sensor, so it cannot see into the hallway or install the IR masks. |

Safety Instructions

For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the **Extron Safety and Regulatory Compliance Guide** on the Extron website.

FCC Class A Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. The Class A limits provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference. This interference must be corrected at the expense of the user.

NOTE: For more information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the **Extron Safety and Regulatory Compliance Guide** on the Extron website.

Power Attention

ATTENTION:

- These products are intended for use with a UL Listed LPS type power source.
- Ces produits doivent être utilisés avec une source d'alimentation de type LPS certifiée UL.
- Use of a non-LPS or unlisted power supply will void all regulatory compliance certification.
- L'utilisation d'une source d'alimentation non-listée ou non-listée LPS annulera toute certification de conformité réglementaire.
- Unless otherwise stated, the AC/DC adapters are not suitable for use in air handling spaces or in wall cavities. The power supply is to be located within the same vicinity as the Extron AV processing equipment in an ordinary location, Pollution Degree 2, secured to the equipment rack within the dedicated closet, podium, or desk.
- Sauf mention contraire, les adaptateurs CA/CC ne conviennent pas à une utilisation dans les espaces d'aération ou dans les cavités murales. La source d'alimentation doit être placée à proximité de l'équipement Extron dans un emplacement ordinaire soumis à un degré de pollution de catégorie II, solidement fixé au rack d'équipement d'une baie technique, d'un pupitre, ou d'un bureau.
- The installation must always be in accordance with the applicable provisions of National Electrical Code ANSI/NFPA 70, article 725 and the Canadian Electrical Code part 1, section 16.
- Cette installation doit toujours être conforme aux dispositions applicables du Code américain de l'électricité (National Electrical Code) ANSI/NFPA 70, article 725, et du Code canadien de l'électricité, partie 1, section 16.
- The power supply shall not be permanently fixed to building structure or similar structure.
- La source d'alimentation ne devra pas être fixée de façon permanente à la structure de bâtiment ou à d'autres structures similaires.

For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the **Extron Safety and Regulatory Compliance Guide** on the Extron website.