


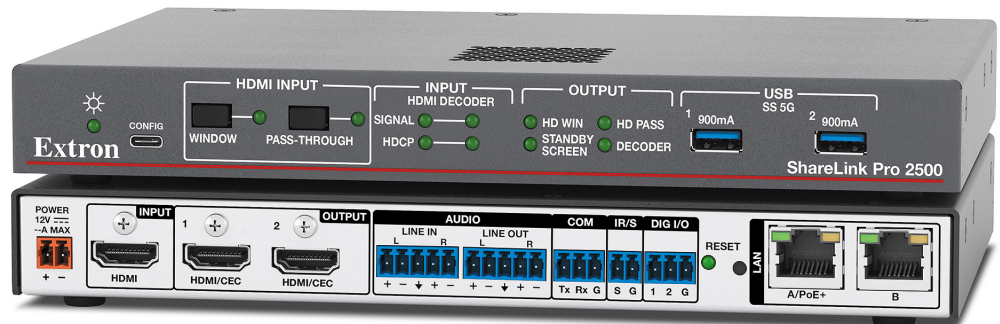

ShareLink Pro 2500

4K Dual Screen Wireless Presentation System



User Guide

Collaboration Systems

Safety Instructions

Safety Instructions • English

⚠ WARNING: This symbol, , when used on the product, is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may present a risk of electric shock.

⚠ ATTENTION: This symbol, , when used on the product, is intended to alert the user of important operating and maintenance (servicing) instructions in the literature provided with the equipment.

For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the Extron Safety and Regulatory Compliance Guide, part number 68-290-01, on the Extron website, www.extron.com

تعليمات السلامة • العربية

⚠ تحذير: هذا الرمز، , عند استخدامه على المنتج، مخصص لتنبيه المستخدم فيما يتعلق بوجود جهد كهربائي غير معزول على الغلاف الخارجي للمنتج وهو ما قد ينطوي على مخاطر حدوث صدمة كهربائية.

⚠ انتبه: هذا الرمز، , عند استخدامه على المنتج، مخصص لتنبيه المستخدم بتعليمات التشغيل والصيانة الهامة (الخدمة) في المواد التي يتم توفيرها مع المعدات.

للحصول على المزيد من المعلومات حول إرشادات السلامة، والتوافق التظيمية، والتوافق الكهرومغناطيسي/المجال الكهرومغناطيسي، وإمكانية الوصول، والموضوعات ذات الصلة، يرجى مراجعة دليل السلامة والتوافق التنظيمي www.extron.com الخاص بإكسترون، الجزء رقم 68-290-01، على موقع إكسترون،

Sicherheitsanweisungen • Deutsch

⚠ WARUNG: Dieses Symbol , auf dem Produkt soll den Benutzer darauf aufmerksam machen, dass im Inneren des Gehäuses dieses Produktes gefährliche Spannungen herrschen, die nicht isoliert sind und die einen elektrischen Schlag verursachen können.

⚠ VORSICHT: Dieses Symbol , auf dem Produkt soll dem Benutzer in der im Lieferumfang enthaltenen Dokumentation besonders wichtige Hinweise zur Bedienung und Wartung (Instandhaltung) geben.

Weitere Informationen über die Sicherheitsrichtlinien, Produkthandhabung, EMI/EMF-Kompatibilität, Zugänglichkeit und verwandte Themen finden Sie in den Extron-Richtlinien für Sicherheit und Handhabung (Artikelnummer 68-290-01) auf der Extron-Website, www.extron.com

Instrucciones de seguridad • Español

⚠ ADVERTENCIA: Este símbolo, , cuando se utiliza en el producto, avisa al usuario de la presencia de voltaje peligroso sin aislar dentro del producto, lo que puede representar un riesgo de descarga eléctrica.

⚠ ATENCIÓN: Este símbolo, , cuando se utiliza en el producto, avisa al usuario de la presencia de importantes instrucciones de uso y mantenimiento estas están incluidas en la documentación proporcionada con el equipo.

Para obtener información sobre directrices de seguridad, cumplimiento de normativas, compatibilidad electromagnética, accesibilidad y temas relacionados, consulte la Guía de cumplimiento de normativas y seguridad de Extron, referencia 68-290-01, en el sitio Web de Extron, www.extron.com

Instructions de sécurité • Français

⚠ AVERTISSEMENT : Ce pictogramme, , lorsqu'il est utilisé sur le produit, signale à l'utilisateur la présence à l'intérieur du boîtier du produit d'une tension électrique dangereuse susceptible de provoquer un choc électrique.

⚠ ATTENTION : Ce pictogramme, , lorsqu'il est utilisé sur le produit, signale à l'utilisateur des instructions d'utilisation ou de maintenance importantes qui se trouvent dans la documentation fournie avec l'équipement.

Pour en savoir plus sur les règles de sécurité, la conformité à la réglementation, la compatibilité EMI/EMF, l'accessibilité, et autres sujets connexes, lisez les informations de sécurité et de conformité Extron, réf. 68-290-01, sur le site Extron, www.extron.com

Istruzioni di sicurezza • Italiano

⚠ AVVERTENZA: Il simbolo, , se usato sul prodotto, serve ad avvertire l'utente della presenza di tensione non isolata pericolosa all'interno del contenitore del prodotto che può costituire un rischio di scosse elettriche.

⚠ ATTENZIONE: Il simbolo, , se usato sul prodotto, serve ad avvertire l'utente della presenza di importanti istruzioni di funzionamento e manutenzione nella documentazione fornita con l'apparecchio.

Per informazioni su parametri di sicurezza, conformità alle normative, compatibilità EMI/EMF, accessibilità e argomenti simili, fare riferimento alla Guida alla conformità normativa e di sicurezza di Extron, cod. articolo 68-290-01, sul sito web di Extron, www.extron.com

Instrukcje bezpieczeństwa • Polska

⚠ OSTRZEŻENIE: Ten symbol, , gdy używany na produkt, ma na celu poinformować użytkownika o obecności izolowanego i niebezpiecznego napięcia wewnątrz obudowy produktu, który może stanowić zagrożenie porażenia prądem elektrycznym.

⚠ UWAGI: Ten symbol, , gdy używany na produkt, jest przeznaczony do ostrzegania użytkownika ważne operacyjne oraz instrukcje konserwacji (obsługi) w literaturze, wyposażone w sprzęt.

Informacji na temat wytycznych w sprawie bezpieczeństwa, regulacji wzajemnej zgodności, zgodność EMI/EMF, dostępności i Tematy pokrewne, zobacz Extron bezpieczeństwa i regulacyjnego zgodności przewodnik, część numer 68-290-01, na stronie internetowej Extron, www.extron.com

Инструкция по технике безопасности • Русский

⚠ ПРЕДУПРЕЖДЕНИЕ: Данный символ, , если указан на продукте, предупреждает пользователя о наличии неизолированного опасного напряжения внутри корпуса продукта, которое может привести к поражению электрическим током.

⚠ ВНИМАНИЕ: Данный символ, , если указан на продукте, предупреждает пользователя о наличии важных инструкций по эксплуатации и обслуживанию в руководстве, прилагаемом к данному оборудованию.

Для получения информации о правилах техники безопасности, соблюдении нормативных требований, электромагнитной совместимости (ЭМП/ЭДС), возможности доступа и других вопросах см. руководство по безопасности и соблюдению нормативных требований Extron на сайте Extron: www.extron.com номер по каталогу - 68-290-01.

安全说明 • 简体中文

⚠ 警告: 产品上的这个标志意在警告用户，该产品机壳内有暴露的危险电压，有触电危险。

⚠ 注意: 产品上的这个标志意在提示用户，设备随附的用户手册中有重要的操作和维护(维修)说明。

关于我们产品的安全指南、遵循的规范、EMI/EMF 的兼容性、无障碍使用的特性等相关内容，敬请访问 Extron 网站，www.extron.com，参见 Extron 安全规范指南，产品编号 68-290-01。

安全記事・繁體中文

警告 ⚠ 若產品上使用此符號，是為了提醒使用者，產品機殼內存在未隔離的危險電壓，可能會導致觸電之風險。

注意 ⚠ 若產品上使用此符號，是為了提醒使用者，設備隨附的用戶手冊中有重要的操作和維護（維修）說明。

有關安全性指導方針、法規遵守、EMI/EMF 相容性、存取範圍和相關主題的詳細資訊，請瀏覽 Extron 網站 www.extron.com，然後參閱《Extron 安全性與法規遵守手冊》，準則編號 68-290-01。

安全上のご注意・日本語

警告: この記号 ⚠ が製品上に表示されている場合は、筐体内に絶縁されていない高電圧が流れ、感電の危険があることを示しています。

注意: この記号 ⚠ が製品上に表示されている場合は、本機の取扱説明書に記載されている重要な操作と保守(整備)の指示についてユーザーの注意を喚起するものです。

安全上のご注意、法規遵守、EMI/EMF適合性、その他の関連項目については、エクストロンのウェブサイト www.extron.com より「Extron Safety and Regulatory Compliance Guide」(P/N 68-290-01) をご覧ください。

안전 지침・한국어

경고: 이 기호 ⚠ 가 제품에 사용될 경우, 제품의 인클로저 내에 있는 접지되지 않은 위험한 전류로 인해 사용자가 감전될 위험이 있음을 경고합니다.

주의: 이 기호 ⚠ 가 제품에 사용될 경우, 장비와 함께 제공된 책자에 나와 있는 주요 운영 및 유지보수(정비) 지침을 경고합니다.

안전 가이드라인, 규제 준수, EMI/EMF 호환성, 접근성, 그리고 관련 항목에 대한 자세한 내용은 Extron 웹 사이트(www.extron.com)의 Extron 안전 및 규제 준수 안내서, 68-290-01 조항을 참조하십시오.

Copyright

© 2024-2025 Extron. All rights reserved. www.extron.com

Trademarks

All trademarks mentioned in this guide are the properties of their respective owners. The following registered trademarks (®), registered service marks (SM), and trademarks (TM) are the property of RGB Systems, Inc. or Extron (see the current list of trademarks on the [Terms of Use](#) page at www.extron.com):

Registered Trademarks (®)
Extron®, Cable Cubby®, ControlScript®, CrossPoint®, DTP®, eBUS®, EDID Manager®, EDID Minder®, eLink®, Everlast®, Flat Field®, FlexOS®, Glitch Free®, GlobalViewer®, Global Configurator®, Global Scripter®, Hideaway®, HyperLane®, IP Intercom®, IP Link®, Key Minder®, LinkLicense®, LockIt®, MediaLink®, MediaPort®, NAV®, NetPA®, PlenumVault®, PoleVault®, PowerCage®, PURE3®, Quantum®, ShareLink®, Show Me®, StudioStation®, SoundField®, SpeedMount®, SpeedSwitch®, System INTEGRATOR®, TeamWork®, TouchLink®, V-Lock®, VN-Matrix®, VoiceLift®, WallVault®, WindoWall®, XPA®, XTP®, XTP Systems®, ZipClip®
Registered Service Mark (SM) : S3 Service Support Solutions
Trademarks (TM)
AAP™, AFL™ - Accu-RATE Frame Lock, ADSP™ - Advanced Digital Sync Processing, AVEdge™, CableCover™, CDRS™ - Class D Ripple Suppression, Codec Connect™, ConferenceShare™, DDSP™ - Digital Display Sync Processing, DMI™ - Dynamic Motion Interpolation, Driver Configurator™, DSP Configurator™, DSP Configurator PRO™, DSVP™ - Digital Sync Validation Processing, EQIP™, FastBite™, Flex55™, FOX™, FOXBOX™, InstaWake™, IP Intercom HelpDesk™, MAAP™, MicroDigital™, Opti-Torque™, PendantConnect™, ProDSP™, QS-FPC™ - QuickSwitch Front Panel Controller, Room Agent™, Scope-Trigger™, SIS™ - Simple Instruction Set, Skew-Free™, SpeedNav™, Triple-Action Switching™, True4K™, True8K™, Vector™ 4K, WebShare™, XTRA™, ZipCaddy™

FCC Class A Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. The Class A limits provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference. This interference must be corrected at the expense of the user.

ATTENTION:

- The Twisted Pair Extension technology works with unshielded twisted pair (UTP) or shielded twisted pair (STP) cables; **but to ensure FCC Class A and CE compliance, STP cables and STP Connectors are required.**
- La technologie extension paires torsadées fonctionne avec les câbles paires torsadées blindées (UTP) ou non blindées (STP). Afin de s'assurer de la compatibilité entre FCC Classe A et CE, les câbles STP et les connecteurs STP sont nécessaires.

NOTES:

- This unit was tested with shielded I/O cables on the peripheral devices. Shielded cables must be used to ensure compliance with FCC emissions limits.
- For more information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the [Extron Safety and Regulatory Compliance Guide](#) on the Extron website.

Battery Notice

This product contains a battery. Do not open the unit to replace the battery. If the battery needs replacing, return the entire unit to Extron (for the correct address, see the Extron Warranty section on the last page of this guide).

CAUTION: Risk of explosion. Do not replace the battery with an incorrect type. Dispose of used batteries according to the instructions.

ATTENTION : Risque d'explosion. Ne pas remplacer la pile par le mauvais type de pile. Débarrassez-vous des piles usagées selon le mode d'emploi.

Conventions Used in this Guide

Notifications

The following notifications are used in this guide:

ATTENTION:

- Risk of property damage.
- Risque de dommages matériels.

NOTE: A note draws attention to important information.

Specifications Availability

Product specifications are available on the Extron website, www.extron.com.

Contents

Introduction.....	1
About the ShareLink Pro 2500	1
Features	2
Installation.....	4
Rear Panel Features and Cabling	4
Power Notifications	6
HDMI Connection.....	6
Reset Modes	7
Front Panel Features and Cabling.....	9
Using the Standby Screen.....	10
Operation Using a Computer.....	11
Connecting a Computer to the ShareLink Pro 2500.....	11
Connecting through an External WAP.....	11
Connecting through a Network Hub, Switch, or Router	11
Downloading the ShareLink Pro Software	12
Using the ShareLink Pro Software	14
Connecting to the ShareLink Pro	14
Presenting Content	15
Moderating a Presentation	16
Using the Embedded Web Page	18
Viewing a Presentation Using WebView	19
Presenting a Desktop Using WebShare.....	19
Using the Admin Page.....	21
Mirroring a Screen Using the WFA 100 Miracast Adapter	23
About the WFA 100	23
Using the WFA 100	23
Screen sharing options	25
Disconnecting from the display	25
Operation Using a Mobile Device.....	26
Downloading the ShareLink Pro App.....	26
Using the ShareLink Pro App	27
Connecting to a ShareLink Pro Unit.....	27
Presenting Content	28
App Menu.....	29
Using iOS Screen Mirroring.....	30
Discovering a ShareLink Pro Device on a Different Subnet for Apple Screen Mirroring.....	31
Enterprise Discovery Service.....	33
Enterprise Discovery Service - Overview	33
How EDS Works	34

Selecting and Configuring the EDS Host.....	36
Configuring the EDS Host in PCS.....	36
Configuring EDS Clients in PCS.....	37
Enabling EDS in Client Devices.....	37
Managing Login Code Settings for EDS Clients.....	38
Airplay Device Discovery via EDS.....	39
Airplay Device Discovery – Overview.....	39
Network Configuration for Airplay Device Discovery.....	39
Use Case (Example).....	40
Configuring AirPlay Device Discovery in PCS.....	41
Alternative (non-EDS) Configuration for a Wireless Subnet.....	47
Other Configuration Options.....	48
Device Discovery using ShareNext.....	48
Using ShareNext with the ShareLink Pro Software and Mobile App.....	49
Using ShareNext with Apple Screen Mirroring.....	49
Digital Signage Feature.....	50
Miracast Connection Using the WFA 100.....	52
Miracast Overview.....	52
Miracast Connection Methods.....	53
Configuring the WFA 100 Channel.....	56
Miracast Troubleshooting.....	57
Dual Output Display Configuration.....	59
Layout Groups.....	60
Selecting the Display Mode and Layout Group in PCS.....	61
SIS Configuration and Control.....	62
Host Device Connection.....	62
SIS Overview.....	62
Host and Device Communication.....	62
Error Responses.....	62
Command and Response Tables Overview.....	63
Symbol Definitions.....	63
Command and Response Tables for SIS Commands.....	67
Expo and Streaming.....	82
Bluetooth.....	88
CEC Commands.....	88
Reference Information.....	91
Mounting.....	91
Tabletop Mounting.....	91
Furniture Mounting.....	91
Rack Mounting.....	91
Firmware Download.....	92
Firewall Traversal.....	93
Toolbelt.....	95
Secure Sockets Layer (SSL) Certificates.....	95
Troubleshooting.....	96
Best Practices for Cleaning Your Extron Products.....	97

Introduction

This section covers the following:

- **About the ShareLink Pro 2500**
- **Features**

About the ShareLink Pro 2500

The ShareLink Pro 2500 is a 4K dual screen wireless presentation system that enables anyone to present wireless or wired content from their computers, tablets, or smartphones onto a display for easy collaboration.

It features streaming technology that supports simultaneous display of up to four content sources, including an HDMI-connected device. The HDMI input supports wired connections from any connected source in the room. To support a wide range of environments, the ShareLink Pro 2500 has collaboration and moderator modes that facilitate both open and restrictive environments.

The ShareLink Pro 2500 provides easy integration of AV and mobile devices into meeting, huddle, collaboration, and presentation spaces.

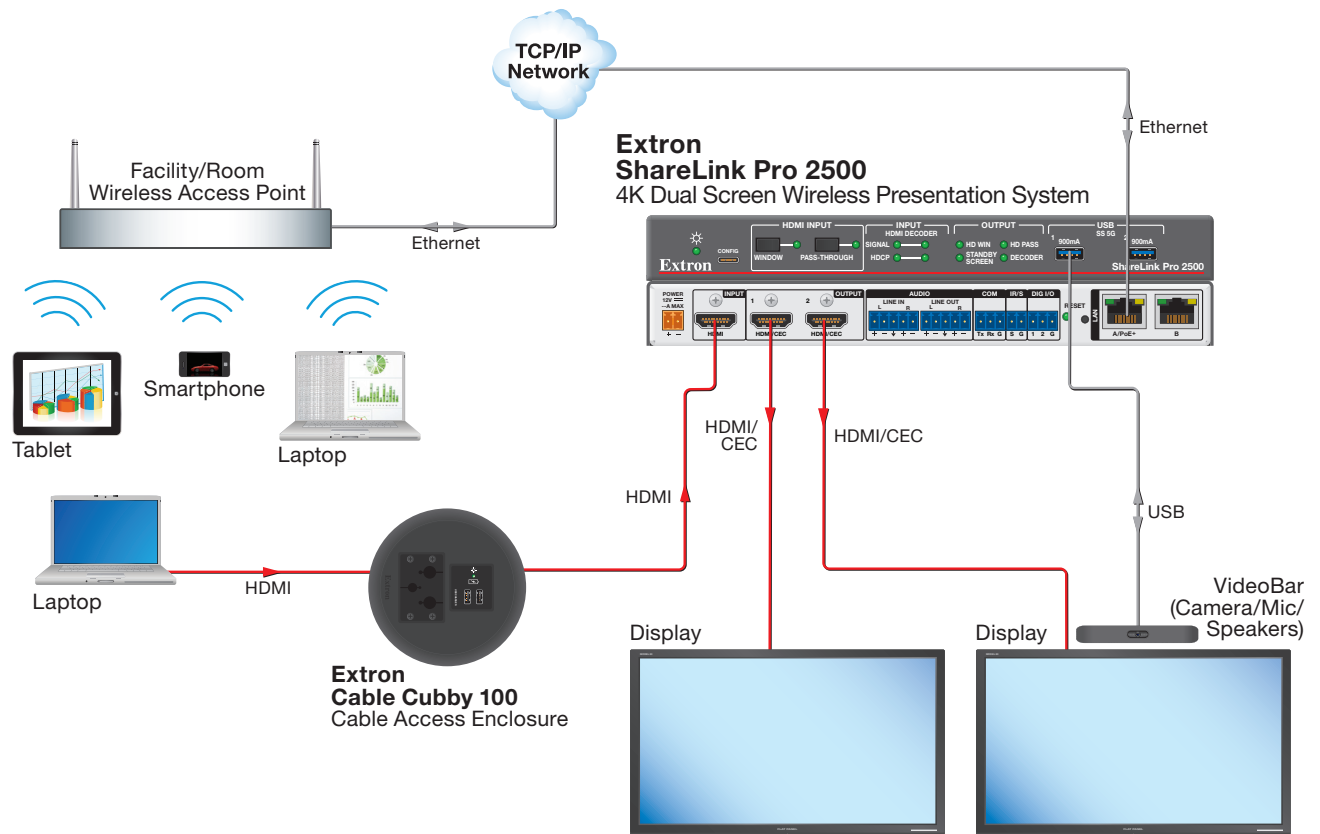


Figure 1. ShareLink Pro 2500 Application Diagram

Features

- **Provides full screen mirroring for all devices** — Display the entire screen of your device through the wireless presentation system for more fluid and easy collaboration sessions.
- **ConferenceShare enables wireless use of room cameras for UC meetings** — Facilitates wireless sharing of content from USB meeting room devices, such as cameras or microphones, for use in Microsoft Teams, Zoom, or other UC meetings.
- **Dual HDMI output supports displaying shared content on multiple displays**
- **Dual HDMI output supports displaying computer and video resolutions up to 4K** — Supports resolutions up to 4096x2160 with 4:4:4 chroma sampling at 8 bits of color.
- **WebShare shares content via a web browser** — Enables content sharing via a standard web browser, without the need to download software. This is ideal for users who want to share content quickly without installing anything on their computer. Works with Chrome™ browser supported on Windows®, macOS, and Chrome operating systems.
- **Wirelessly share content from mobile devices** — Connects a wide variety of devices to the system wirelessly or through a wired LAN connection.
- **Wireless and wired sources can collaborate simultaneously** — HDMI input enables wired users or sources to collaborate simultaneously with wireless users in the same session.
- **Supports Mac and Windows computers as well as Apple® and Android™ tablets and smartphones**
- **Dedicated app provides consistent user experience across platforms** — Similar interface for all platforms makes it easy for users to assist one another or move between devices regardless of how they connect and share content.
- **View up to four pieces of content simultaneously from any connected user** — Fosters collaboration and discussion by comparing multiple sources concurrently and reduces or eliminates the need to switch between sources for more effective collaboration.
- **H.264 Streaming Signage feature displays H.264 content on the ShareLink Pro 2500 when users aren't connected or sharing** — Content from Extron SME and SMP encoders and streaming media processors can be selected as well as any H.264 live stream - Digital Signage LinkLicense required.
- **Expo Mode enables the ShareLink Pro 2500 to display dynamic content as an alternative to the welcome screens** — Temporarily display H.264 streams, videos, or image content instead of BYOD shared content for unique events, announcements, or signage - Digital Signage LinkLicense required.
- **HDMI output supports computer and video resolutions up to 4K** — Resolutions up to 4096x2160 with 4:4:4 chroma subsampling at 8 bits of color.
- **HDCP compliant** — Ensures display of content-protected media on HDMI input and output for interoperability with other HDCP-compliant devices.
- **EDID Minder automatically manages EDID communication between HDMI connected devices** — EDID Minder ensures that all sources power up properly and reliably output content for display.
- **Collaboration mode allows any attendee to display content and control the presentation** — Enables content display from any connected device to enhance interactivity in brainstorming sessions, team meetings, and other collaborative environments.
- **Moderator mode ensures only approved user content is displayed** — Enables the moderator to select which users can access the display and how the content is displayed.
- **Display codes ensure content is delivered only to the selected display devices** — Randomly generated or user-defined display authentication codes prevent unintentional sharing or display of content to an adjacent space.

- **WebShare technology displays slide images on attendees personal devices via a web browser** — The ShareLink Pro 2500 enables meeting content to display on a participant mobile device. This is ideal for attendees who cannot easily view the main display.
- **128-bit data encryption** — A variety of security protocols ensure that all content transmitted between devices and the ShareLink Pro 2500 is fully encrypted and secure.
- **Power over Ethernet (PoE+)** allows the ShareLink Pro to receive power and communication over a single Ethernet cable, eliminating the need for a local power supply.
- **Fully customizable welcome screen** — Multiple configuration options to show, hide, or customize information on the welcome screen, so users can quickly connect and begin sharing their content.
- **Connects to an existing wireless network** — Leverages an existing wireless network infrastructure for the connection of mobile devices.
- **Includes user-friendly software for screen mirroring, sharing, and advanced control** — Provides both an executable that does not require administrator access rights and a version that can be deployed by IT administrators.
- **Video screen saver** — The ShareLink Pro 2500 can be set to automatically mute video and sync output to the display device when no active connections are detected, automatically entering the display into standby mode to conserve energy, reducing costs and promoting panel life.
- **Front panel security lockout** — Prevents unauthorized use in non-secure environments. Set via Extron PCS software.
- **Easy setup and commissioning with Extron PCS – Product Configuration Software** — Conveniently configure multiple products using a single software application.
- **Display control options including CEC over HDMI connection**
- **Automatic input cable equalization to 50 feet (15 meters)** — Actively conditions incoming HDMI signals to compensate for signal loss when using long HDMI cables, low quality HDMI cables, and source devices with poor HDMI signal output
- **Compatible with Extron mounting solutions** — Easy mounting with Extron low-profile and under-desk mounts, under-table kits, and rack-shelf options.
- **1 inch (2.5 cm) high, half rack width metal enclosure** — Compact, low profile enclosure allows discreet installation within a lectern or behind a flat panel display.
- **Extron Pro Series Secure Control** — The ShareLink Pro 2500 is designed to work natively with Extron Pro Series control systems via dedicated Secure Platform Interface that provides encrypted communication at all times between an Extron Pro Series control processor and the ShareLink Pro 2500 wireless presentation system.

Installation

This section covers the following:

- [Rear Panel Features and Cabling](#)
- [Front Panel Features and Cabling](#)
- [Using the Standby Screen](#)

Rear Panel Features and Cabling

The following section covers rear panel features and cabling procedures. If mounting is necessary before connecting cables, see [Mounting](#) on page 91.

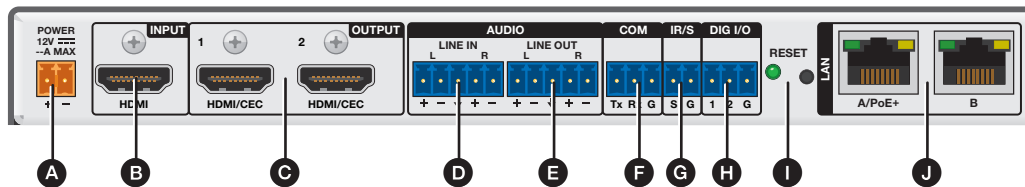


Figure 2. Rear Panel

- A Power input** — Connect the power supply (sold separately) to this two-pole captive screw connector (see the [Power Notifications](#) on page 6 for important information).

NOTES:

- Alternatively, the PoE+ port can be used to power the ShareLink Pro via a Power over Ethernet (PoE+) source device.
- If both power options are connected (12 V power supply and PoE+), 12 VDC has precedence.

- B HDMI input** — Connect an HDMI source device to this input.

NOTE: For HDMI connections (**B** and **C**), use an Extron LockIt Cable Lacing Bracket to secure the HDMI connector to the device (see [HDMI Connection](#) on page 6).

- C HDMI outputs** — Connect HDMI displays to these female HDMI connectors. These independent HDMI outputs (primary and secondary) can be mirrored or matrixed (allowing different content to be routed to each output). Output 1 must be connected to a display before Output 2 can be used. Output 2 can be disabled using PCS or SIS commands.

- D Audio input** — Connect a microphone for ConferenceShare to this 5-pole, 3.5 mm captive screw connector. This input can be mixed with the audio output signal using PCS or SIS commands. See Figure 3 for unbalanced or balanced input wiring.

- E Audio output** — Connect a balanced or unbalanced stereo (or dual mono) line level audio device to this 5-pole 3.5 mm captive screw connector. Wire the connector as shown below.

ATTENTION:

- For unbalanced audio, connect the sleeves to the ground contact. DO NOT connect the sleeves to the negative (–) contacts.
- Pour l'audio asymétrique, connectez les manchons au contact au sol. Ne PAS connecter les manchons aux contacts négatifs (–).


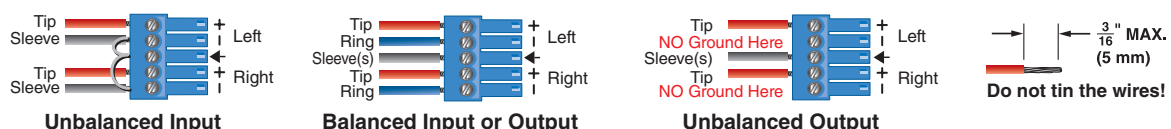


Figure 3. Audio Output Captive Screw Connector Wiring

- F COM port** (see [figure 2](#) on the previous page) — Connect an RS-232 controllable device to this 3-pole captive screw connector. Wire the connector as shown below.


NOTE: If you use cable that has a drain wire, tie the drain wire to ground at both ends.

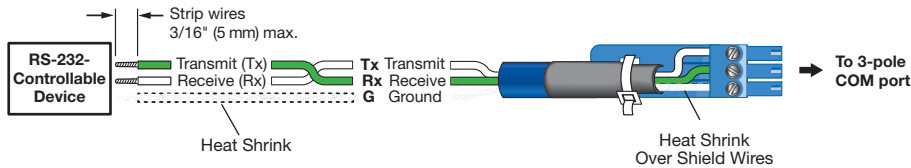


COM port default protocol:

- 9600 baud
- 8 data bits
- No parity
- 1 stop bit
- No flow control

 - G IR/Serial port** — Connect a device that is IR or RS-232 controllable to this 2-pole captive screw connector. Wire the connector as shown below.



 - H DIG I/O port** — Connect devices such as switchers, sensors, LEDs, relays or other devices that accept a TTL signal. This port can be used to monitor or trigger events and functions (toggle digital output or issue commands). Wire the connector as shown below. Configure this port as a digital input or output, with or without +5 VDC pull-up.



- I Reset button and LED** — Use this button to reset the device (see [Reset Modes](#) on page 7 for details on the various resets and LED states).
- J LAN ports** — Use an Ethernet cable to connect a network switch, hub, router, or PC to these RJ-45 ports. The LAN A port can also be used for Power over Ethernet (PoE+).

NOTE:

Default IP settings:

- | | |
|-------------------------------|---|
| • IP address: | • DHCP: |
| • LAN A: 192.168.253.254 | • LAN A: On |
| • LAN B: 192.168.254.254 | • LAN B: Off |
| • Gateway IP address: 0.0.0.0 | • Subnet mask: 255.255.255.0 |
| • DNS address: 0.0.0.0 | • Link speed and duplex level: autodetected |

LED indicators:

- Left LED (amber) indicates link speed: **1 blink per second:** 10 Mbps, **2 blinks per second:** 100 Mbps, **3 blinks per second:** 1 Gbps
- Right LED (green) indicates a link is active.

Power Notifications

ATTENTION:

- If not provided with a power supply, this product is intended to be supplied by a UL Listed power source marked "Class 2" or "LPS" and rated output 12Vdc, minimum 3.0 A, or 56 Vdc (PoE+), minimum 0.8 A.
- Si le produit n'est pas fourni avec une source d'alimentation, il doit être alimenté par une source d'alimentation certifiée UL de classe 2 ou LPS, avec une tension nominale 12 Vcc, 3,0 A minimum, ou 56 Vcc (PoE+), 0,8 A minimum.
- Unless otherwise stated, the AC/DC adapters are not suitable for use in air handling spaces or in wall cavities.
- Sauf mention contraire, les adaptateurs AC/DC ne sont pas appropriés pour une utilisation dans les espaces d'aération ou dans les cavités murales.
- The installation must always be in accordance with the applicable provisions of National Electrical Code ANSI/NFPA 70, article 725 and the Canadian Electrical Code part 1, section 16. The power supply shall not be permanently fixed to a building structure or similar structure.
- Cette installation doit toujours être en accord avec les mesures qui s'applique au National Electrical Code ANSI/NFPA 70, article 725, et au Canadian Electrical Code, partie 1, section 16. La source d'alimentation ne devra pas être fixée de façon permanente à une structure de bâtiment ou à une structure similaire.
- Power over Ethernet (PoE) is intended for indoor use only. It is to be connected only to networks or circuits that are not routed to the outside plant or building.
- L'alimentation via Ethernet (PoE) est destinée à une utilisation en intérieur uniquement. Elle doit être connectée seulement à des réseaux ou des circuits qui ne sont pas routés au réseau ou au bâtiment extérieur.

HDMI Connection

To secure HDMI cables to the HDMI input connectors, use an Extron LockIt Cable Lacing Bracket and a tie wrap.

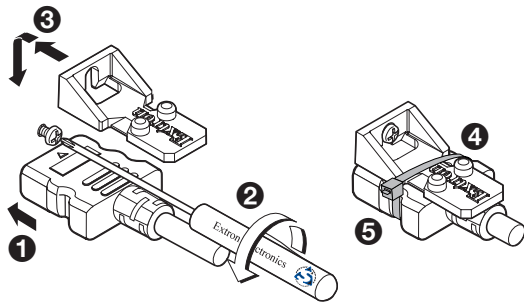


Figure 4. Installing the LockIt Cable Lacing Bracket

1. Plug the HDMI cable into the panel connection (see figure 4, ①).
2. Loosen the HDMI connection mounting screw from the panel (②) enough to allow the LockIt to be placed over it. The screw does not have to be removed.
3. Place the LockIt on the screw and against the HDMI connector (③), and then tighten the screw to secure the bracket.
4. Loosely place the included tie wrap around the HDMI connector and the LockIt (④).
5. While holding the connector securely against the cable lacing bracket, use pliers or similar tools to tighten the tie wrap, then remove any excess length (⑤).

ATTENTION:

- Connect and pull the tie wraps until they are secure. Do not overtighten.
- Connectez et tirez les serre-câbles jusqu'à ce qu'ils soient sécurisés. Ne pas trop serrer.

Reset Modes

The rear panel **Reset** button can activate four different reset modes (see the table below for a summary of each reset mode and LED state).

NOTE: Review the reset modes carefully. Some reset modes delete all user-loaded content.

Reset Mode Summary		
Mode	Activation	Result
Use Factory Firmware Resets the firmware to the factory version temporarily if an incompatibility issue arises with the current firmware.	Hold down the recessed Reset button while applying power to the device. NOTE: After this reset, update the device with the latest firmware version. Do not operate the device with the firmware version that results from this reset.	The device reverts to the factory default firmware for a single power cycle. All user files and settings are maintained. NOTE: If this reset was made by mistake or is no longer desired, cycle power to the device again to restore the firmware version running prior to the reset.
Reset to Factory Defaults Resets all device settings to default values but retains user-loaded files and IP settings. NOTE: This reset is the equivalent of SIS command ZXXX (see page 80).	Hold down the Reset button (for about 3 seconds) until the Reset LED blinks once. Then, press the Reset button again momentarily (<1 second).	The device reverts all settings to the default values except: • IP related settings • User-loaded files and configurations NOTE: • This mode does not affect passwords. • The Reset LED blinks four times in quick succession during the reset, then remains on.
Reset Network Settings Resets the IP settings back to factory defaults.	Hold down the Reset button for about 6 seconds until the Reset LED blinks twice (once at 3 seconds, then twice at 6 seconds). Then, within one second, press the Reset button again momentarily (for <1 second). NOTE: Nothing happens if the button is not pressed within one second.	The device reverts IP settings to the default values. • ARP capability is enabled. • IP address, subnet mask, gateway address, and port mapping reset to the default value. • DHCP is disabled. • Events are disabled. NOTE: The Reset LED blinks four times in quick succession during the reset, then remains on.

Reset Mode Summary		
Mode	Activation	Result
Full Factory Reset Resets the device to default configuration. NOTE: This reset is the equivalent of SIS command ZQQQ (see page 80).	Hold down the Reset button for about 9 seconds until the Reset LED blinks three times (once at 3 seconds, twice at 6 seconds, and thrice at 9 seconds). Then, within one second, press the Reset button again momentarily (for <1 second). NOTE: Nothing happens if the button is not pressed within one second.	The device reverts user settings to the factory default values (firmware excluded). - All user modifiable configuration is reset to default values, including IP settings and real-time adjustments. - All user loaded files are deleted. NOTE: - Admin password resets to extron. - The Reset LED blinks four times in quick succession during the reset, then remains on.
Toggle DHCP Client	To enable or disable the DHCP client for the LAN A port: - Press the Reset button five times (consecutively). - Release the button. Do not press the button within 3 seconds following the fifth press. NOTES: - By default, DHCP is ON for the LAN A port and DHCP is OFF for the LAN B port. The unit uses a static IP address for the LAN B port. - If DHCP has been enabled, when you disable DHCP, the unit reverts to using the previously-set static IP address.	- The Reset LED blinks 6 times if the DHCP client is enabled. - The Reset LED blinks 3 times if the DHCP client is disabled.

Front Panel Features and Cabling

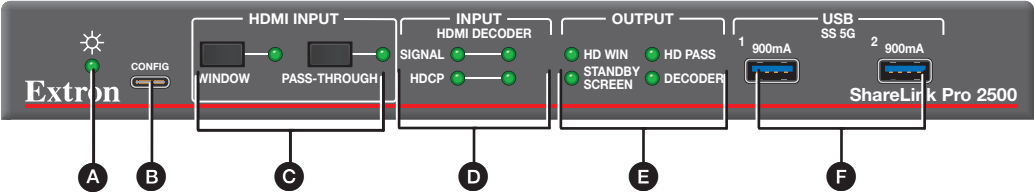


Figure 5. Front Panel

- A Power LED indicator** — Lights when the unit is powered on.
- B Configuration port** — Connect a PC to this front panel USB-C connector to configure the ShareLink Pro. The port uses IP over USB technology. The IP address is always 203.0.113.22 and CANNOT be changed. This port is also discoverable via Extron Toolbelt and Extron PCS software.
- C HDMI input selection buttons** — Use these buttons to select between HDMI window mode and pass-through mode. These modes determine how the HDMI input is presented on the output (see below for details).

NOTES:

- Selection of one mode deselects the other mode.
- In each mode, the audio status (muted or unmuted) varies depending on the audio mute setting. The following table shows the HDMI and analog audio status if audio mute is enabled or disabled.

Audio Mute Setting	Window Mode		Pass-Through Mode	
	HDMI Audio	Analog Audio	HDMI Audio	Analog Audio
Audio mute ENABLED	Muted	Muted	Unmuted	Muted
Audio mute DISABLED	Unmuted	Unmuted	Unmuted	Unmuted

- The audio mute setting can be configured using PCS or SIS commands.

- HDMI WINDOW** button – Activates HDMI window mode, which displays the HDMI input source in addition to or alongside any content currently being shared by client devices.

NOTE: Maximum input resolution for this mode is 4K @ 30 Hz.

- HDMI PASS-THROUGH** button – Activates HDMI pass-through mode, which routes the HDMI input signal directly to the HDMI output unaltered. In this mode, neither the status bar nor decoder input streams are shown on the output.

NOTE: Maximum output resolution for this mode is 4K @ 60 Hz.

- D Input LED indicators:**
 - HDMI Signal LED** – Lights when an HDMI signal is detected.
 - Decoder Signal LED** – Lights when one stream is detected. Flashes green when more than one stream is detected at the same time.
 - HDMI HDCP LED** – Lights when the HDMI input signal is encrypted. Turns off when the HDMI input signal is not encrypted or when HDCP authorization is disabled.
 - Decoder HDCP LED** – Lights when the decoder source signal is encrypted. Turns off when the decoder source signal is not encrypted or when HDCP authorization is disabled.
- E Output LED indicators** — These LEDs light green when the source signals are present and active on the output.
 - HD Win** – Lights green when the HDMI source is active on the output in HDMI window mode. Lights amber if HDMI pass-through mode is activated after originally being in window mode.
 - Decoder** – Lights green when at least one stream is active on the output. Lights amber if HDMI pass-through mode is activated after at least one stream was active on the output.

- **Standby Screen** – Lights green when the standby screen is active on the output. Lights amber if HDMI pass-through mode is activated while the ShareLink Pro output displays the standby screen.

NOTE: The standby screen images are displayed only when HDMI and decoder sources are **not** active.

- **HD Pass** – Lights green when the HDMI source is active on the output in pass-through mode.
- F USB port** – Connect the Extron WFA 100 Wi-Fi Miracast adapter to this port. This adapter enables anyone to share content from a Windows 10 device without installing any software (see [Mirroring a Screen Using the WFA 100 Miracast Adapter](#) on page 23). This port can also be used for USB peripherals when using ConferenceShare (see the *ConferenceShare User Guide* at www.extron.com).

Using the Standby Screen

Once the ShareLink Pro 2500 is connected and powered on, the standby screen appears on the display:

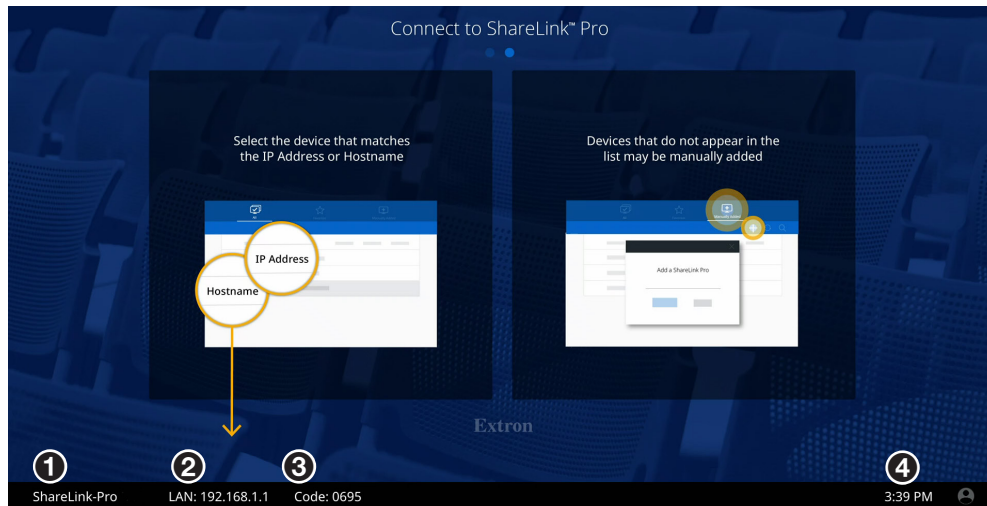


Figure 6. Standby Screen

- 1 Hostname** — Use this hostname to identify and access the ShareLink Pro 2500 during connection.
- 2 IP address** — Use this IP address to identify and access the ShareLink Pro 2500 during connection and to download the ShareLink Pro client software.
- 3 Login code** — Use this code to connect to the ShareLink Pro 2500 using the software. This code can be customized or disabled via PCS.
- 4 Time** — The time format can be adjusted via PCS.

NOTE:

- The standby screen background can be changed using PCS. For best results, make sure the desired background image matches the display output resolution.
- The status bar at the bottom of the standby screen (showing the IP addresses, hostname, and login code) is overlaid over the background image. Ensure that this portion of the background image does not contain important information as it will be covered by the status bar.
- The status bar color can also be changed using PCS.

Operation Using a Computer

Users can present from a Windows or Mac computer using the ShareLink Pro software. This section covers the following:

- [Connecting a Computer to the ShareLink Pro 2500](#)
- [Downloading the ShareLink Pro Software](#)
- [Using the ShareLink Pro Software](#)
- [Using the Embedded Web Page](#)
- [Mirroring a Screen Using the WFA 100 Miracast Adapter](#)

Connecting a Computer to the ShareLink Pro 2500

There are two ways to connect a computer to the ShareLink Pro 2500:

- Wirelessly, through an external wireless access point (WAP)
- Wired, through a network device

See the following instructions for your preferred connection method.

Connecting through an External WAP

1. Ensure that the external WAP and the ShareLink Pro 2500 are wired to the same network.
2. Ensure that the ShareLink Pro 2500 is powered on and that wireless network capability is enabled on your computer.
3. Open the wireless networks on your PC and connect to the external WAP.



Connecting through a Network Hub, Switch, or Router

1. Ensure that your computer is connected to the network through a hub, switch, or router.
2. Connect one of the RJ-45 connectors of the ShareLink Pro 2500 to the network device using an RJ-45 cable.

Downloading the ShareLink Pro Software

The ShareLink Pro software can be downloaded from the embedded web page or from the [Extron website](#). Follow the instructions below for your preferred download method.

NOTES:

- For other details on the embedded web page, see [Using the Embedded Web Page](#) on page 18.
- For instructions on mirroring the computer screen using the optional ShareLink Pro WFA 100 Miracast adapter, see [Mirroring a Screen Using the WFA 100 Miracast Adapter](#) on page 23.

Downloading the software from the embedded Web pages

1. Ensure that your computer is connected to the ShareLink Pro 2500, either through an external WAP or through a physical network connection. The computer and the ShareLink Pro 2500 must be on the same network.
2. Open a web browser and enter the ShareLink Pro IP address into the browser.

NOTE: The IP address is shown on the standby screen (see [figure 6](#), ② on page 10).

The ShareLink Pro landing page opens on the browser:

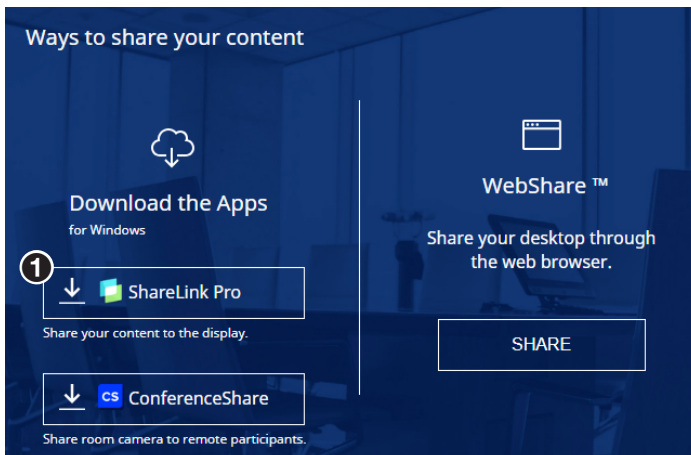


Figure 7. ShareLink Pro Landing Page

3. Click the **ShareLink Pro** button (see figure 7, ①) to start the download.

NOTE: macOS users: The .app software file is embedded in a .zip file. Some browsers automatically extract (unzip) the .app file. However, in some cases, the user may need to extract the file.

Downloading the software from the Extron website

1. On the [Extron website](#), go to the **Download** tab and click **Software** (see figure 8, ❶).

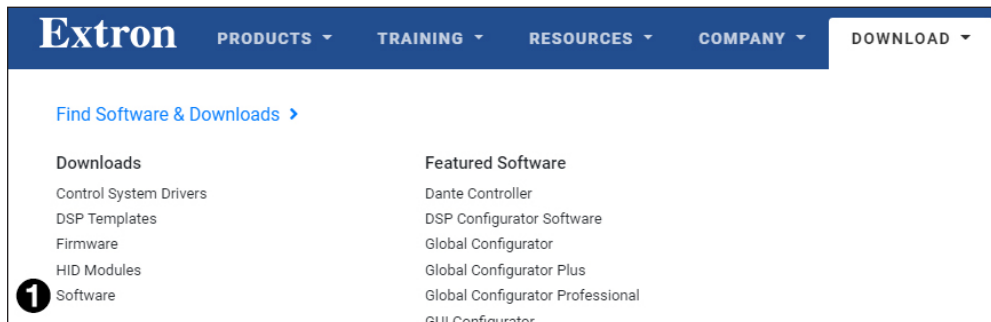


Figure 8. Download Page on the Extron Website

2. Search for ShareLink Pro in the **Search Software** field and select the file for your operating system (see figure 9).

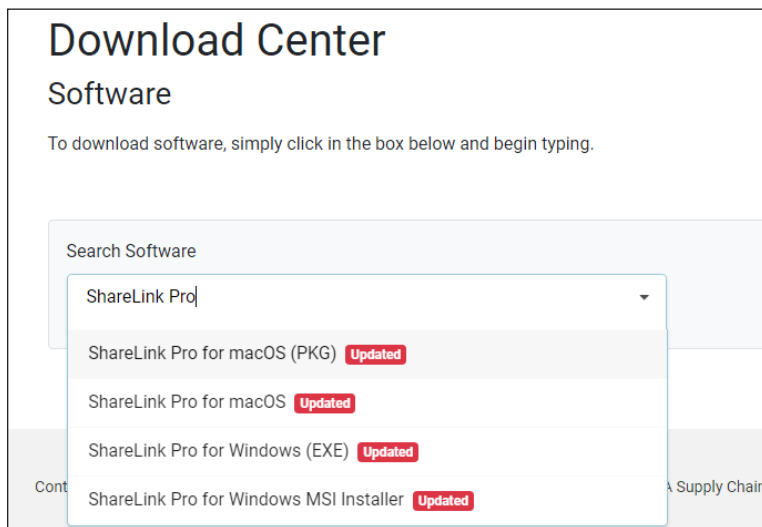


Figure 9. Software Download Link

3. Click the **Download** link on the next page to start the download. Note where the file is saved.
4. Open the saved executable (.exe) file.
5. Follow the instructions that appear on the screen to install the program.

Using the ShareLink Pro Software

Connecting to the ShareLink Pro

If the software is not yet connected to the ShareLink Pro device, follow these steps:

1. Open the ShareLink Pro software. The software searches for available devices on your network and lists them.
2. Click the desired ShareLink Pro 2500 device (see the standby screen for the device name).

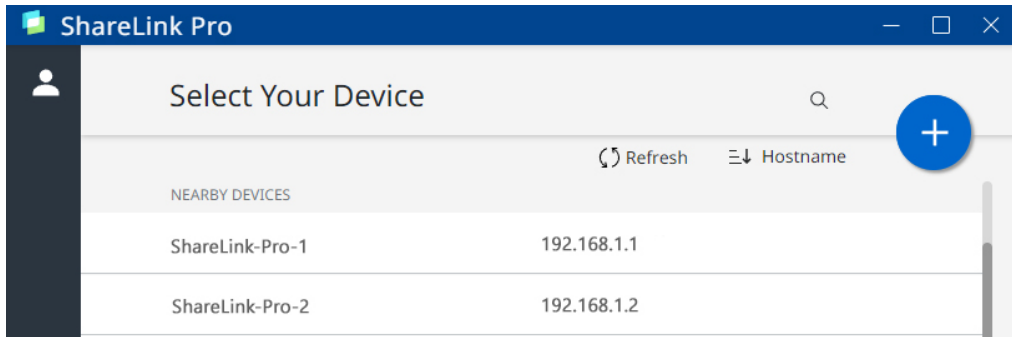


Figure 10. ShareLink Pro Devices List

NOTE:

- The ShareLink Pro software automatically discovers ShareLink Pro units in the same subnet as the client device.
- If your ShareLink Pro unit is not listed, click the refresh button.
- If the device is still not listed, select the add (+) icon. Enter the hostname or IP address as instructed on the app screen.

3. When prompted, enter the login code and click **Connect**.

NOTE: The login code is shown on the standby screen (see [figure 6](#) on page 10).

When connection is established, the Share screen appears (see [figure 11](#) on the next page).

Presenting Content

Use the **Share** screen to present your computer screen on the display device. Select the  button to see the options below.

NOTES:

- This **Share** screen also shows the ongoing presentation.
- Up to four presenters can stream content simultaneously. The ShareLink Pro automatically arranges the incoming presentations side by side on the display.
- A moderator can control the content presented by participants during a session (see [Moderating a Presentation](#) on the next page for details).

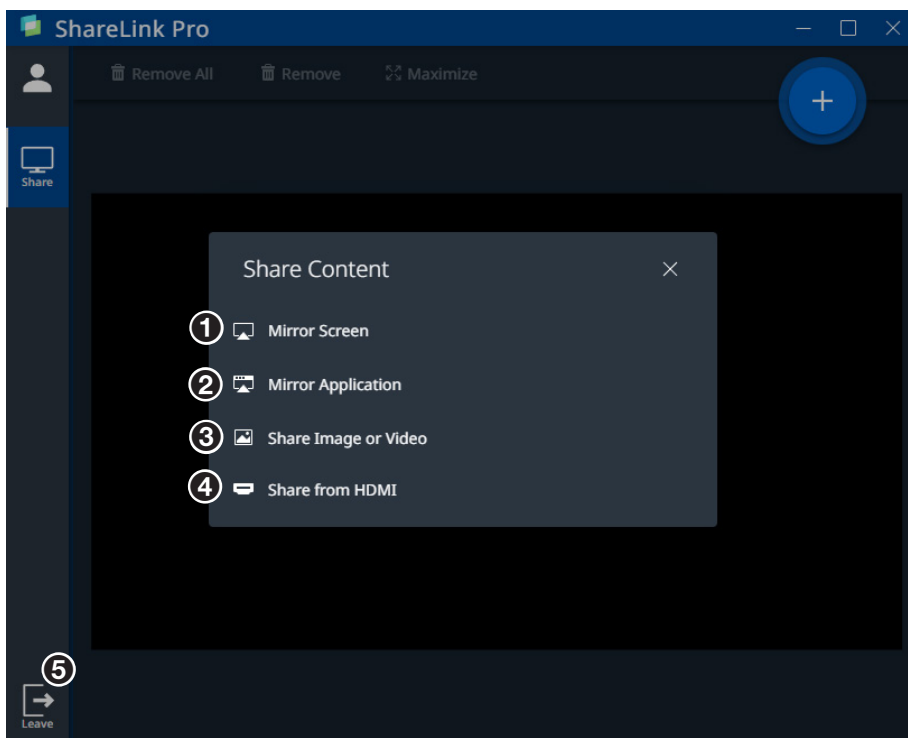


Figure 11. Share Screen

Select from the following presentation options:

NOTES:

- Up to four pieces of content can be displayed simultaneously. The arrangement of content on the screen is determined by the selected layout group in PCS (see [Layout Groups](#) on page 60).
- If two displays are connected to the ShareLink Pro 2500, the content is distributed across the displays according to the dual output display configuration (see [Dual Output Display Configuration](#) on page 59).

- 1 Mirror Screen** — Click this button to automatically mirror your computer screen on the display device.
- 2 Mirror Application** — Click this button to open a sub-menu, showing all the programs and applications currently running on your computer. Select a program or application to automatically mirror it on the display.
- 3 Share Image or Video** — Click this button to navigate to a specific video or image file on your computer. Double-click the video or image file to present it on the display. See the [NOTE](#) on the next page for a list of supported file formats.

- ④ **Share from HDMI** — Click this button to share the connected HDMI source as a window.
- ⑤ **Leave** — Click this button and select **Leave Session** to exit the presentation session.

NOTE:

The following file formats are supported:

- **Image:** BMP, JPG, PNG, TIFF
- **Video:** 264, AVI, M2T, M2TS, M4V, MKV, MOV, MP4, MPG, SDP, TS

The following codecs are supported:

- **Video:** MPEG-2, MPEG4/XviD (Simple Profile), H.264 (Baseline, Main, High, Stereo SEI Profile), VC1 (Simple, Main, Advanced Profile), WEBM VP8, MJPEG VP8 (Mirror Screen feature only)
- **Audio:** AAC-LC (MPEG-2 part 7, MPEG-4 part 3, sub part 4 and part 14, MP4 mono or stereo audio, max 384 kbps)
PCM mono or stereo 16 kHz to 96 kHz, 16-bit to 32-bit
OPUS (Mirror Screen feature only)

Moderating a Presentation

The ShareLink Pro 2500 default collaboration mode (Run-Time mode) allows a user to display content as a participant, or to control the presentation as a moderator. In this mode, everyone in the session starts as a participant, but a user may choose to take over as moderator.

A moderator can accept or decline participants, stop shared content, and remove active participants from a session. Follow the instructions below to moderate a presentation.

NOTE: The following instructions apply only when the ShareLink Pro is set to Run-Time mode (the default setting). Run-Time mode can be disabled via PCS, and changed to either of the following modes:

- Full Control - No limitations to controls or sharing.
- Moderate - Moderator manages access and sharing.

1. Click the participant icon (see figure 12, ①), and select **Moderator** (②) from the menu.

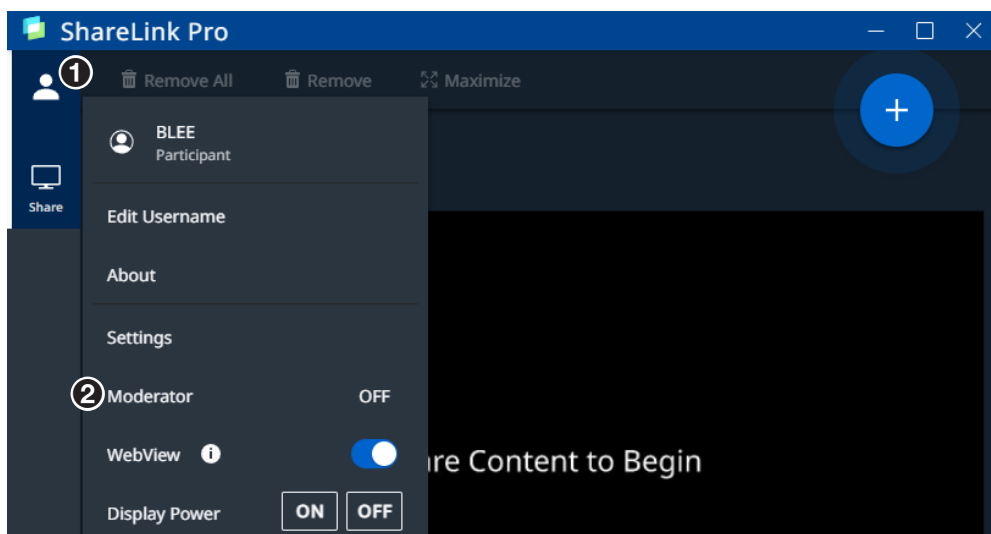


Figure 12. ShareLink Pro Software Menu

2. Click **Enable Moderator**. The Moderate page appears on the software menu as shown below:

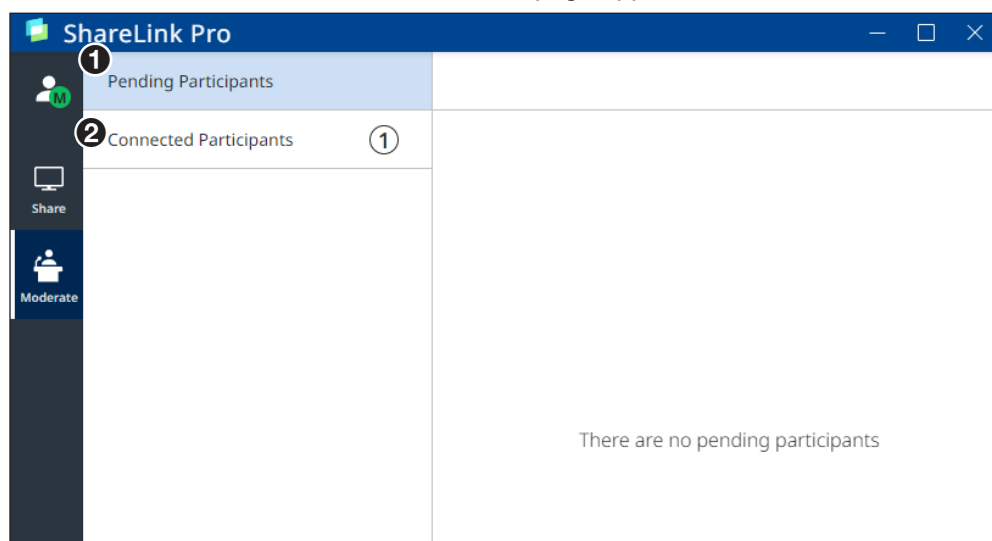


Figure 13. ShareLink Pro Software Moderate Page

- ❶ **Pending Participants tab** — Use this section to manage pending participants.
- ❷ **Connected Participants tab** — Use this section to disconnect any connected participants.

Using the Embedded Web Page

To access the embedded web page, open your web browser and enter the ShareLink Pro IP address into the browser.

NOTE: The IP address is shown on the standby screen (see [figure 6, ②](#) on page 10).

The embedded web page contains the following features:



- ① **View in WebView** — See [Viewing a Presentation Using WebView](#) on the next page.
- ② **WebShare** — See [Presenting a Desktop Using WebShare](#) on the next page.
- ③ **Admin** — See [Using the Admin Page](#) on page 21.

Figure 14. ShareLink Pro Landing Page

NOTE: When selecting an option on the embedded web page:


- If you do not have a trusted SSL Certificate, the browser displays a privacy notification as shown at right.

Continue to the login dialog box as follows:

1. Click the button that bypasses the privacy notification (for example, in Chrome, click **Advanced** [A]). Explanatory text and a link appear.
2. Click **Proceed to <IP address> (unsafe)** (B) (or similar message).

Chrome on macOS may not provide an option to proceed.

- Your IT department can provide an uploadable SSL Certificate (see [Secure Sockets Layer \(SSL\) Certificates](#) on page 95). Once the certificate is loaded, the notification does not appear.

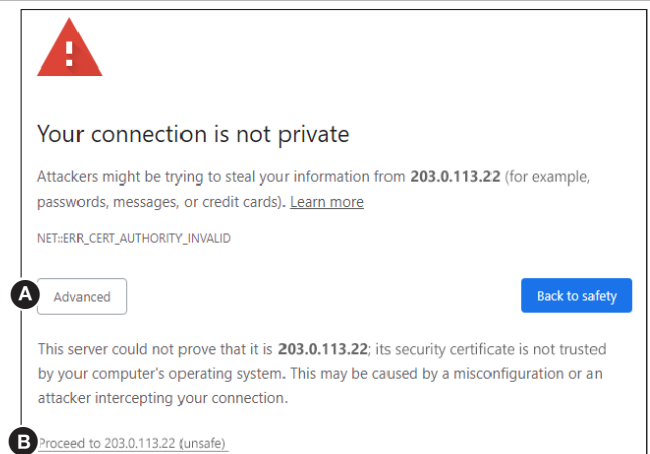

Viewing a Presentation Using WebView

The WebView feature allows audience members to view a presentation on their computers or mobile devices through a web browser. The presenter may broadcast the presentation so that the image shown on the display can be viewed remotely.

NOTE: This feature can be disabled using PCS, or a password requirement can be set for using this feature.

Audience members must follow these steps to watch the presentation:

1. Open a web browser on the computer or mobile device, and enter the IP address of the ShareLink Pro 2500. The landing page opens as shown in [figure 14](#) on the previous page.
2. Click **View in WebView** (see [figure 14](#), ①). The presentation page opens in the web browser.


NOTE: If necessary, enable **WebView** in the ShareLink Pro app (see figure 19, ④ on [page 29](#)).

Presenting a Desktop Using WebShare

The WebShare feature allows users to present a computer desktop without installing the ShareLink Pro software. Follow these steps to present using WebShare:

NOTE: NAT is required if the ShareLink Pro and the client device are on different subnets. Ensure the client device is inside the NAT to either internet or the ShareLink Pro.


1. Open a web browser on the computer or mobile device, and enter the IP address of the ShareLink Pro 2500. The landing page opens as shown in [figure 14](#).
2. Click the **Share** button on the landing page (see [figure 14](#), ②). The login page opens as shown below:

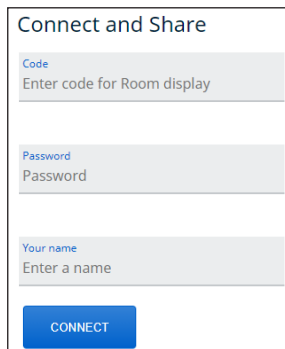

NOTE: The Code and Password fields are shown only if they are enabled in PCS.

3. Enter a name in the Your name field. This name is displayed to the audience during presentation.
4. If required, enter the login code in the Code field (the login code is shown on the standby screen; see [figure 6](#), ③ on page 10), and enter the participant password in the Password field.

5. Select what you would like to share (**Your Entire Screen**, **Application Window**, or **Chrome Tab**).

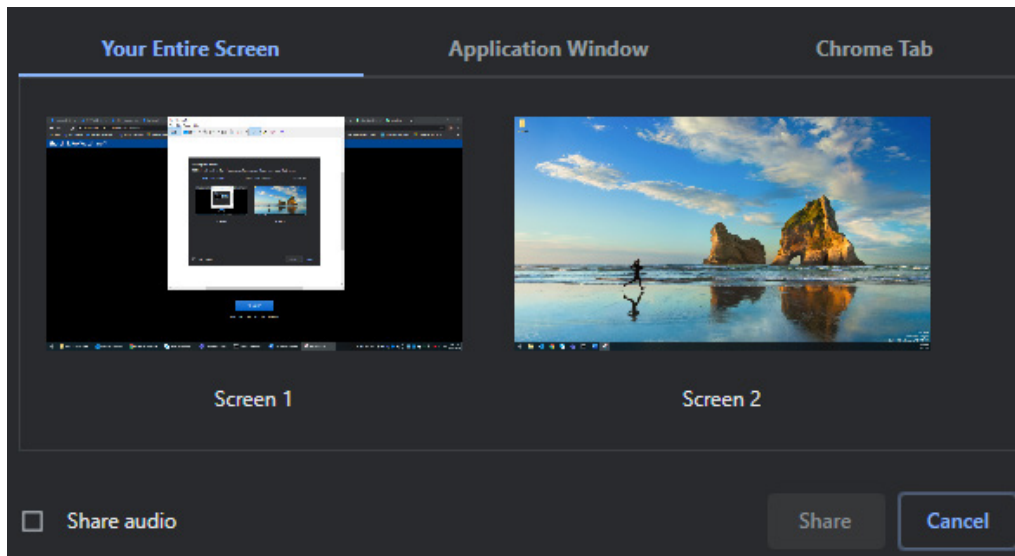

6. Click the **Share** button to start sharing.

NOTE: To share your computer audio, check the **Share audio** checkbox.

Using the Admin Page

To access the ShareLink Pro admin pages:

1. Click the settings icon on the top right corner (see [figure 14](#), ③ on page 18).
2. Enter the user name and password, and click **Login**.
 - Default user name: admin
 - Default password: extron

NOTE: The factory configured password for this device has been set to the device serial number. Passwords are case sensitive. Performing a [Reset to Factory Defaults](#) (see page 7) sets the password to extron.

The admin page contains the following panels:

ShareLink Pro 2500 | ShareLink-Pro admin

Device Utilities

1 Details

Hostname	ShareLink-Pro
Description	Wired and Wireless Presen...
Part Number	60-1970-01
Serial Number	

2 Status

Date and Time	9/24/2024 10:27 AM
Timezone	(UTC-07:00)
Uptime	18 Days 22 Hours
Temperature	99.5°F / 37.5°C

Settings

- 3** Date and Time
- 4** Network
- 5** Firmware
- 6** LinkLicense
- 7** Passwords
- 8** Expo

1 Details

2 Status

3 Date and Time

4 Network

5 Firmware

6 LinkLicense (see next page)

7 Passwords

8 Expo

Figure 15. ShareLink Pro 2500 Admin Page

- 1 Details** — This panel displays the ShareLink Pro device hostname, product description, part number and serial number.
- 2 Status** — This panel displays status information, including date and time, timezone, uptime and temperature.
- 3 Date and Time** — Click **Edit** to change the device time, date, and time zone. Click **Sync to PC** to automatically sync the device to the PC time zone.
- 4 Network** — Click **Edit** to change the device hostname and the network settings (IP address, subnet, and gateway IP address) for the LAN port.
- 5 Firmware** — Use this panel to update the device firmware:
 1. Click **Select File** to browse to the firmware file.

NOTE: The latest firmware file can be downloaded from the Extron website (see [Firmware Download](#) on page 92).

2. Select the firmware file, and click **Update**.

- ⑥ **LinkLicense** (see [figure 15](#) on the previous page) — Use this panel to upload the LinkLicense file to the ShareLink Pro 2500.

NOTE: A LinkLicense unlocks the Expo feature (streaming capability) for the ShareLink Pro 2500. To redeem (activate) a LinkLicense, go to www.extron.com/llredeem and follow the online instructions.

If a LinkLicense has been purchased, upload the file as follows:

- Click **Select File** and browse to the LinkLicense (.e11) file on your computer.
- Select the file, and click **Add** to upload the file.

- ⑦ **Passwords** — Click **Edit** to change any of the following passwords:

NOTE: The factory configured password for all accounts have been set to the device serial number. Passwords are case sensitive. Performing a [Reset to Factory Defaults](#) (see page 7) sets the password to the defaults shown below.

- **Admin password** (default: **extron**) — This password is used for accessing the admin page.
- **Moderator password** (default: **moderate**) — This password is required to moderate a session.
- **Participant password** (default: *no password*) — This password is required to participate in a session.

Enter and confirm the new password, and click **Save**.

- ⑧ **Expo** — Click **Edit** to open the Expo Settings page (see figure 16). Expo mode enables the ShareLink Pro 2500 to display dynamic content as an alternative to the welcome screens (Digital Signage LinkLicense required).

The image shows the 'Expo Settings' interface. At the top, it says 'Expo Settings'. Below that, there are three main sections: 1. 'Lock' with a checkbox that is checked, and a description: 'Locking prevents users from sharing content when expo content is playing.' 2. 'Streaming Channel' with a dropdown menu showing 'Default Channel' and '2 - test', and a text field below it containing 'file:///test'. 3. 'Player Controls' with four icons: a refresh/circular arrow icon, a play button, a pause button, and a stop button.

- a Lock** — Click this checkbox to enable the Lock feature. This prevents users from sharing content when expo content is playing.

- b Streaming Channel** — Click this dropdown list to select the channel that you wish to present.

NOTE: Streaming channels can be added or removed using Extron PCS (see the *ShareLink Pro Help File* in PCS).

- c Player Controls** — Use this panel to play, pause, and stop expo content. Click the repeat button to automatically replay expo content (↺).

Figure 16. Expo Settings

Mirroring a Screen Using the WFA 100 Miracast Adapter

About the WFA 100

The ShareLink Pro WFA 100 (sold separately) is a Wi-Fi Miracast™ adapter that enables anyone to share content from a Windows 10 device to a ShareLink Pro device without installing any software.

NOTE: Minimum requirements for Miracast:

- WFA 100 adapter
- Windows 10 client device (version 2004 or higher recommended)
- Windows Display Driver Model (WDDM) 1.3 Graphics drivers. To verify this driver version, see [Miracast Graphics Support](#) on page 57.
- Wi-Fi driver must support Network Driver Interface Specification (NDIS) 6.3 or newer. To verify, see [Miracast Wi-Fi Direct Support](#) on page 58.

There are two WFA 100 models: the **WFA 100 US** (available for the United States) and the **WFA 100 EU** (for international regions). Both models support 802.11a/b/g/n/ac wireless network standards on 2.4 and 5 GHz bands.

The **WFA 100 US** supports the following Wi-Fi channels:

- 2G channels: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11
- 5G channels: 36, 40, 44, 48, 149, 153, 157, 161, 165

The **WFA 100 EU** supports the following Wi-Fi channels:

- 2G channels: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
- 5G channels: 36, 40, 44, 48

NOTE: For important considerations regarding Miracast performance quality, connection methods, configuration, and troubleshooting see [Miracast Connection Using the WFA 100](#) on page 52.

Using the WFA 100


Follow the steps on the next page to connect and mirror a Windows 10 device using the WFA 100.

NOTES:

- For optimal performance, ensure that the Windows 10 device is on the same network as the ShareLink Pro.
- To improve end user experience, ensure that the enterprise wireless access points serving the Wi-Fi network maintain high signal strengths and are configured to operate on Wi-Fi channels with the least interference (ideally unoccupied and non-overlapping channels).



1. Connect the WFA 100 adapter to the ShareLink Pro front panel USB port (❶).

Display

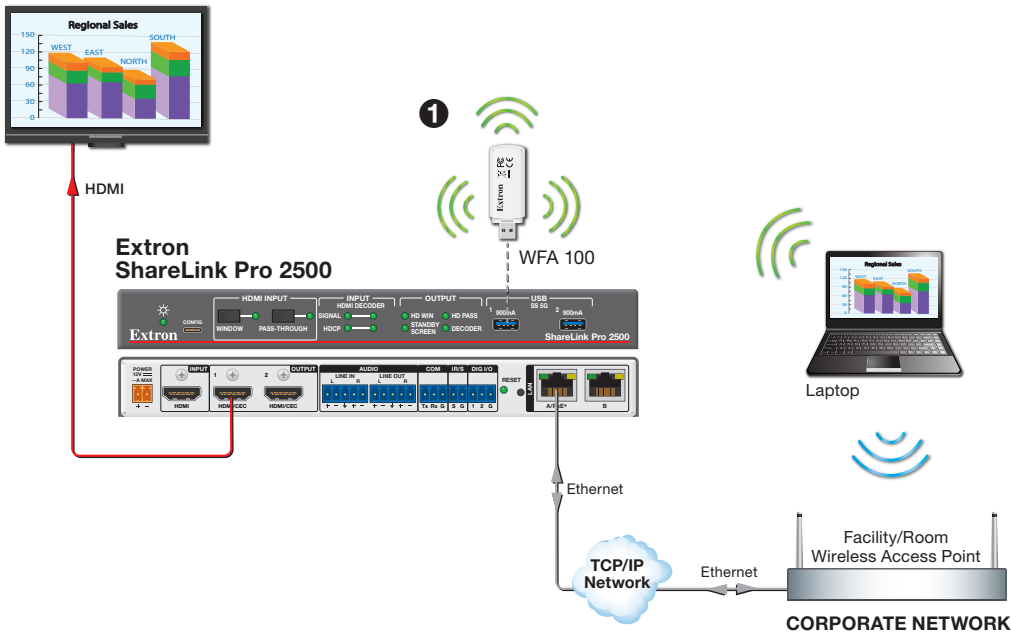

2. Ensure that Wi-Fi is enabled on the Windows 10 client device.
3. Press the <Windows + K> keyboard shortcut on the Windows 10 client device to open the Connect panel, which appears at the right of the screen (❷).


NOTE: Alternatively, click the **Connect** quick settings tile in Action Center (shown below) to open this panel.

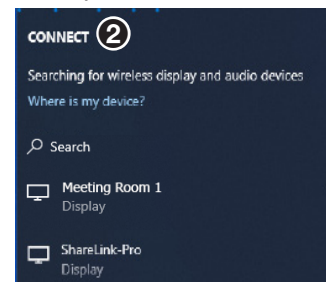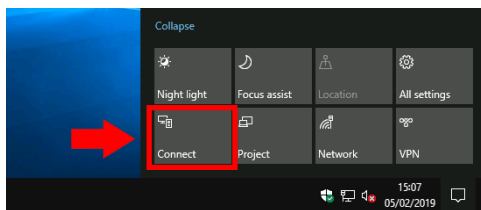

The Connect panel shows a list of Miracast capable devices.


NOTE: Wi-Fi must be enabled in order to discover ShareLink Pro devices.

4. Select the desired Sharelink Pro unit from the list, and enter the display code if prompted (❸) (see the Standby Screen for the ShareLink Pro hostname and code).

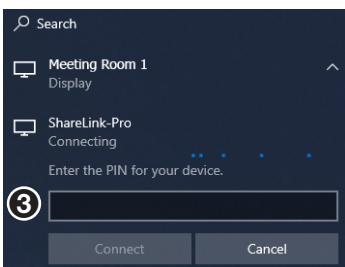


Screen sharing options

 Once the ShareLink Pro is connected, the **Change projection mode** link is shown under the ShareLink Pro hostname.




Click **Change projection mode** to see the following screen sharing options.

- **Duplicate** mode is the default setting, which mirrors the Windows 10 screen onto the ShareLink Pro output display. This mode is ideal for most projection and casting scenarios.
- **Extend** mode sets the ShareLink Pro output display as a second monitor.
- **Second screen only** mode sets the ShareLink Pro output display as the primary monitor.

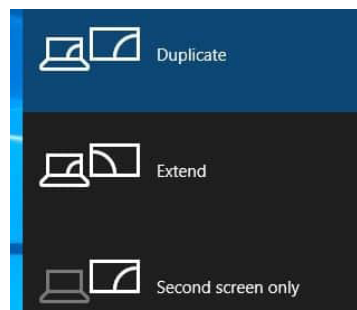


Disconnecting from the display

To **disconnect from the display**, return to the Connect panel (using the <Windows + K> shortcut) and click the **Disconnect (1)** button.

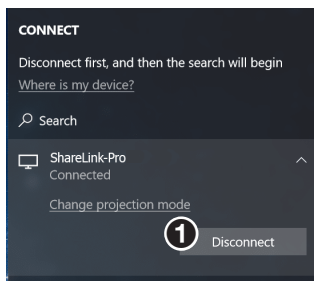

Alternatively, use the <Windows + P> shortcut to open the Project panel. Click **Disconnect** on the sharing status bar at the top of the screen (2) or in the Project panel (3).

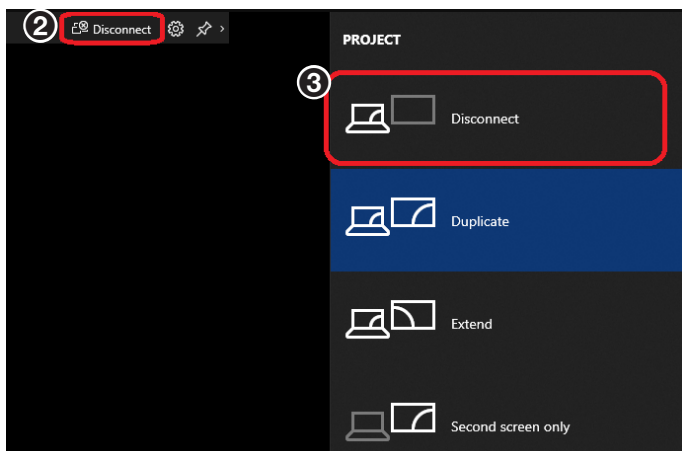

NOTE: For important considerations regarding Miracast performance quality, connection methods, configuration, and troubleshooting see [Miracast Connection Using the WFA 100](#) on page 52.

Operation Using a Mobile Device

The **ShareLink Pro Mobile App** is supported by Android and Apple mobile devices, including iPad® and iPhone®. It allows users to present photos, web pages, device screenshots, and the device camera (see instructions below).

The ShareLink Pro 2500 also supports screen mirroring for Apple devices.

This section covers the following:

- [Downloading the ShareLink Pro App](#)
- [Using the ShareLink Pro App](#)
- [Using iOS Screen Mirroring](#)

Downloading the ShareLink Pro App

Follow these steps to download the ShareLink Pro mobile app:

1. Ensure that the ShareLink Pro is powered and connected to the network.
2. Open the Wi-Fi networks list on your device and connect to an external WAP that is on the same network as the ShareLink Pro. Ensure that the WAP and the ShareLink Pro are wired to the same network.
3. Navigate to the ShareLink Pro landing page (see figure 17) by entering the device IP address into a browser on the mobile device (see the standby screen for the ShareLink Pro IP address).

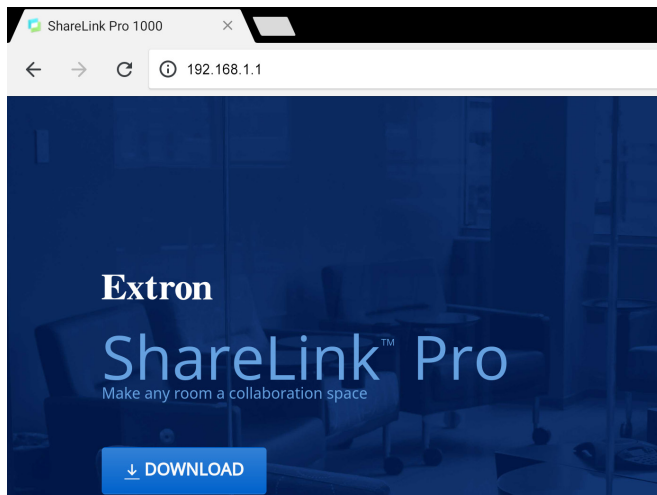


Figure 17. ShareLink Pro Landing Page

4. Select **Download**. The ShareLink Pro app download page opens on the app store for your device.
5. Install the app on your mobile device.

Using the ShareLink Pro App

Connecting to a ShareLink Pro Unit

Once the ShareLink Pro app is installed on the device, follow these steps to connect to the ShareLink Pro:

1. Ensure that the ShareLink Pro is powered and connected to the network.
2. Open the Wi-Fi networks list on your device and connect to an external WAP that is on the same network as the ShareLink Pro. Ensure that the WAP and the ShareLink Pro are wired to the same network.
3. Open the ShareLink Pro app and select the desired unit from the list (see the standby screen to verify the device hostname and IP address).

NOTES:

- The ShareLink Pro app automatically discovers ShareLink Pro units in the same subnet as the client device.
- To refresh, drag down and release the list. If the unit is not listed, select the **New Connection** button at the bottom and enter the hostname or IP address as instructed on the app screen.


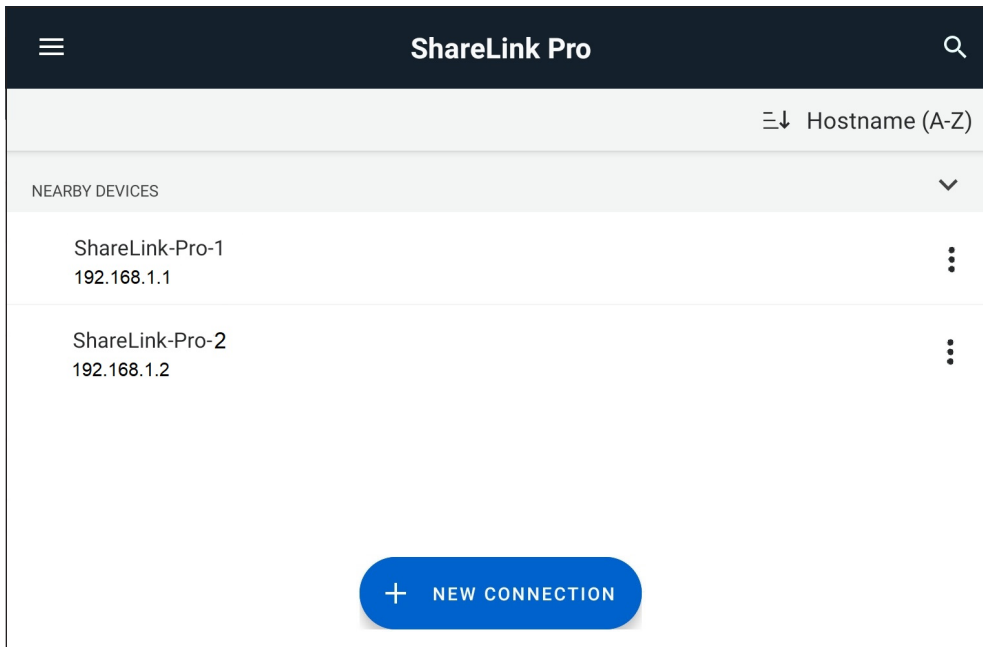


Figure 18. ShareLink Pro Devices List

4. When prompted, enter the login code shown on the standby screen.
5. When connection is established, the app shows the Share screen (see the next page).

Presenting Content

Use the Share screen to present content. Select the  button to see the options below.

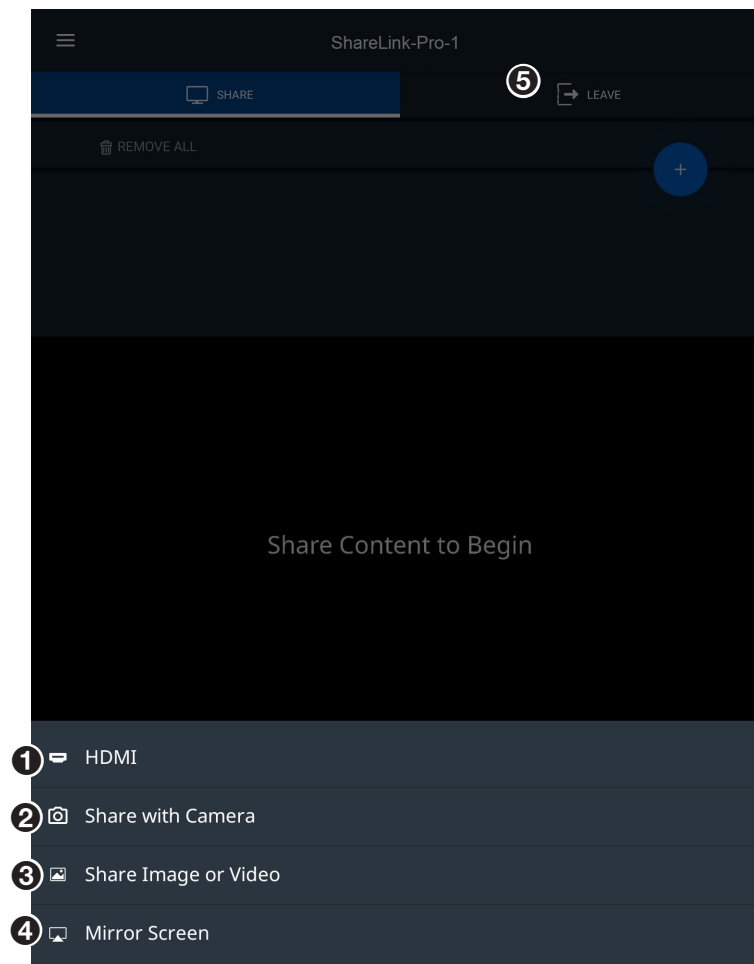

NOTE:

- This **Share** screen also shows the ongoing presentation.
- Up to four presenters can stream content simultaneously. The ShareLink Pro automatically arranges the incoming presentations side by side on the display.
- A moderator can control the content presented by participants during a session (see [Moderating a Presentation](#) on page 16 for details).

1 HDMI – Click this button to share the connected HDMI source as a window.

2 Share with Camera – Click this button to share an image taken by the device camera.

NOTE: For iOS devices, a **Share Website** option is also available to share the device web browser.

3 Share Image or Video – Click this button to browse to a specific video or image file on your device. Select the video or image file to present it on the display.

4 Mirror Screen – Click this button to automatically mirror your device screen on the display device. Select **Stop Presenting** to stop the presentation.

NOTE: For iOS devices, follow the on-screen instructions for mirroring the device screen, or see [Using iOS Screen Mirroring](#) on page 30.

5 Leave – Click this button and select **Leave Session** to exit the presentation session.

App Menu

Press the menu icon on the top left corner to see the following options:

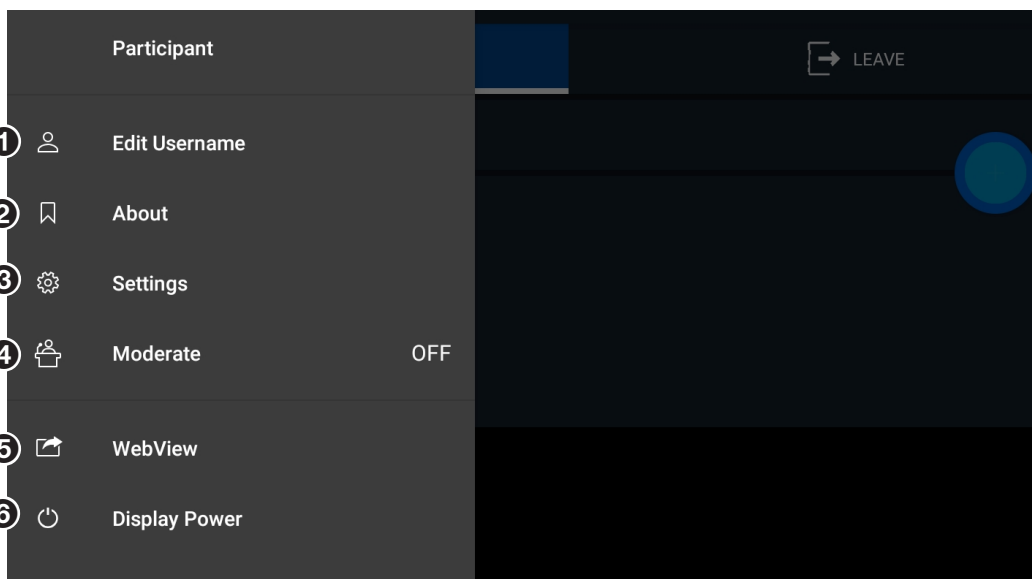


Figure 19. App Menu


- ❶ **Edit Username** — Select this option to edit your Username and Login Settings.
- ❷ **About** — Select this option to see the app version number, Licenses, Terms of Use, and Privacy Policy.
- ❸ **Settings** — Select this option to view login settings and the EDS settings.
- ❹ **Moderate** — Select this option to enable Moderator mode (see [Moderating a Presentation](#) on page 16 for details).
- ❺ **WebView** — Select this option to enable or disable WebView.
- ❻ **Display Power** — This option opens a page with two buttons (**ON** and **OFF**). If the display connected to the output of the ShareLink Pro supports CEC, the **ON** and **OFF** buttons may be used to send out unidirectional Power ON and Power OFF commands to the display via CEC.

Using iOS Screen Mirroring

This feature allows iOS device screens to be mirrored onto the display.

1. Ensure that the ShareLink Pro 2500 is powered and connected to the network.
2. Connect your device to the ShareLink Pro 2500 through Wi-Fi (see step 2 of [Connecting to a ShareLink Pro Unit](#) on page 27).
3. Open the iOS device control center and select **Screen Mirroring** (see ❶, below).

NOTE: Options may look different depending on the iOS version.

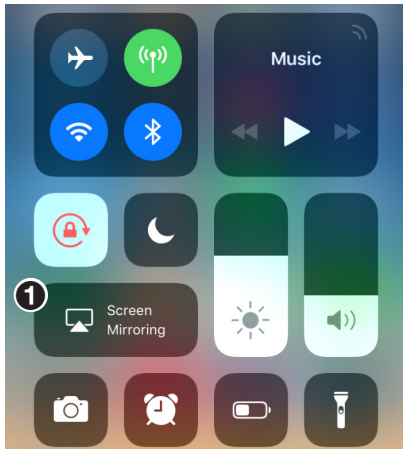


The discovered devices list appears as shown at right.

4. Select your ShareLink Pro device from the discovered devices list.


NOTE: If your ShareLink Pro device is not listed because it is on a different subnet, follow the instructions on the next page.

If prompted for a code (as shown below), enter the ShareLink Pro login code (as shown on the standby screen), and press **OK**.

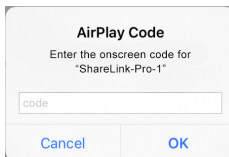

The device screen is immediately mirrored onto the display.

To stop presenting the device screen, select **Stop Mirroring** (see ❷, below).

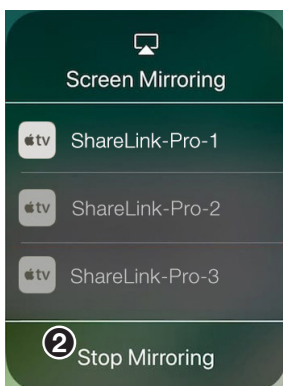


Discovering a ShareLink Pro Device on a Different Subnet for Apple Screen Mirroring

The ShareLink Pro for iOS mobile app automatically discovers ShareLink Pro devices that are on the same subnet as the iOS device.


If your ShareLink Pro device is not on the same subnet, follow these steps to discover the device using the app.

NOTE: The same steps apply to macOS devices using the ShareLink Pro macOS software.

1. Open ShareLink Pro for iOS mobile app.
2. Select the **New Connection** button at the bottom.

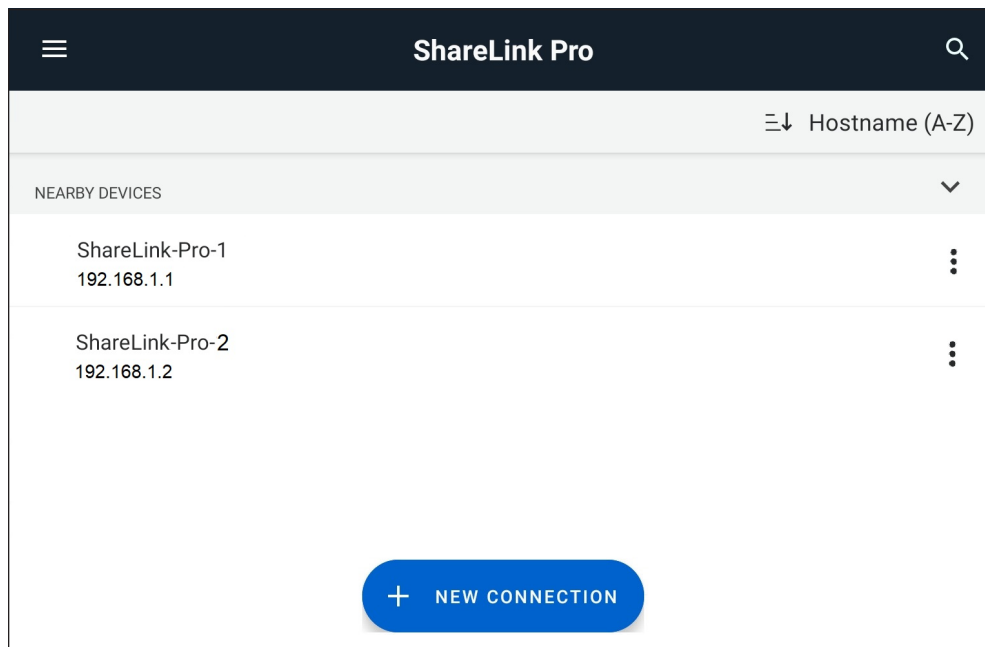


3. Enter the IP address or hostname of the ShareLink Pro device that is outside the local subnet.

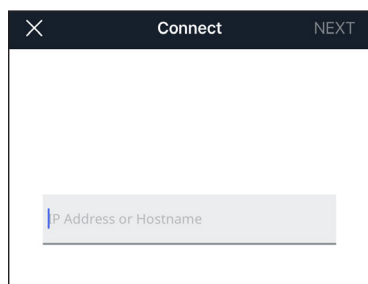

4. Enter a password if prompted.
5. Enter confirmation if prompted.

6. Once the connection has been successfully established and the main sharing page is shown:
- **For iOS devices:** Go to the Control Center and navigate to the Screen Mirroring device discovery list (see [step 3](#) on the previous page).
 - **For macOS devices:** Click the **AirPlay** button in the menu bar as shown below.

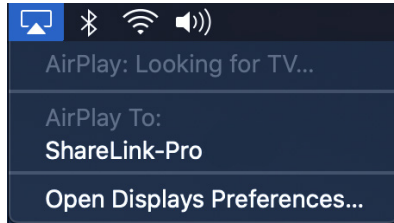

7. Select the ShareLink Pro device from the device discovery list (see [step 4](#) on the previous page).

Enterprise Discovery Service

This section covers the following topics on the ShareLink Pro Enterprise Discovery Service:

- [Enterprise Discovery Service - Overview](#)
- [Selecting and Configuring the EDS Host](#)
- [Configuring EDS Clients in PCS](#)
- [Airplay Device Discovery](#)
- [Alternative \(non-EDS\) Configuration for a Wireless Subnet](#)

Enterprise Discovery Service - Overview

Enterprise Discovery Service (EDS) is useful in applications involving multiple ShareLink Pro units within a network.

EDS offers a solution for discovery of ShareLink Pro devices across subnets for the ShareLink Pro software (Windows, macOS, iOS, and Android) as well as for Apple devices (macOS and iOS) that support native screen mirroring (AirPlay). Furthermore, EDS reduces the number of steps required for connecting to a ShareLink Pro device via the ShareLink Pro software (Windows, macOS, iOS, and Android).

EDS requires a host device (called the "EDS Host") and multiple client devices (called "EDS Clients"):

- The **EDS Host** is a ShareLink Pro device designated to operate as the host. This can be any ShareLink Pro device on any subnet deployed on the network. EDS Host functionality is enabled via PCS.

NOTES:

- Enabling EDS Host functionality does not render the ShareLink Pro device non-operational. The ShareLink Pro operates as normal, but with an additional background service running in firmware.
 - When selecting an EDS Host device, Extron recommends selecting a ShareLink Pro device where video performance is not critical. Video performance is inversely proportional to the number of EDS Client devices being managed by the EDS Host device.
- **EDS Clients** are ShareLink Pro devices managed by the ShareLink Pro device operating as the EDS Host. EDS Clients may also be end user mobile devices running ShareLink Pro software (Windows, macOS, iOS, and Android).

Once enabled, the EDS Host operates as a central communication hub between multiple ShareLink Pro devices deployed across multiple subnets across the entire network, as well as between end user mobile devices (phones, tablets, laptops, desktops, etc.) and ShareLink Pro devices on the network.

How EDS Works

Configuring the EDS Host "Pointer"

Once the EDS Host device has been selected and EDS Host functionality enabled, all other ShareLink Pro devices must be configured as EDS Clients via PCS.

Once a ShareLink Pro device has been configured as an EDS Client, it begins to "look for" the EDS Host by using the "pointer" configured via PCS. **The "pointer" is either the hostname or IP address of the EDS Host device.**

The default hostname for the EDS Host device is ExtronEDS. When the EDS Host function is enabled for the first time on a ShareLink Pro device, PCS asks for permission to change the ShareLink Pro device hostname to ExtronEDS. The purpose is to ease and streamline configuration of EDS.

- When a ShareLink Pro device is configured as an EDS Client device, the default "pointer" is ExtronEDS. In other words, all ShareLink Pro devices "look for" the EDS Host via DNS lookup using the default hostname of the EDS Host device which is ExtronEDS by default.
- The latest ShareLink Pro software (Windows, macOS, iOS, and Android), which supports EDS, always operates as an EDS Client and always looks for the EDS Host device via DNS lookup using the default hostname of the EDS Host device (ExtronEDS).

NOTES:


- It is not mandatory to use ExtronEDS as the hostname of the EDS Host device. However, it is highly encouraged since the ShareLink Pro devices and mobile devices running ShareLink Pro software look for the EDS Host device by trying to resolve the hostname ExtronEDS via DNS lookup by default.
- The PCS admin may choose to operate the EDS Host device with any hostname they desire. However, they must configure (via PCS) all other ShareLink Pro devices operating as EDS Clients to point to the EDS Host using the desired hostname of the EDS Host. The mass configuration update feature in PCS may be useful in this case.
- For mobile devices running ShareLink Pro software (Windows, macOS, iOS, and Android), the end user must manually connect to a ShareLink Pro device that has already been configured with the correct pointer (different from ExtronEDS) to the EDS Host. Once a successful connection has been made manually the first time, the ShareLink Pro software automatically updates its pointer to match the pointer in the ShareLink Pro device to which they just connected manually. Therefore, the next time the ShareLink Pro software is opened, it will point to the correct EDS Host and present the end user with the new EDS workflow.

EDS Workflow

Once the correct pointer has been configured:

- ShareLink Pro devices operating as EDS Clients establish a secure communication channel with the EDS Host device and report their connection information to the EDS Host. The EDS Client device also periodically sends a request to the EDS Host to assign it a new Login Code based on a timer configured via PCS or at the end of every session (also configured via PCS).
- The EDS Host device stores the connection information and associated Login Code for each EDS Client device in an internal database.
 - Mobile devices operating as EDS Clients (by running ShareLink Pro software) establish a secure communication channel with the EDS Host device.
 - The client devices then present one of two different connection workflows (as instructed by the EDS Host) to the end user.

NOTE: The connection workflow is configured as a setting on the EDS Host device via PCS as shown below (1) (also see [step 4](#) on the next page).

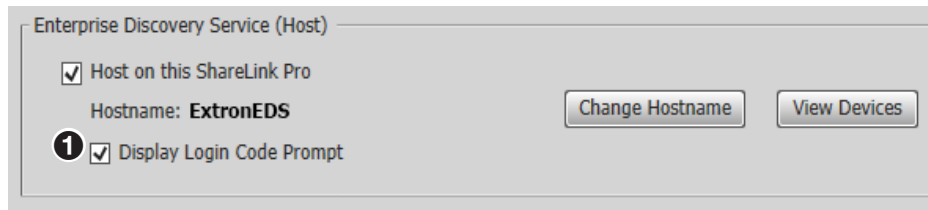

Enterprise Discovery Service (Host)

☒ Host on this ShareLink Pro
Hostname: **ExtronEDS** Change Hostname View Devices

1 ☒ Display Login Code Prompt

When this box is checked, **connection workflow 1** is configured.

When it is un-checked, **connection workflow 2** is configured.

The connection workflows are as follows:

- **Connection Workflow 1** – Prompts the end user for the Login Code displayed on the output of the ShareLink Pro to which they want to connect. The EDS Client (mobile device running ShareLink Pro software) then passes the Login Code entered by the end user to the EDS Host device. The EDS Host then responds with the connection information of the ShareLink Pro device associated with the received Login Code in its internal database.

This workflow effectively reduces the connection workflow to one simple step (enter Login Code) for the end user.

- **Connection Workflow 2** – Proceed directly to the main device discovery page as usual but populate the page with the list of devices stored in the EDS Host's internal database in addition to any devices discovered in the local subnet and any previously manually added devices.

In this case, the EDS Host provides a copy of its internal database to the mobile device running ShareLink Pro software.

This workflow offers a cross-subnet device discovery solution in applications where it is preferred to operate without a Login Code or for users that prefer the traditional device discovery workflow. In other words, the end user is no longer restricted to being able to discover ShareLink Pro devices only on the local subnet.

NOTE: This is a global setting, meaning that the EDS Host instructs all mobile devices operating as EDS Clients to either prompt end user for Login Code (workflow 1) or to proceed directly to the device discovery page (workflow 2).

Selecting and Configuring the EDS Host

EDS can be enabled using the Product Configuration Software (PCS).


A ShareLink Pro unit must be selected to act as the EDS Host within the network. The ShareLink Pro unit hosting the Enterprise Discovery Service acts as a central communication hub between client devices (such as phones, tablets, and laptops) and the ShareLink Pro devices on the network.

NOTE: Depending on how many client devices are connected, EDS may affect the audio and video performance of the ShareLink Pro device acting as the EDS Host. This should be taken into consideration when selecting the EDS Host device.

Configuring the EDS Host in PCS

Follow these steps to enable EDS on the host device using PCS.

1. Open PCS v4.10.5 or greater.
2. Connect to the ShareLink Pro unit to be assigned as the EDS Host.
3. Navigate to **General Settings > Display Setup** tab.
4. Click the **Host on this ShareLink Pro** checkbox in the Enterprise Discovery Service panel.

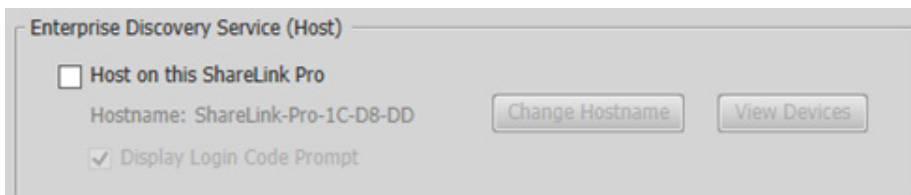

5. Click OK:



Configuring EDS Clients in PCS

Enabling EDS in Client Devices

Follow these steps to enable EDS for client devices. Repeat these steps for each ShareLink Pro unit to be assigned as an EDS Client within the network, including the EDS Host.

NOTE: The ShareLink Pro device operating as the EDS Host can also operate as an EDS Client. In this case, it is operating as a client of itself. This is possible since the EDS Host function operates independently in firmware.

1. Open PCS v4.10.5 or greater.
2. Connect to the ShareLink Pro to be assigned as an EDS Client.
3. Navigate to **General Settings > Display Setup** tab.
4. Click the **Enterprise Discovery Service** radio button in the Confirmation Type panel.

Confirmation Type

☐ No Code - No code required to login to session

☐ Fixed - Enter a valid code that will not change between sessions.
Confirmation Code: ⓘ

☐ Random - Code is randomized and changes.
• End of each session
☐ Timer: minutes (1 - 9998)

☒ Enterprise Discovery Service (Client) - Code is assigned by the EDS and changes.
• End of each session
☐ Timer: minutes (1 - 9998)

EDS Server: ⓘ

Status
Connected

NOTE: If an EDS Client is failing to connect to the EDS Host, change the client's confirmation type to **No Code** for a minute before switching it back to **Enterprise Discovery Service**. If the connection issue persists, then power cycle the EDS Client.

The hostname (displayed in the EDS Server field) is set to ExtronEDS by default.

NOTES:


- It is highly recommended that the default hostname (ExtronEDS) not be changed. By default, ShareLink Pro units are configured to look for the ExtronEDS hostname.
- If the hostname is changed, all other ShareLink Pro units within the network will need to be configured to look for the newly assigned hostname (see step 5).

5. **Only perform this step if you chose to change the default EDS hostname:** Enter the new hostname or the IP address of the EDS Host in the EDS Server field.
6. Repeat steps 1 - 5 on all other ShareLink Pro units in the network to configure them as EDS Clients. If you changed the default EDS hostname, enter the new hostname.

Managing Login Code Settings for EDS Clients

Follow these steps to configure the login code settings for client devices (this configuration is done on the EDS Host via PCS).

1. Open PCS v4.10.5 or greater.
2. Connect to the ShareLink Pro assigned as the EDS Host.
3. Navigate to **General Settings > Display Setup** tab.
4. Click **View Devices** (1) in the Enterprise Discovery Service panel.

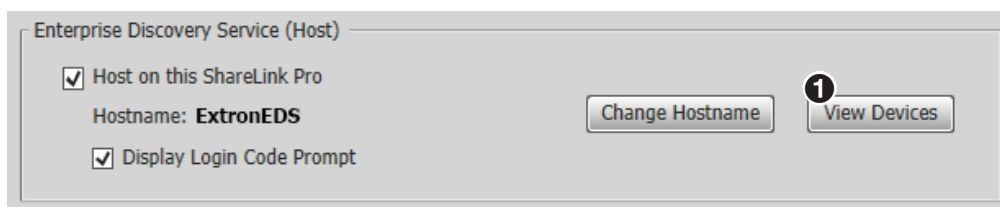


This opens a list of all ShareLink Pro devices operating as EDS Clients (reporting to the EDS Host):

☐	Status	Hostname	Code Setting	Login Code	IP Address A	IP Address B	Advertise Airplay	
☐	✓	SLP-MeetingRoom-A	None	-	0.0.0.0	192.168.254.231	☐	Manage
☐	✓	SLP-MeetingRoom-B	Random	0277	0.0.0.0	192.168.254.232	☐	Manage
☐	✓	SLP-MeetingRoom-C	Random	9552	0.0.0.0	192.168.254.233	☐	Manage
☐	✓	SLP-Huddle-1	Random	5710	156.114.210.34	113.20.41.1	☐	Manage
☐	✓	SLP-Huddle-2	Fixed	2743	156.114.210.35	113.20.41.2	☐	Manage
☐	✓	SLP-Classroom-1	Random	4755	170.120.45.11	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-2	Fixed	8612	170.120.45.12	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-3	None	-	170.120.45.13	0.0.0.0	☐	Manage
☐	✓	ExtronEDS	Fixed	1243	170.120.45.14	156.114.210.30	☐	Manage

5. Use the Code Setting drop-down list in each row to configure the code setting (**None**, **Fixed**, or **Random**) for each EDS Client as desired.

To configure all EDS Clients to operate with the same Code Setting: Check the top left checkbox to select all devices, then use the **Set Code** drop-down list at the top to configure the Code Setting for all EDS Clients at once.

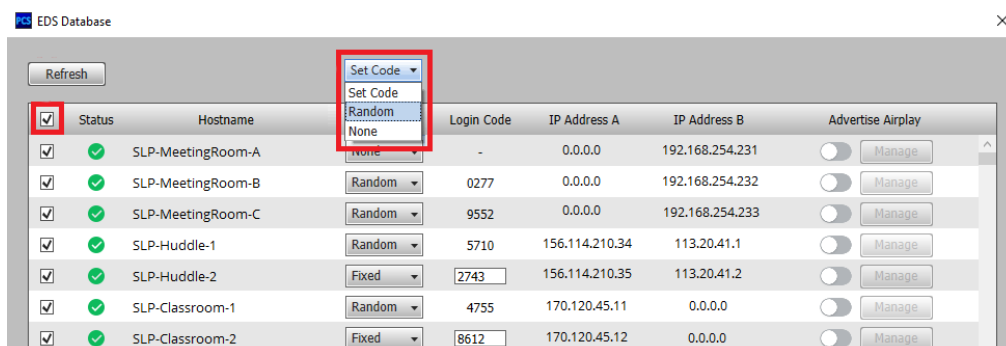

Airplay Device Discovery via EDS

Airplay Device Discovery – Overview

EDS offers a cross-subnet discovery solution for AirPlay (iOS and macOS) devices.

When operating as an EDS Client, the ShareLink Pro can advertise the AirPlay Service of ShareLink Pro devices on different subnets to iOS and macOS devices within its own subnet. The ability to advertise the AirPlay Service can be configured for each client and for specific LAN ports (LAN A or LAN B). This is configured through the EDS Host in PCS.

Within its internal database, the EDS Host stores all details needed to advertise each EDS Client's AirPlay Service (for each EDS Client device reporting to it).

The EDS Host can task any EDS Client to advertise AirPlay Service for any number of other EDS Clients. Therefore, an administrator can choose one ShareLink Pro in each subnet to advertise (within its own subnet) the AirPlay Service of any number of other ShareLink Pro devices deployed in however many other subnets.

Network Configuration for Airplay Device Discovery


The following page shows an example of a network configured for Airplay device discovery. The sections that follow show how to configure the ShareLink Pro devices in this example. Apply these steps to configure the devices in your network for Airplay device discovery.

Use Case (Example)

Five subnets have been configured by the administrator (as shown in the diagram below):

- Three subnets on the PRIVATE NETWORK
- Two subnets on the PUBLIC NETWORK

The following page provides the configuration details for this example.

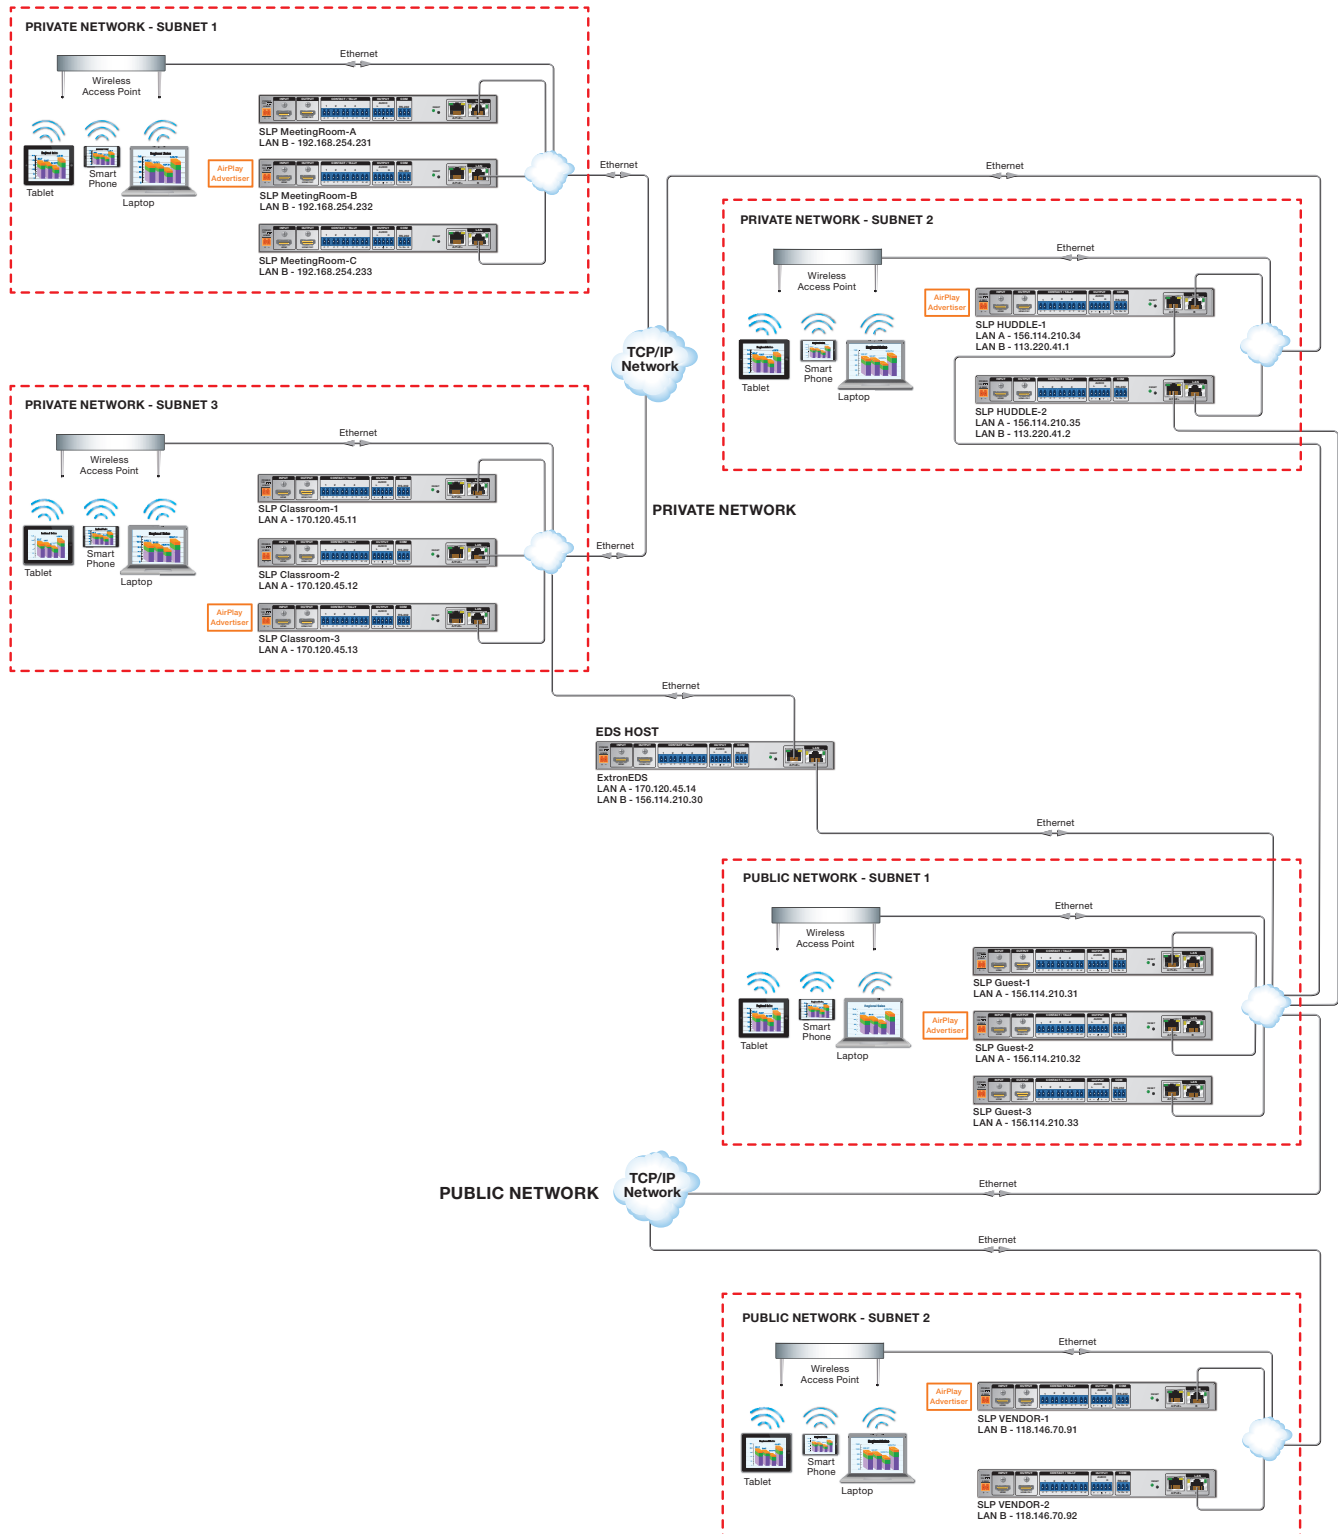

Within each subnet, ShareLink Pro devices have been deployed as shown in the table below. One ShareLink Pro device in each subnet has been selected to operate as the AirPlay advertiser for that particular subnet.

Subnet	Hostname	LAN A - IP Address	LAN B - IP Address	Airplay Advertiser
PRIVATE Subnet #1	SLP-MeetingRoom-A		192.168.254.231	YES
	SLP-MeetingRoom-B		192.168.254.232	
	SLP-MeetingRoom-C		192.168.254.233	
PRIVATE Subnet #2/ PUBLIC Subnet #1	SLP-Huddle-1	156.114.210.34	113.20.41.1	YES
	SLP-Huddle-2	156.114.210.35	113.20.41.2	
PRIVATE Subnet #3	SLP-Classroom-1	170.120.45.11		YES
	SLP-Classroom-2	170.120.45.12		
	SLP-Classroom-3	170.120.45.13		
<i>PRIVATE Subnet #3/ PUBLIC Subnet #1</i>	ExtronEDS	170.120.45.14	156.114.210.30	
PUBLIC Subnet #1	SLP-GUEST-1	156.114.210.31		YES
	SLP-GUEST-2	156.114.210.32		
	SLP-GUEST-3	156.114.210.33		
PUBLIC Subnet #2	SLP-VENDOR-1		118.146.70.91	YES
	SLP-VENDOR-2		118.146.70.92	


To accommodate both PRIVATE and PUBLIC subnets, a ShareLink Pro 2000 or 2500 device that is connected to both PRIVATE and PUBLIC subnets has been selected as the EDS Host. In this case, the ShareLink Pro device connected to both PRIVATE Subnet #3 and PUBLIC Subnet #1 has been selected, and the hostname has been updated to ExtronEDS via PCS.

All other ShareLink Pro devices in all other subnets have been configured to operate as EDS Clients.

Configuring AirPlay Device Discovery in PCS

Follow these steps to configure the above example ShareLink Pro deployment (this configuration is done through the EDS Host via PCS).

1. Open PCS v4.8.3 or greater.
2. Connect to the ShareLink Pro assigned as the EDS Host.
3. Navigate to **General Settings > Display Setup** tab.
4. Click **View Devices** (1) in the Enterprise Discovery Service panel.

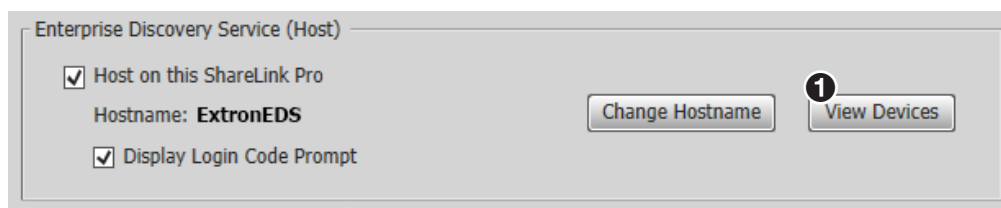

This opens a list of all ShareLink Pro devices operating as EDS Clients (reporting to the EDS Host):

5. Click the **Advertise AirPlay** enable/disable slider (1) for SLP-MeetingRoom-B.

EDS Database

Refresh Set Code

☐	Status	Hostname	Code Setting	Login Code	IP Address A	IP Address B	Advertise Airplay	
☐	✓	SLP-MeetingRoom-A	None	-	0.0.0.0	192.168.254.231	☐	Manage
☐	✓	SLP-MeetingRoom-B	Random	0277	0.0.0.0	192.168.254.232	☒	Manage
☐	✓	SLP-MeetingRoom-C	Random	9552	0.0.0.0	192.168.254.233	☐	Manage
☐	✓	SLP-Huddle-1	Random	5710	156.114.210.34	113.20.41.1	☐	Manage
☐	✓	SLP-Huddle-2	Fixed	2743	156.114.210.35	113.20.41.2	☐	Manage
☐	✓	SLP-Classroom-1	Random	4755	170.120.45.11	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-2	Fixed	8612	170.120.45.12	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-3	None	-	170.120.45.13	0.0.0.0	☐	Manage
☐	✓	ExtronEDS	Fixed	1243	170.120.45.14	156.114.210.30	☐	Manage
☐	✓	SLP-GUEST-1	Random	4747	156.114.210.31	0.0.0.0	☐	Manage
☐	✓	SLP-GUEST-2	Fixed	5543	156.114.210.32	0.0.0.0	☐	Manage
☐	✓	SLP-GUEST-3	Random	1255	156.114.210.33	0.0.0.0	☐	Manage
☐	✓	SLP-VENDOR-1	Fixed	8686	0.0.0.0	118.146.70.91	☐	Manage
☐	✓	SLP-VENDOR-2	None	-	0.0.0.0	118.146.70.92	☐	Manage

6. Click on the **LAN B** tab (see ② at right).

NOTE: LAN B is chosen because it is the LAN port connected to PRIVATE Subnet #1.

7. Click the **Enable** checkbox (③) to enable AirPlay advertisement functionality on LAN B.
8. Select the appropriate LAN port (④) for each ShareLink Pro device in every other subnet (excluding Subnet #1) on the PRIVATE NETWORK. The appropriate LAN port is the port on the ShareLink Pro device that connects it to the PRIVATE NETWORK via its own subnet.
9. Click the Advertise AirPlay enable/disable slider switch for SLP-Huddle-1 (①).

EDS AirPlay Proxy - SLP-MeetingRoom-B

LAN A LAN B ②

③ Airplay Advertiser

☒ Enable LAN B (192.168.254.232) to advertise Airplay

Select devices to advertise.

Hostname	LAN A	LAN B
SLP-MeetingRoom-A	☐	☐
SLP-MeetingRoom-C	☐	☐
SLP-Huddle-1	☐	☒ ④
SLP-Huddle-2	☐	☐
SLP-Classroom-1	☒	☐
SLP-Classroom-2	☒	☐
SLP-Classroom-3	☒	☐
ExtronEDS	☒	☐
SLP-GUEST-1	☐	☐
SLP-GUEST-2	☐	☐
SLP-GUEST-3	☐	☐
SLP-VENDOR-1	☐	☐
SLP-VENDOR-2	☐	☐

EDS Database

Refresh Set Code

☐	Status	Hostname	Code Setting	Login Code	IP Address A	IP Address B	Advertise Airplay	
☐	✓	SLP-MeetingRoom-A	None	-	0.0.0.0	192.168.254.231	☐	Manage
☐	✓	SLP-MeetingRoom-B	Random	0277	0.0.0.0	192.168.254.232	☒	Manage
☐	✓	SLP-MeetingRoom-C	Random	9552	0.0.0.0	192.168.254.233	☐	Manage
☐	✓	SLP-Huddle-1	Random	5710	156.114.210.34	113.20.41.1	☒	Manage
☐	✓	SLP-Huddle-2	Fixed	2743	156.114.210.35	113.20.41.2	☐	Manage
☐	✓	SLP-Classroom-1	Random	4755	170.120.45.11	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-2	Fixed	8612	170.120.45.12	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-3	None	-	170.120.45.13	0.0.0.0	☐	Manage
☐	✓	ExtronEDS	Fixed	1243	170.120.45.14	156.114.210.30	☐	Manage
☐	✓	SLP-GUEST-1	Random	4747	156.114.210.31	0.0.0.0	☐	Manage
☐	✓	SLP-GUEST-2	Fixed	5543	156.114.210.32	0.0.0.0	☐	Manage
☐	✓	SLP-GUEST-3	Random	1255	156.114.210.33	0.0.0.0	☐	Manage
☐	✓	SLP-VENDOR-1	Fixed	8686	0.0.0.0	118.146.70.91	☐	Manage
☐	✓	SLP-VENDOR-2	None	-	0.0.0.0	118.146.70.92	☐	Manage

10. Click on the LAN B tab (2).

NOTE: LAN B is chosen because it is the LAN port connected to PRIVATE Subnet #2.

11. Click the **Enable** checkbox (3) to enable AirPlay advertisement functionality on LAN B.
12. Select the appropriate LAN port (4) for each ShareLink Pro device in every other subnet (excluding Subnet #2) on the PRIVATE NETWORK. The appropriate LAN port is the port on the ShareLink Pro device that connects it to the PRIVATE NETWORK via its own subnet.
13. Click the Advertise AirPlay enable/disable slider switch for SLP-Classroom-3 (1).

EDS AirPlay Proxy - SLP-Huddle-1

LAN A LAN B (2)

(3) ☒ Enable LAN B (113.20.41.1) to advertise Airplay

Select devices to advertise.

Hostname	LAN A	LAN B
SLP-MeetingRoom-A	☐	☒
SLP-MeetingRoom-B	☐	☒
SLP-MeetingRoom-C	☐	☒
SLP-Huddle-2	☐	☐
SLP-Classroom-1	☒	☐
SLP-Classroom-2	☒	☐
SLP-Classroom-3	☒	☐
ExtronEDS	☒	☐
SLP-GUEST-1	☐	☐
SLP-GUEST-2	☐	☐
SLP-GUEST-3	☐	☐
SLP-VENDOR-1	☐	☐
SLP-VENDOR-2	☐	☐

EDS Database

Refresh Set Code

☐	Status	Hostname	Code Setting	Login Code	IP Address A	IP Address B	Advertise Airplay	
☐	✓	SLP-MeetingRoom-A	None	-	0.0.0.0	192.168.254.231	☐	Manage
☐	✓	SLP-MeetingRoom-B	Random	0277	0.0.0.0	192.168.254.232	☒	Manage
☐	✓	SLP-MeetingRoom-C	Random	9552	0.0.0.0	192.168.254.233	☐	Manage
☐	✓	SLP-Huddle-1	Random	5710	156.114.210.34	113.20.41.1	☒	Manage
☐	✓	SLP-Huddle-2	Fixed	2743	156.114.210.35	113.20.41.2	☐	Manage
☐	✓	SLP-Classroom-1	Random	4755	170.120.45.11	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-2	Fixed	8612	170.120.45.12	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-3	None	-	170.120.45.13	0.0.0.0	☒	Manage
☐	✓	ExtronEDS	Fixed	1243	170.120.45.14	156.114.210.30	☐	Manage
☐	✓	SLP-GUEST-1	Random	4747	156.114.210.31	0.0.0.0	☐	Manage
☐	✓	SLP-GUEST-2	Fixed	5543	156.114.210.32	0.0.0.0	☐	Manage
☐	✓	SLP-GUEST-3	Random	1255	156.114.210.33	0.0.0.0	☐	Manage
☐	✓	SLP-VENDOR-1	Fixed	8686	0.0.0.0	118.146.70.91	☐	Manage
☐	✓	SLP-VENDOR-2	None	-	0.0.0.0	118.146.70.92	☐	Manage

14. Click the **Enable** checkbox (2) to enable AirPlay advertisement functionality on LAN A.
15. Select the appropriate LAN port (3) for each ShareLink Pro device in every other subnet (excluding Subnet #3) on the PRIVATE NETWORK. The appropriate LAN port is the port on the ShareLink Pro device that connects it to the PRIVATE NETWORK via its own subnet.
16. Click the Advertise AirPlay enable/disable slider switch for SLP-GUEST-2 (1).

EDS AirPlay Proxy - SLP-Classroom-3

LAN A LAN B

Airplay Advertiser

☒ Enable LAN A (170.120.45.13) to advertise Airplay

Select devices to advertise.

Hostname	LAN A	LAN B
SLP-MeetingRoom-A	☐	☒
SLP-MeetingRoom-B	☐	☒
SLP-MeetingRoom-C	☐	☒
SLP-Huddle-1	☐	☒
SLP-Huddle-2	☐	☒
SLP-Classroom-1	☐	☐
SLP-Classroom-2	☐	☐
ExtronEDS	☐	☐
SLP-GUEST-1	☐	☐
SLP-GUEST-2	☐	☐
SLP-GUEST-3	☐	☐
SLP-VENDOR-1	☐	☐
SLP-VENDOR-2	☐	☐

EDS Database						
Refresh		Set Code				
☐	Status	Hostname	Code Setting	Login Code	IP Address A	IP Address B
☐	✓	SLP-MeetingRoom-A	None	-	0.0.0.0	192.168.254.231
☐	✓	SLP-MeetingRoom-B	Random	0277	0.0.0.0	192.168.254.232
☐	✓	SLP-MeetingRoom-C	Random	9552	0.0.0.0	192.168.254.233
☐	✓	SLP-Huddle-1	Random	5710	156.114.210.34	113.20.41.1
☐	✓	SLP-Huddle-2	Fixed	2743	156.114.210.35	113.20.41.2
☐	✓	SLP-Classroom-1	Random	4755	170.120.45.11	0.0.0.0
☐	✓	SLP-Classroom-2	Fixed	8612	170.120.45.12	0.0.0.0
☐	✓	SLP-Classroom-3	None	-	170.120.45.13	0.0.0.0
☐	✓	ExtronEDS	Fixed	1243	170.120.45.14	156.114.210.30
☐	✓	SLP-GUEST-1	Random	4747	156.114.210.31	0.0.0.0
☐	✓	SLP-GUEST-2	Fixed	5543	156.114.210.32	0.0.0.0
☐	✓	SLP-GUEST-3	Random	1255	156.114.210.33	0.0.0.0
☐	✓	SLP-VENDOR-1	Fixed	8686	0.0.0.0	118.146.70.91
☐	✓	SLP-VENDOR-2	None	-	0.0.0.0	118.146.70.92

17. Click the **Enable** checkbox (❷) to enable AirPlay advertisement functionality on LAN A.
18. Select the appropriate LAN port (❸) for each ShareLink Pro device in every other subnet (excluding Subnet #1) on the PUBLIC NETWORK. The appropriate LAN port is the port on the ShareLink Pro device that connects it to the PUBLIC NETWORK via its own subnet.
19. Click the **Advertise AirPlay** enable/disable slider switch for SLP-VENDOR-1 (❶).

EDS AirPlay Proxy - SLP-GUEST-2

LAN A

LAN B

Airplay Advertiser

☒ Enable LAN A (156.114.210.32) to advertise Airplay

Select devices to advertise.

Hostname	LAN A	LAN B
SLP-MeetingRoom-A	☐	☐
SLP-MeetingRoom-B	☐	☐
SLP-MeetingRoom-C	☐	☐
SLP-Huddle-1	☐	☐
SLP-Huddle-2	☐	☐
SLP-Classroom-1	☐	☐
SLP-Classroom-2	☐	☐
SLP-Classroom-3	☐	☐
ExtronEDS	☐	☐
SLP-GUEST-1	☐	☐
SLP-GUEST-3	☐	☐
SLP-VENDOR-1	☐	☒
SLP-VENDOR-2	☐	☒

EDS Database

Refresh Set Code

☐	Status	Hostname	Code Setting	Login Code	IP Address A	IP Address B	Advertise Airplay	
☐	✓	SLP-MeetingRoom-A	None	-	0.0.0.0	192.168.254.231	☐	Manage
☐	✓	SLP-MeetingRoom-B	Random	0277	0.0.0.0	192.168.254.232	☒	Manage
☐	✓	SLP-MeetingRoom-C	Random	9552	0.0.0.0	192.168.254.233	☐	Manage
☐	✓	SLP-Huddle-1	Random	5710	156.114.210.34	113.20.41.1	☒	Manage
☐	✓	SLP-Huddle-2	Fixed	2743	156.114.210.35	113.20.41.2	☐	Manage
☐	✓	SLP-Classroom-1	Random	4755	170.120.45.11	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-2	Fixed	8612	170.120.45.12	0.0.0.0	☐	Manage
☐	✓	SLP-Classroom-3	None	-	170.120.45.13	0.0.0.0	☒	Manage
☐	✓	ExtronEDS	Fixed	1243	170.120.45.14	156.114.210.30	☐	Manage
☐	✓	SLP-GUEST-1	Random	4747	156.114.210.31	0.0.0.0	☐	Manage
☐	✓	SLP-GUEST-2	Fixed	5543	156.114.210.32	0.0.0.0	☒	Manage
☐	✓	SLP-GUEST-3	Random	1255	156.114.210.33	0.0.0.0	☐	Manage
☐	✓	SLP-VENDOR-1	Fixed	8686	0.0.0.0	118.146.70.91	☒	Manage
☐	✓	SLP-VENDOR-2	None	-	0.0.0.0	118.146.70.92	☐	Manage

20. Click on the **LAN B** tab (2).

NOTE: LAN B is chosen because it is the LAN port connected to PUBLIC Subnet #2.

21. Enable AirPlay advertisement functionality on LAN B by clicking on the **Enable** checkbox (3).
22. Select the appropriate LAN port (4) for each ShareLink Pro device in every other subnet (excluding Subnet #2) on the PUBLIC NETWORK. The appropriate LAN port is the port on the ShareLink Pro device that connects it to the PUBLIC NETWORK via its own subnet.

EDS AirPlay Proxy - SLP-VENDOR-1

LAN A LAN B (2)

Airplay Advertiser (3)


☒ Enable LAN B (118.146.70.91) to advertise Airplay

Select devices to advertise.

Hostname	LAN A	LAN B
SLP-MeetingRoom-A	☐	☐
SLP-MeetingRoom-B	☐	☐
SLP-MeetingRoom-C	☐	☐
SLP-Huddle-1	☒	☐
SLP-Huddle-2	☒	☐
SLP-Classroom-1	☐	☐
SLP-Classroom-2	☐	☐
SLP-Classroom-3	☐	☐
ExtronEDS	☐	☒
SLP-GUEST-1	☒	☐
SLP-GUEST-2	☒	☐
SLP-GUEST-3	☒	☐
SLP-VENDOR-2	☐	☐

Alternative (non-EDS) Configuration for a Wireless Subnet

If the network has been intentionally configured to deploy all mobile devices in a separate wireless subnet as illustrated below, please see [Discovering a ShareLink Pro Device on a Different Subnet for Apple Screen Mirroring](#) on page 31 for instructions. AirPlay cross-subnet device discovery via EDS does not work under this network configuration since no ShareLink Pro devices have been deployed on the same subnet as the mobile devices. Only one ShareLink Pro device is required on the same subnet as the mobile devices in order to benefit from AirPlay cross-subnet device discovery via EDS.

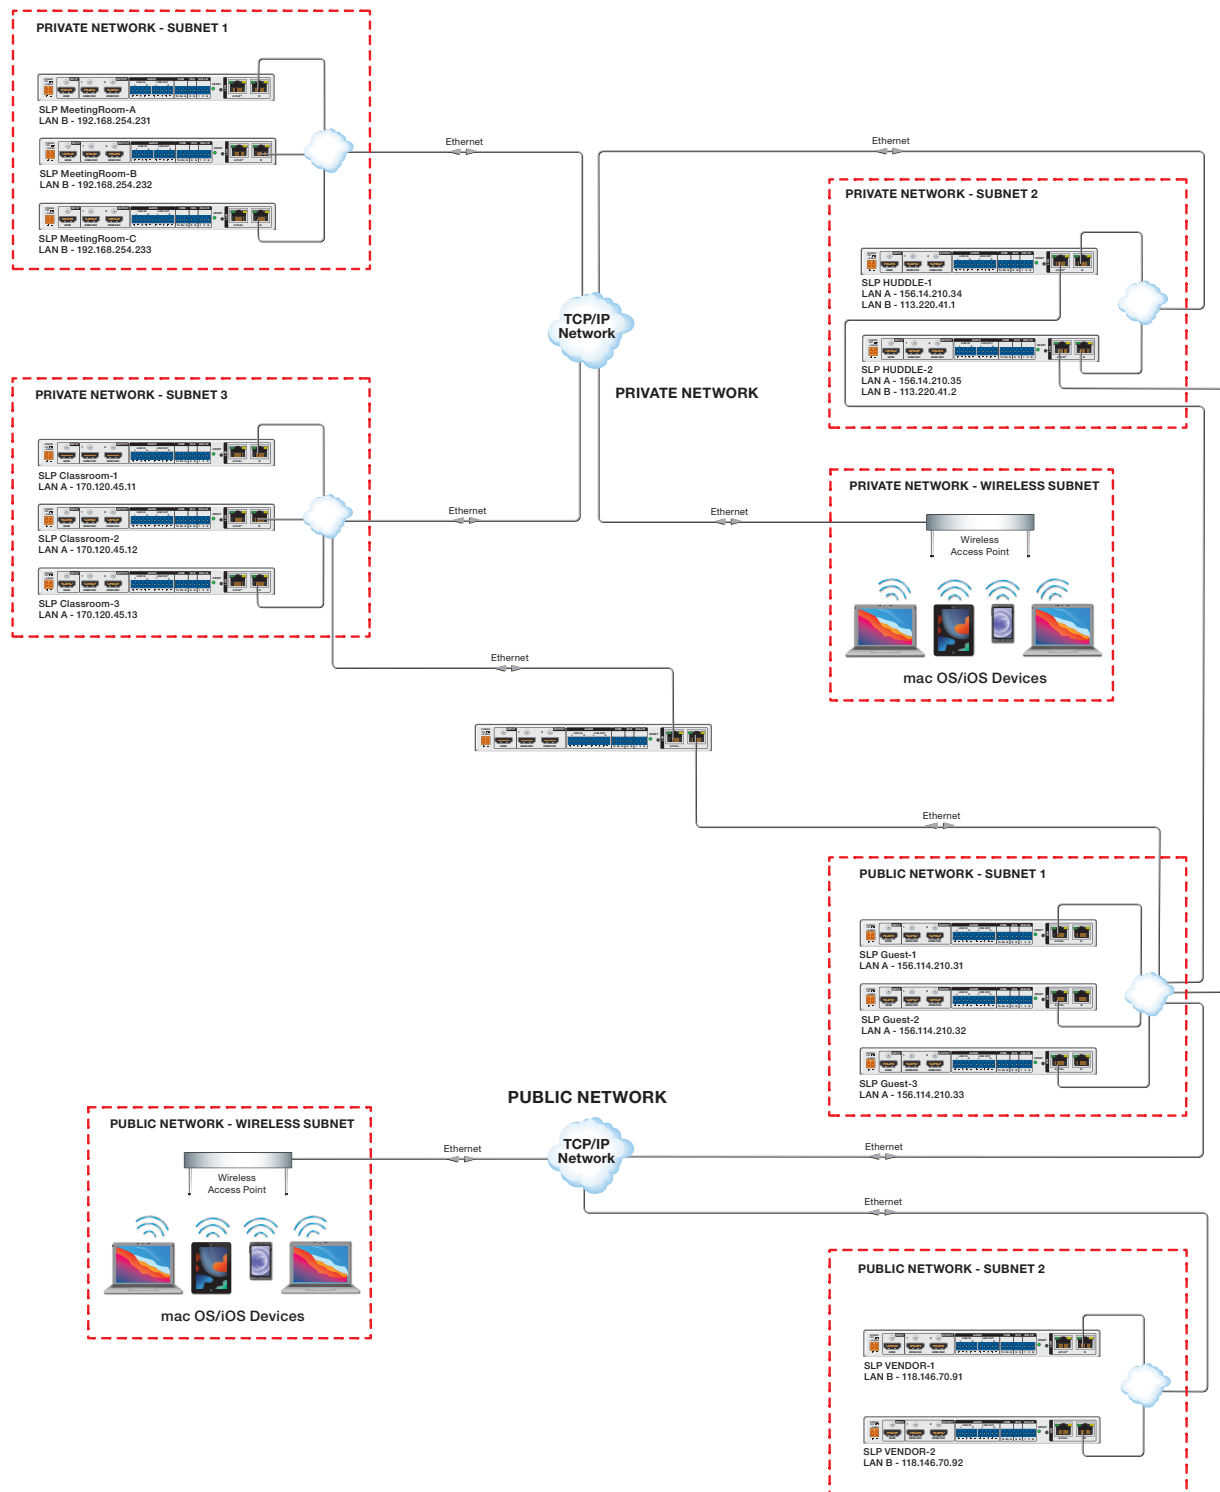


Other Configuration Options

This section covers the following configuration options for the ShareLink Pro:

- [Device Discovery using ShareNext™](#)
- [Digital Signage Feature](#)
- [Miracast Connection Using the WFA 100](#)

Device Discovery using ShareNext

ShareNext uses Bluetooth technology to discover nearby ShareLink Pro devices equipped with a WFA 100. This is useful in applications where client devices and ShareLink Pro devices are in separate subnets within a network. Client devices discover the ShareLink Pro via Bluetooth, but they will still connect to the ShareLink Pro over the network. It is imperative that client devices have Bluetooth enabled and have a routable network path to the ShareLink Pro.

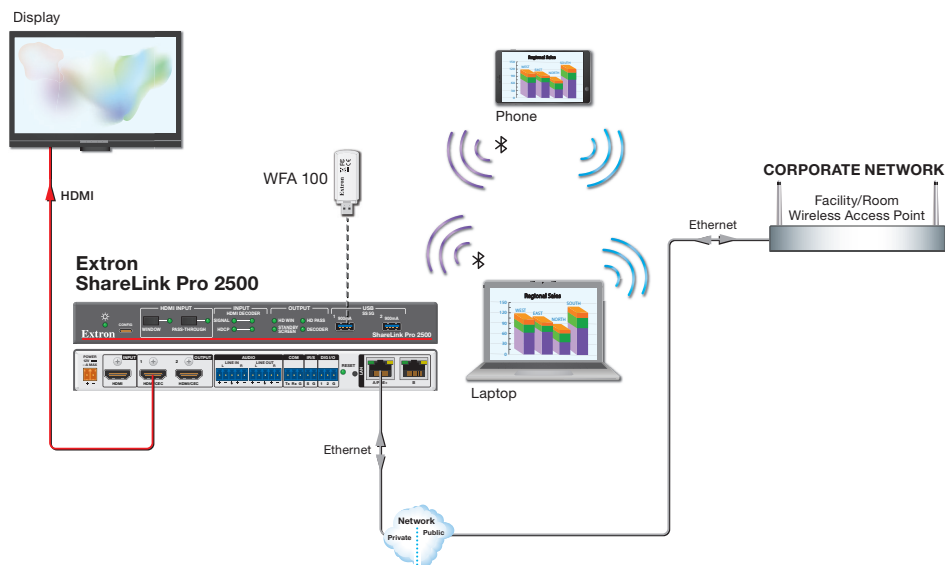

ShareNext works with client devices using ShareLink Pro software (Windows, macOS, iOS, and Android) as well as Apple devices (macOS and iOS) that support native screen mirroring (AirPlay).

NOTE:

- ShareLink Pro devices must be equipped with the WFA 100 adapter in order for ShareNext to be enabled.
- The client devices must be able to access the ShareLink Pro over the network to discover it.

Using ShareNext with the ShareLink Pro Software and Mobile App

The ShareLink Pro software or mobile app scans for all nearby ShareLink Pro units equipped with a WFA 100. If one is discovered, the user is given an option to connect to the nearby ShareLink Pro.

If multiple devices are discovered, the device discovery page displays all the detected ShareLink Pro devices.

Using ShareNext with Apple Screen Mirroring

Apple devices (iOS and macOS) can natively discover nearby ShareLink Pro devices. All nearby ShareLink Pro units equipped with a WFA 100 are discovered and visible in the iOS and macOS screen mirroring device discovery list.

Digital Signage Feature

The ShareLink Pro can be used as a web-based digital signage player when it is not being used for collaboration. This feature allows the ShareLink Pro to access cloud-hosted digital signage content. Follow the steps below to enable the digital signage feature using PCS.

NOTE: This feature is available only with a LinkLicense.

1. Open PCS v4.10.5 or greater.
2. Connect to the ShareLink Pro device.
3. Navigate to **Logo Config > Web Content** tab.
4. Within the Web URL field (❶), enter the URL generated by your digital signage Software as a Service (SaaS) provider.

Logo Configuration

Drag/Drop an item from the left to the source on the right.

Files Web Content Streaming Config

Web URL
❶ https://www.cloud.appspace.com/app/ Clear
Assign to... Clear ShareLink Pro Cache

Standby Source Clear
Connected Source Clear

Expo Mode ①
☐ Disable ☒ Enable ☐ Lock
Expo Standby Source Clear
Expo Failover Source Clear

Streaming Channel
Default Channel 1 - Player Controls
▶ || ■ ↺


Channels Add

ID	Name	Location
1	image1.jpg	file:///
2	logo.jpg	file:///
3	image2.jpg	file:///Test/
4	4k1.jpg	file:///Test/
5	4k3.jpg	file:///Test/
6		
7		
8		

❷ Assign to... Edit Remove


5. Click the **Assign To...** button (❷).

6. Select one of the following options:

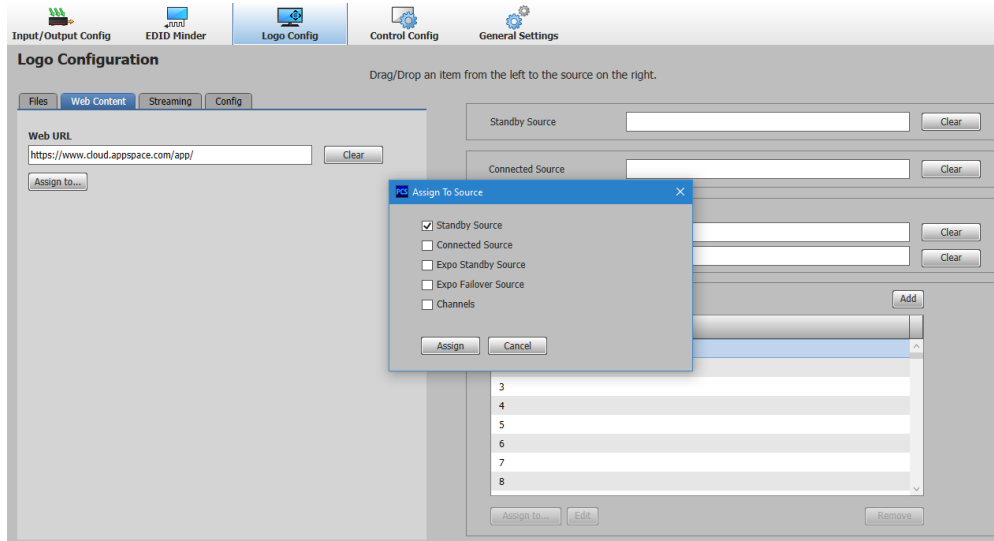

- **Assign to Standby** – This option assigns the web URL content as a playback source in the Standby state.
- **Assign to Connected** – This option assigns the web URL content as a playback source in the Connected state.
- **Assign to Expo Standby** – This option assigns the web URL content as a playback source in the Expo Standby state.
- **Assign to Expo Failover** – This option assigns the web URL content as a playback source in the Expo Failover state.
- **Assign to Expo Channel** – This option assigns the web URL content as a playback source for a specific channel in Expo Mode.
The web URL entered in the text field is copied as a source for the next available Expo channel. For example, if channels 1, 2, 3, and 4 have already been configured, then the web URL is configured as the source for channel 5.

7. Click **Assign**. The assigned web URL is shown on the Standby Source panel (1):

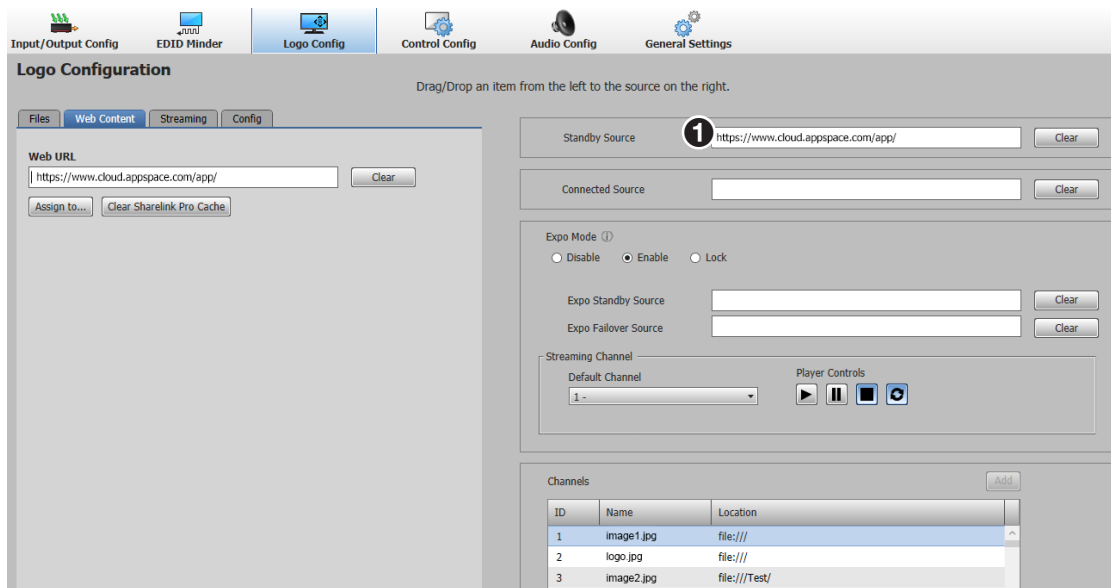

Miracast Connection Using the WFA 100


Miracast Overview

Miracast is a standard for wireless connections introduced by the Wi-Fi Alliance. It enables the sharing of content wirelessly from mobile devices to displays.


The ShareLink Pro 2500 supports Miracast technology when used with the ShareLink Pro WFA 100 adapter (see [About the WFA 100](#) on page 23).

There are two ways to connect and share content via Miracast.

- **Miracast Wi-Fi Direct** - This method involves a peer-to-peer connection that relies on Wi-Fi Direct technology. In this method, both device discovery and the sharing of content is facilitated over the Wi-Fi Direct connection.

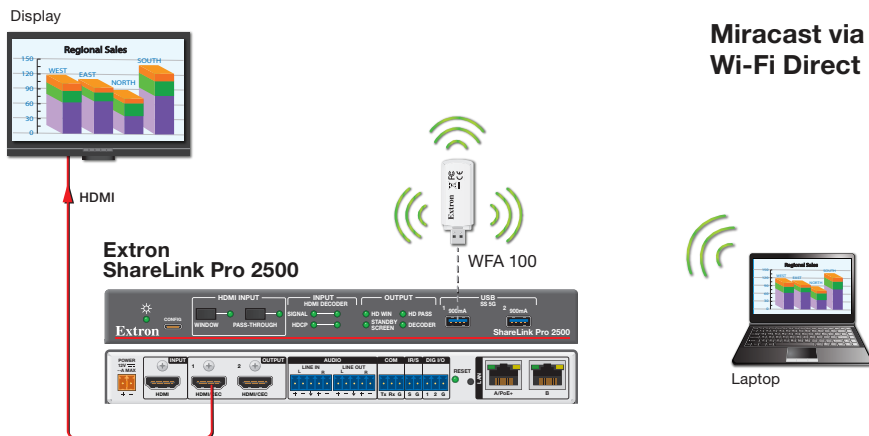

- **Miracast over Infrastructure** (default) - In this method, device discovery is performed initially over Wi-Fi Direct, but the content is shared over an existing wireless network connection between the Windows 10 laptop and the ShareLink Pro.

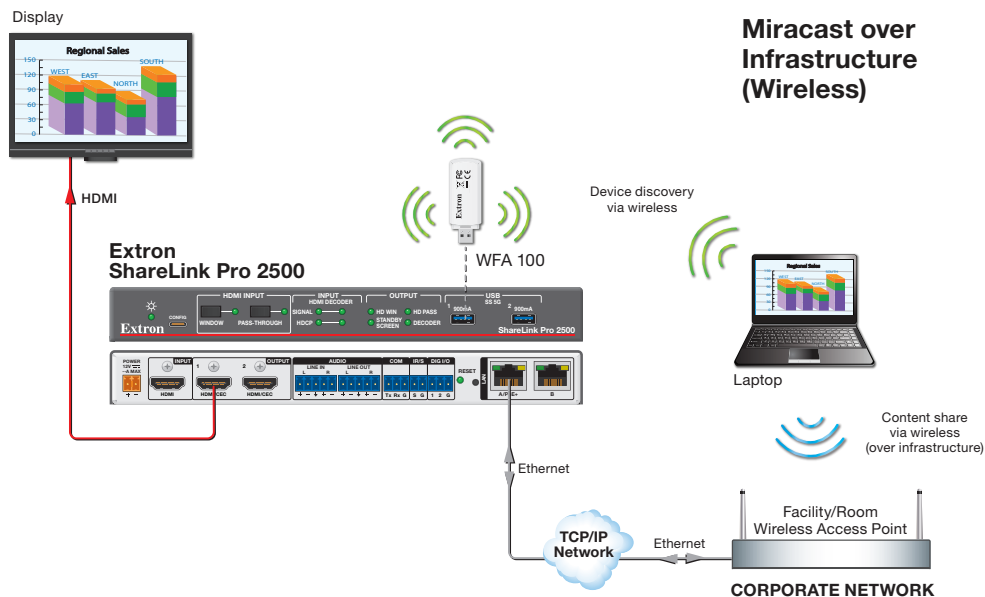

Miracast over Infrastructure is the default connection method while Wi-Fi Direct is the failover connection method. This means that, by default, Windows 10 prefers Miracast Over Infrastructure connections, and will always attempt to connect to the ShareLink Pro over the existing network connection. If Windows determines that a network connection does not exist, then it proceeds to connect over Wi-Fi Direct.

NOTES:

- **For Wi-Fi Direct connections**, connection quality depends on the proximity of the client device to the WFA 100 (attached to the ShareLink Pro). For optimal performance, it is highly recommended that you keep your Windows 10 device within 50 ft (~15m) of the WFA 100/ ShareLink Pro.
- **For Miracast Over Infrastructure connections**, connection quality depends on the proximity of the client device to the enterprise wireless access point serving the existing Wi-Fi network (to which the ShareLink Pro device is connected). For optimal performance, it is highly recommended that you keep your Windows 10 device within 50 ft (~15m) of both the WFA 100/ ShareLink Pro and enterprise wireless access point.


Miracast Connection Methods

Although Miracast always works from a connection standpoint, the performance varies depending on the connection method. Three different configuration options are possible and are listed below in order of decreasing performance from top to bottom.

Option 1

Windows 10 device connected to the same Wi-Fi network as the ShareLink Pro devices:


Display

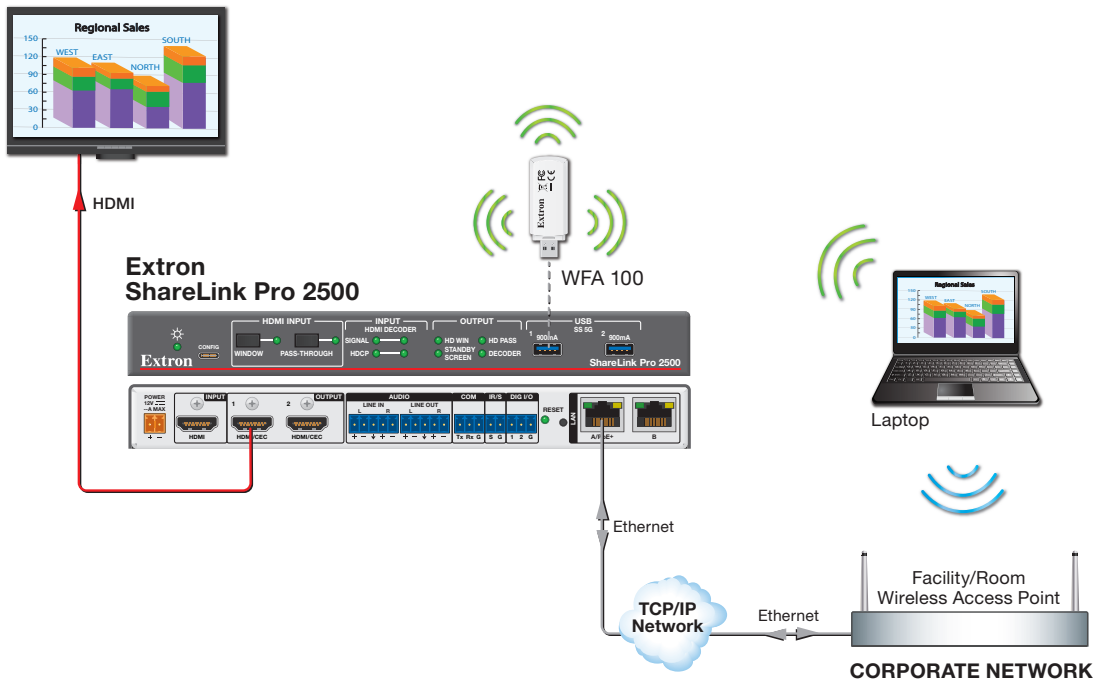

Option 2


Windows 10 device not connected to any Wi-Fi network (but Wi-Fi is still enabled):

Display

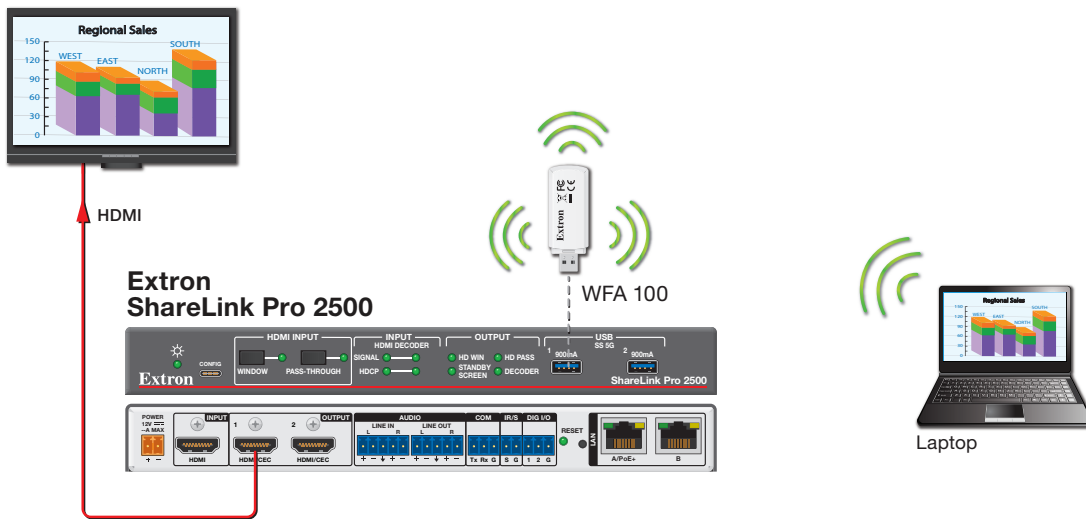

Option 3

Windows 10 device is **not** connected to the same Wi-Fi network as the ShareLink Pro devices:

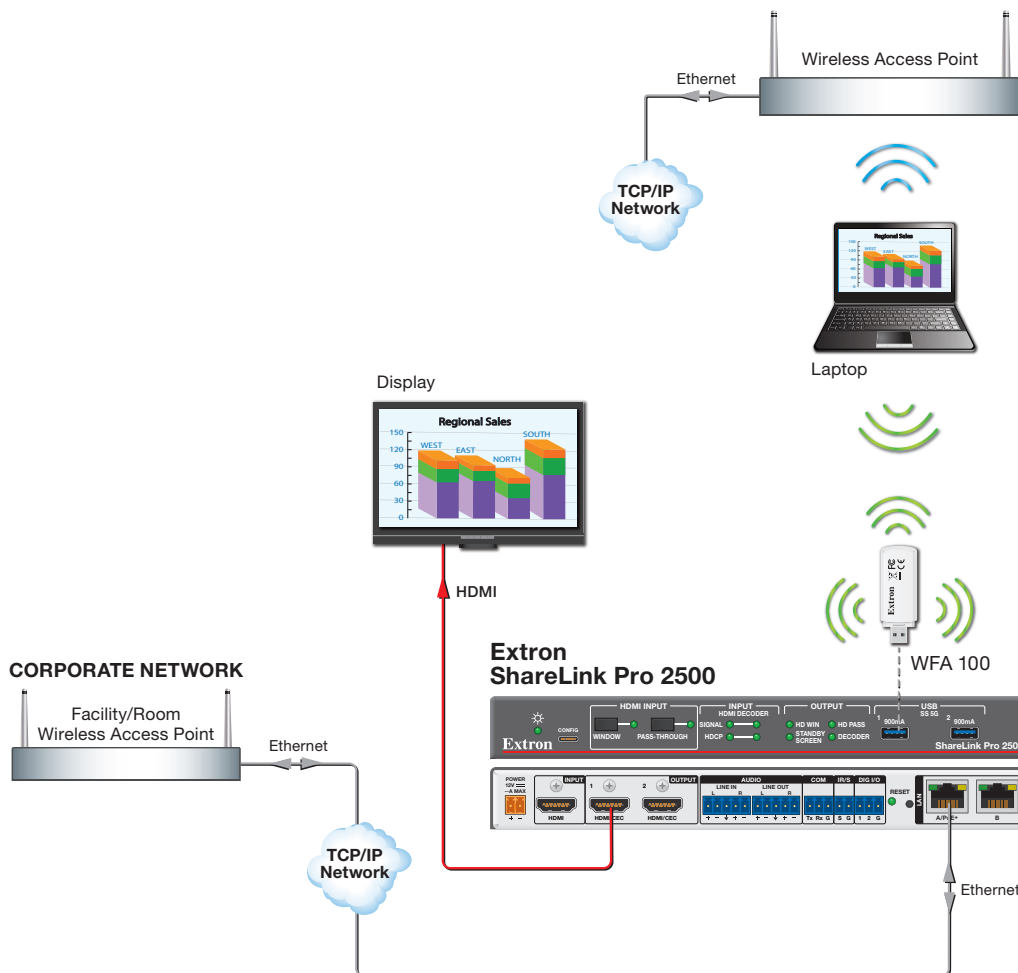

NOTES:


- Performance also depends on the quality of the Windows 10 hardware, the wireless environment, and the overall performance of the Wi-Fi network. The strength of the wireless signal could have an adverse impact on connection quality and potentially cause considerable packet loss. Low signal strengths may prevent connections between Windows 10 client devices and the ShareLink Pro. Even if a connection is established, low signal strengths may cause low frame rate, high latency, poor audio and/or video quality, and dropped connections.
- To improve end user experience, the following is recommended:
 - Ensure that the enterprise wireless access points serving the Wi-Fi network maintain high signal strengths and are configured to operate on Wi-Fi channels with the least interference (ideally unoccupied and non-overlapping channels).
 - Ensure that the WFA 100 attached to ShareLink Pro devices are also configured (via PCS) to operate on Wi-Fi channels with the least interference (ideally unoccupied and non-overlapping channels). For WFA 100 channel configuration instructions, see the next page.
 - Perform a scan of the environment using wireless survey equipment that is regularly calibrated, and make note of areas with low or no wireless coverage on a map. Introduce wireless coverage where needed as necessary by adjusting physical access point locations, channel selections, and channel bandwidths. Access point power levels may also require tweaking for optimal performance.
 - Configure quality-of-service on networking equipment (switches, routers, wireless LAN controllers, etc.) to prioritize Miracast traffic. Miracast packets are marked as CS5 with DSCP Value = 101 000 and Decimal Value = 40.
 - Minimize the number of network hops between the wireless access point and the ShareLink Pro device.
 - Refer to the *Miracast Setup Guide* available on the Extron website for more network design considerations.

Configuring the WFA 100 Channel

The ShareLink Pro supports Miracast Wi-Fi Direct on both the 2.4 GHz band and 5 GHz band. You may configure the channel and other Miracast settings in PCS as shown below.

NOTE: It is highly recommended that you configure the Miracast Wi-Fi Direct channel such that it does not conflict with the enterprise wireless access point channels (for Miracast Over Infrastructure Wi-Fi network). Operating wireless devices on the same or overlapping channels may result in a poor end user experience.

1. Open PCS v4.10.5 or greater.
2. Connect to the ShareLink Pro device.
3. Navigate to **General Settings > WFA 100** tab:

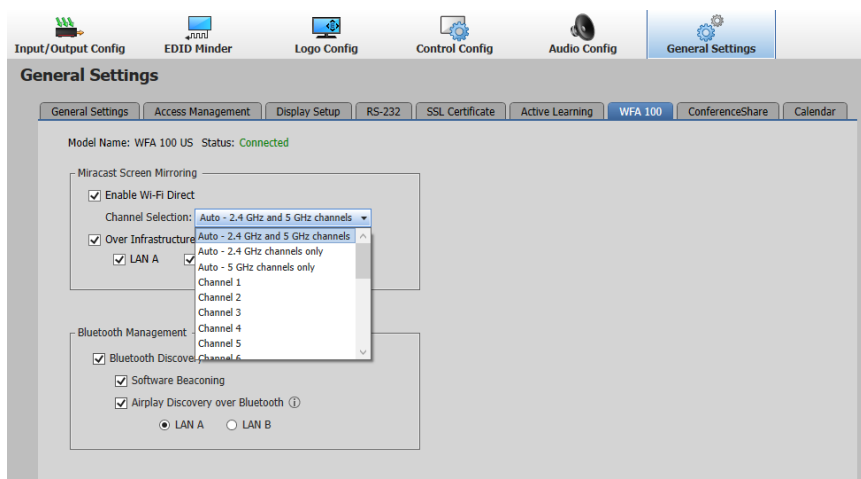

4. Configure the following settings within the Miracast Screen Mirroring panel:
 - **Enable Wi-Fi Direct** – Check to box to always share Miracast content via Wi-Fi Direct (see [Miracast Connection Using the WFA 100](#) on page 52 for details).
 - **Channel Selection** – Select the desired channel from this drop-down menu. Miracast will operate in the specified channel. Alternatively, the following auto selection options are available:
 - **Auto - 2.4 GHz and 5 GHz channels** – On this option, the ShareLink Pro auto selects the channel. It searches for unused channels in the 2.4 and 5 GHz bands (prioritizing 5 GHz channels, then 2.4 GHz)
 - **Auto - 2.4 GHz channels only** – The ShareLink Pro searches for unused channels in the 2.4 GHz band only.
 - **Auto - 5 GHz channels only** – The ShareLink Pro searches for unused channels in the 5 GHz band only.
 - **Over Infrastructure** – Check this box to share Miracast content via the Over Infrastructure method (as priority), with Wi-Fi Direct as the failover method (see [Miracast Connection Using the WFA 100](#) on page 52 for details).

NOTE: Auto channel selection is initiated at power up, and once every 24 hours when the ShareLink Pro and Miracast is not in use.

- **Over Infrastructure** – Check this box to share Miracast content via the Over Infrastructure method (as priority), with Wi-Fi Direct as the failover method (see [Miracast Connection Using the WFA 100](#) on page 52 for details).

Miracast Troubleshooting

Use the following information to troubleshoot Miracast connection issues.

Supported platforms

The ShareLink Pro only supports Windows 10 version 1903 and later. For best experience, Extron recommends version 2004 or later.


Network ports

Miracast requires the following ports to be open on the client device as well as on the overall network: **5353, 7236, 7250** (see the [Firewall Traversal](#) table on page 93 for details on these ports).


Miracast Graphics Support

Follow these steps to verify Miracast graphics support on your Windows 10 device.

1. Open **Start** menu.
2. Enter Run to execute the Run app.
3. Type in dxdiag and hit the <Enter> key.

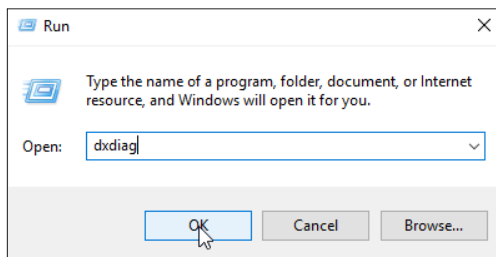


4. Click the **Display** tab (4).

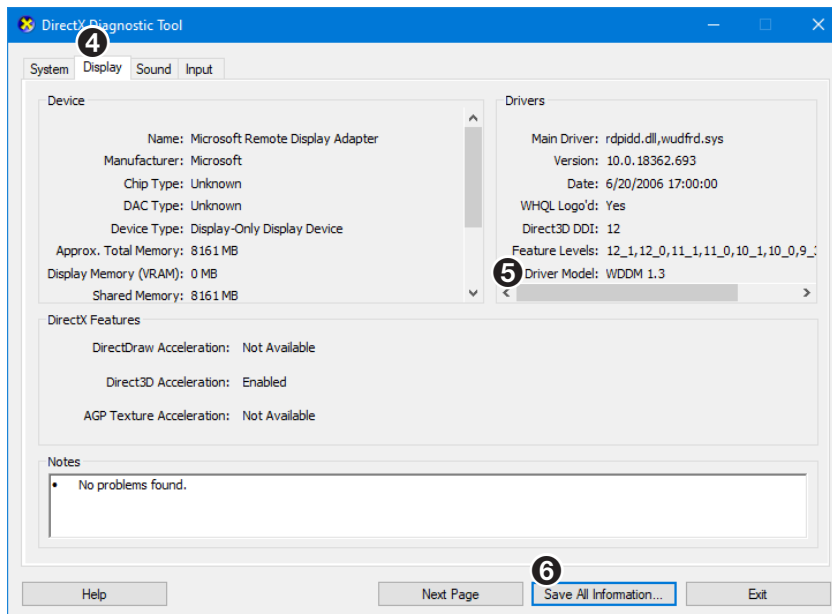

5. Verify that WDDM (Windows Display Driver Model) is version 1.3 or later (5).
If the WDDM version is lower than 1.3, update the graphics driver.
6. Click the **Save all information** button (6) and save the text (.txt) file.

7. Open the saved text file.

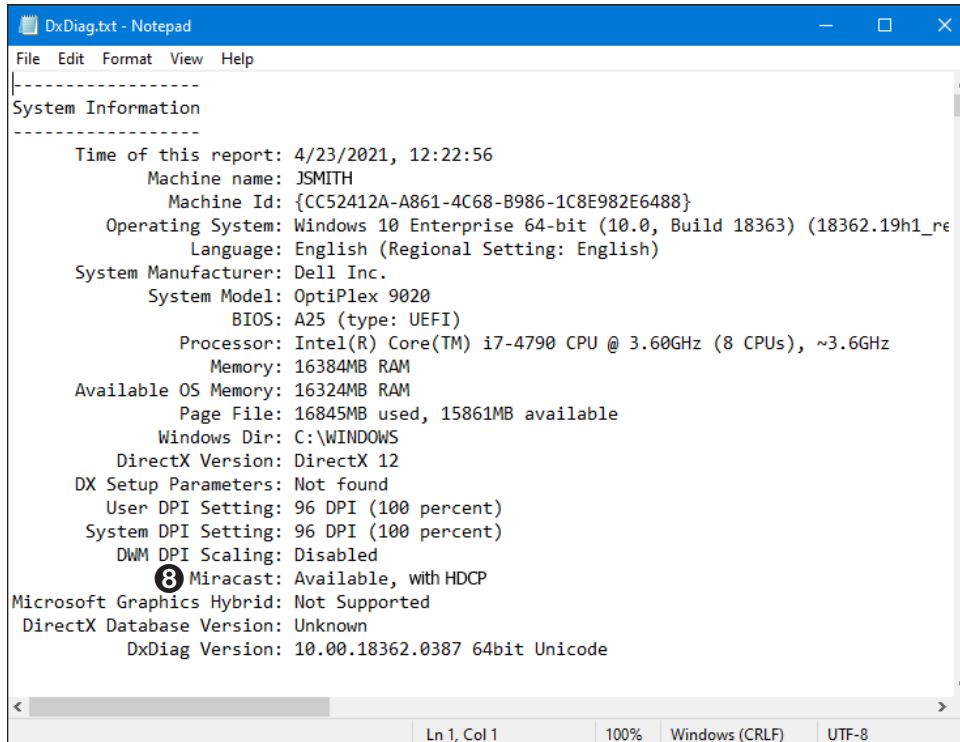


```
File Edit Format View Help
-----
System Information
-----
Time of this report: 4/23/2021, 12:22:56
Machine name: JSMITH
Machine Id: {CC52412A-A861-4C68-B986-1C8E982E6488}
Operating System: Windows 10 Enterprise 64-bit (10.0, Build 18363) (18362.19h1_re
Language: English (Regional Setting: English)
System Manufacturer: Dell Inc.
System Model: OptiPlex 9020
BIOS: A25 (type: UEFI)
Processor: Intel(R) Core(TM) i7-4790 CPU @ 3.60GHz (8 CPUs), ~3.6GHz
Memory: 16384MB RAM
Available OS Memory: 16324MB RAM
Page File: 16845MB used, 15861MB available
Windows Dir: C:\WINDOWS
DirectX Version: DirectX 12
DX Setup Parameters: Not found
User DPI Setting: 96 DPI (100 percent)
System DPI Setting: 96 DPI (100 percent)
DWM DPI Scaling: Disabled
8 Miracast: Available, with HDCP
Microsoft Graphics Hybrid: Not Supported
DirectX Database Version: Unknown
DxDiag Version: 10.00.18362.0387 64bit Unicode
```

8. Check the Miracast (8) line to verify that Miracast is available.

Miracast Wi-Fi Direct Support

Follow these steps to verify Miracast Wi-Fi direct support on your Windows 10 device.

1. Open the **Start** menu.
2. Enter "cmd" to execute the Command Prompt app.
3. Type in "powershell" then hit the <Enter> key.
4. Type in "Get-netadapter|select Name, ndisversion" then hit the <Enter> key.
5. Verify that the NDIS (Network Driver Interface Specification) version for the Wi-Fi interface is version 6.30 or greater (5).

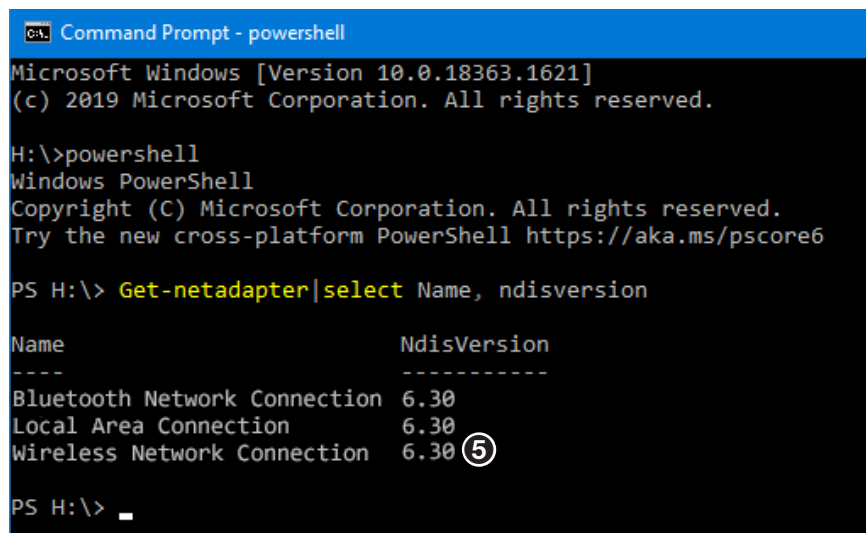

```
C:\> Command Prompt - powershell
Microsoft Windows [Version 10.0.18363.1621]
(c) 2019 Microsoft Corporation. All rights reserved.

H:\>powershell
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.
Try the new cross-platform PowerShell https://aka.ms/pscore6

PS H:\> Get-netadapter|select Name, ndisversion

Name                                NdisVersion
----                                -
Bluetooth Network Connection        6.30
Local Area Connection                6.30
Wireless Network Connection          6.30 5

PS H:\> _
```

6. If the NDIS version is lower than 6.30, update the Wi-Fi adapter driver.

Dual Output Display Configuration

The ShareLink Pro 2500 features dual 4K HDMI outputs, allowing content to be shared on up to two displays. There are two modes (Mirror Mode and Extend Mode) for displaying shared content on two displays. These modes can be selected and configured using PCS (see [Selecting the Display Mode and Layout Group in PCS](#) on page 61).

In **Mirror Mode**, the shared content is mirrored on both outputs to show the same content on each display.



Figure 20. Dual Displays using Mirror Mode

In **Extend Mode**, the shared content is distributed between the two displays.

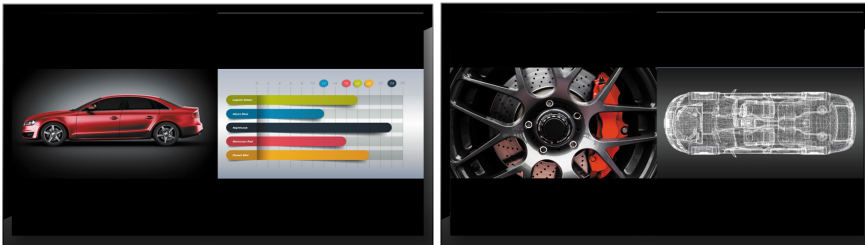


Figure 21. Dual Displays using Extend Mode

Since the ShareLink Pro can display up to four pieces of content simultaneously, PCS allows you to select how the content is arranged and distributed on the screens. There are eleven layout group options that determine how the content is grouped on the displays (see [Layout Groups](#) on the next page).

Layout Groups

The following chart shows how each layout group arranges the content on the outputs. The layout group can be selected using PCS (see [Selecting the Display Mode and Layout Group in PCS](#) on the next page).

NOTES:

- Each group chart shows how content is arranged depending on how many pieces of content are being shared (one, two, three or four).
- Layout groups 1-5 are ideal for most applications when using Mirror Mode.
- Layout groups 6-11 are ideal for most applications when using Extend Mode.



Selecting the Display Mode and Layout Group in PCS

Follow these steps to select the dual output display mode and layout group in PCS (see the *ShareLink Pro Help File* in PCS for more information):

1. Click the **Input/Output Config** page (see figure 22, ❶).

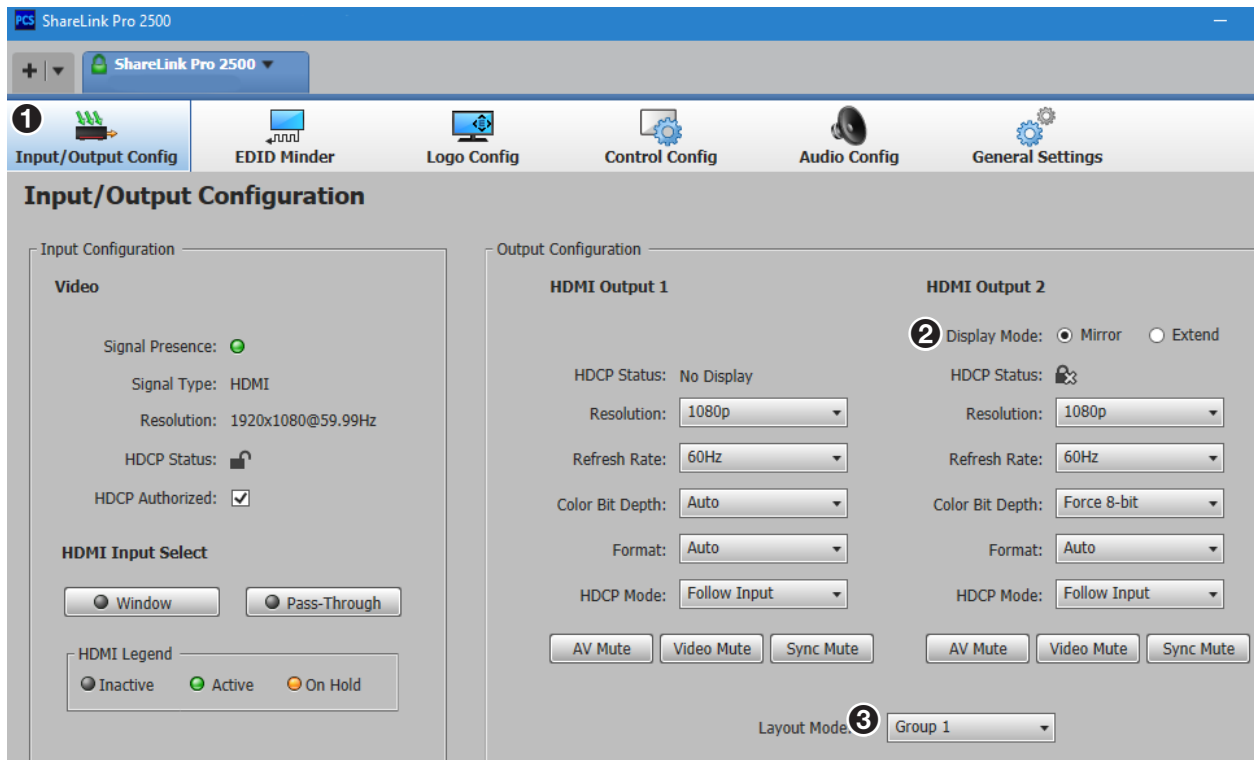


Figure 22. PCS - Input/Output Config Page

2. On the **Output Configuration** panel, under HDMI Output 2, select the desired Display Mode (**Mirror** or **Extend**) (❷).
3. Select the desired layout group from the **Layout Mode** drop-down menu (❸).

SIS Configuration and Control

This section contains SIS communication details and SIS commands and responses for the ShareLink Pro 2500. Topics in this section include:

- [Host Device Connection](#)
- [SIS Overview](#)
- [Command and Response Tables for SIS Commands](#)

Host Device Connection

Use a connected computer running an SSH client such as PuTTY to send and receive SIS commands and responses.

Use port 22023 for connection to the ShareLink Pro when using a control system. Enter the admin username and password when prompted.

NOTE: The factory configured password for all accounts have been set to the device serial number (passwords are case sensitive). Performing a Reset to Factory Defaults (see page 7) sets the password to extron.

SIS Overview

Host and Device Communication

SIS commands consist of one or more characters per field. No special characters are required to begin or end a command sequence. When the ShareLink Pro determines that a command is valid, it executes the command and sends a response to the host device. All responses from the device to the host end with a carriage return and a line feed (CR/LF = ↵), which signals the end of the response character string. A string is one or more characters.

Error Responses

When the ShareLink Pro receives an SIS command and determines that it is valid, it performs the command and sends the corresponding response to the host device. If the command is determined invalid or contains invalid parameters, the device returns an error response to the host. The error response codes are:

E10 = Invalid command
E11 = Invalid preset number
E13 = Invalid parameter
E14 = Not valid for this configuration
E17 = Invalid command for signal type
E22 = Busy
E24 = Privilege violation
E35 = Account does not exist

Command and Response Tables Overview

The command and response tables for SIS commands list the commands the device recognizes as valid, the responses returned to the host, a description of the command function or results of executing the command, and some examples of commands in ASCII.

NOTE: Upper and lowercase text can be used interchangeably unless otherwise stated.

Symbol Definitions

The table below shows the hexadecimal equivalent of ASCII characters used in the command and response tables. Hexadecimal values include two digits. The following symbols are commonly used throughout the command and response tables.

ASCII and Hexadecimal Conversion Table																	
		Second Hexadecimal Digit															
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
First Hexadecimal Digit	0											LF			←		
	1												Esc				
	2	●	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
	3	Ø	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
	4	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
	5	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
	6	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
	7	p	q	r	s	t	u	v	w	x	y	z	{		}	~	

↵ = Carriage return and line feed (LF)

← = Carriage return with no line feed

| = Pipe (can be used interchangeably with the ← character).

• = Space

Esc = Escape key

w = Can be used interchangeably with the Esc character.

X1 = Input window status

0 = HDMI window not displayed 1 = HDMI window displayed

X2 = Input signal

0 = No input signal detected 1 = Input signal detected

X3 = HDMI Input Signal Detected Rate (Example: 1920x1080@60.00Hz); no signal = 0000x0000@00.00Hz

X4 = Video format

0 = No signal, 1 = DVI, 2 = HDMI

X5 = EDID table slot

X6 = Native resolution & refresh rate

Example: 1920x1080@60.00Hz

X7 = EDID data in Hex

X8 = Output rate (see table on page 64)

X9 = Output sync mode

0 = Sync always active (default)

1 = No signal present timer, disable output

2 = Inactivity timer, disable output

X10 = Time out duration

0-999999 (1 second increments)

1000000 = Never times out

Default = 30 seconds

X11 = Output sync mode status	0 = Active input detected; timer not running 1 = No active input; timer is running; output sync still active 2 = No active input; timer has expired; output sync disabled
X12 = Color bit depth	0 = Auto mode (default) 1 = Force 8-bit
X13 = Output video format	0 = Auto (default) 1 = DVI RGB 4:4:4 Full 2 = HDMI RGB 4:4:4 Full 3 = HDMI RGB 4:4:4 Limited 4 = HDMI YUV 4:4:4 Limited 5 = HDMI YUV 4:2:2 Limited 6 = HDMI YUV 4:2:0 Limited
X14 = HDCP status	0 = Not connected 1 = Not HDCP Encrypted 2 = HDCP Encrypted
X15 = HDCP authorized status	0 = HDCP authorize off 1 = HDCP authorize on (default)
X16 = HDCP mode	0 = Follow input (default) 1 = Always encrypt 2 = Follow input with continuous DVI trials 3 = Always encrypt with continuous DVI trials 4 = Disable authentication
X17 = HDCP notification	0 = Black screen 1 = Green screen (default)
X18 = Video mute status	0 = Unmute (default) 1 = Mute video 2 = Mute sync
X19 = Audio mute status	0 = Unmute (default) 1 = mute
X21 = Input type	1 = HDMI 2 = Decoder (for all decoder streams) 3 = Airplay streams 4 = Uploaded image/video content
X22 = Input aspect ratio setting	1 = Fill 2 = Follow (default)
X23 = Volume adjustment range	-100 to 0 = (default is -30 dB)
X28 = Executive mode	0 = Off (default) 1 = On
X30 = Unit name	Alpha-numeric up to 63 characters. No blanks, spaces, or special characters except hyphen (-).
X31 = Default unit name	Alpha-numeric name. ShareLink-Pro-xx-xx-xx (where xx-xx-xx is the last six digits of the unique MAC address).
X32 = Firmware version (Example: 1.00)	
X33 = Firmware version and build version (Example: 1.00.0010)	
X34 = Internal temperature (2 digits, °C)	
X35 = Verbose response mode	0 = Clear (none) (default) 1 = Verbose mode, 2 = Tagged responses 3 = Verbose + tagged responses
X36 = Layout mode (Default in Mirror Mode = 1) (Default in Extend Mode = 6)	1 = Layout group #1 2 = Layout group #2 3 = Layout group #3 4 = Layout group #4 5 = Layout group #5 6 = Layout group #6 7 = Layout group #7 8 = Layout group #8 9 = Layout group #9 10 = Layout group #10 11 = Layout group #11
X37 = Current layout number (1-25)	
X38 = HDMI input mode	0 = Disabled 1 = Enabled (default)
X39 = Apple screen mirroring mode	0 = Disabled 1 = Enabled (default)
X391 = Device discovery proxy service	0 = Disabled (default) 1 = Enabled
X40 = HDMI controls setting	0 = Disabled 1 = Enabled (default)
X41 = Client app controls label	UTF-8 characters permitted, maximum of 16 characters
X401 = HDMI client app controls	0 = Hide 1 = Show (default)
X42 = Access mode	1 = Full control 2 = Moderated 3 = Run-time (default)
X402 = WebShare mode	0 = Disabled 1 = Enabled (default)

X43 = Run time access mode	1 = Full control 2 = Moderated
X403 = IP address visibility setting	0 = Visible (default) 1 = Masked
X44 = Confirmation code mode	0 = None 1 = Fixed 2 = Random (default)
X45 = Login key code	Four digit value (default = 0000)
X46 = Random code interval	Four digit value (1 to 9998) in minutes
	Default = 9999 = random code generated after every collaboration session (after the last user disconnects)
X47 = WebView password option	0 = No access (disabled) 1 = No prompt for password (default) 2 = Custom password 3 = Follow confirmation code
X48 = Status bar mode	0 = Never shown 1 = Always shown (default) 2 = Not shown only when one content is shared 3 = Not shown when one or more content is shared
X49 = Label	1 = Hostname 2 = IP address A 3 = IP address B 4 = Login code 5 = Custom message 6 = Dynamic notifications/messages 7 = Clock
X50 = Label value (max 128 characters)	
X51 = Label visibility setting	0 = Hide 1 = Show (default)
X52 = Language	1 = English (default) 2 = French 3 = German 4 = Spanish 5 = Chinese 6 = Japanese
X53 = Still image transition effect	0 = Cut (default) 1 = Fade
X54 = Still image transition time	500 to 3000 ms increments (default = 1000 ms)
X55 = Time between still image sequences	1000 to 60000 ms in 1 ms increments (default = 10000 ms)
X56 = Gallery setting	1 = Standby image gallery 2 = Connected image gallery
X64 = Connection ID (10 digits)	
X65 = User name (alpha-numeric text)	
X66 = Stream ID (10 digits) (if connection is not streaming, this will be empty)	
X67 = Content type (example: HDMI, App Window, AirPlay, etc)	
X68 = Connection approved (0 = pending, 1 = approved)	
X69 = X: x position of the window as a percentage of the screen width times 100	
X70 = Y: y position of the window as a percentage of the screen height times 100	
X71 = W: width of the window as a percentage of the screen width times 100	
X72 = H: height of the window as a percentage of the screen height times 100	
X73 = Connection age (in seconds)	
X74 = Total number of users connected (integer – maximum 64)	
X75 = Video port ID (7 digits)	
X76 = Echo status	0 = Disabled 1 = Enabled (default)
X77 = Color described as RGB Hex triplets (RRGGBB)	
X78 = mDNS hostname (alpha-numeric up to 63 characters; no blanks, spaces, or special characters except hyphen (-)).	

NOTE: The first character must be an alphabetical character, and the last character must not be a hyphen.

X79 = Status bar pop-up	0 = Disabled 1 = Enabled (default)
X791 = Status bar pop-up timer	1 s - 300 s in 1 s increments (default = 20 s)

X106 = Service (network path of server)	CIFS: "\\myServer\myShare\myDir" NFS: "myServer:/myDir"
X107 = Mount point	
X108 = Username	
X109 = Password	
X110 = Options	
X111 = Boolean for reconnect	
X112 = Boolean for extron_share	
X113 = Recursion (optional)	0 = Disabled 1 = Enabled (default)
X114 = Directory path (optional)	
X118 = IP address	Format <i>nnn.nnn.nnn.nnn</i> Default for LAN A = 192.168.253.254 Default for LAN B = 192.168.254.254 Leading zeros in each of the four octets are optional in setting values, and are suppressed in returned values. Prefix representing subnet mask bits (subnet mask value in CISG commands). Default = / 24 , which represents the default subnet mask, 255.255.255.0.
X119 = Subnet mask in CISG commands	
X120 = Gateway IP address	Format <i>nnn.nnn.nnn.nnn</i> Default = 0.0.0.0
X121 = Active Learning Mode	0 = Disable (default) 1 = Encode only 2 = Decode only 3 = Encode and decode
X122 = Receiver display options	0 = Add as a quadrant (Default) 1 = Overlay
X123 = Hostname or IP address of sender	
X124 = Hostname or IP address of receiver	
X125 = Multicast IP address	
X126 = Encoder multicast interface setting	1 = LAN A (Default)
X127 = Secure streaming setting	0 = Disable 1 = Enable (Default)
X128 = Port number (must be between 1024 - 65435), Default = 50000	
X129 = Stream type	0 = Unicast 1 = Multicast
X130 = Player state (stopped, paused, playing, unknown)	
X131 = Status Text (for example: OK, cannot access media, unavailable, error)	
X132 = Device name (alpha-numeric client friendly name for an active learning connection)	
X133 = Bluetooth discovery setting	0 = ShareLink Pro App 1 = Apple Screen Mirroring (AirPlay for iOS/macOS)
X134 = Bluetooth mode	0 = Disabled 1 = Enabled (Default)
X135 = NIC (Network Interface Card) Number	1 = eth0/LAN A (Default)

Command and Response Tables for SIS Commands

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Video input selection			
Select HDMI window input	[Esc] 1 PIPS ←	Pips1 ←	
De-select HDMI window input	[Esc] 0 PIPS ←	Pips0 ←	
View HDMI window input	[Esc] PIPS ←	[X1] ←	
Select HDMI pass-through input	1 !	In1 ←	
De-select HDMI pass-through input	0 !	In0 ←	
View HDMI pass-through input	!	[X1] ← In [X1] ←	(Verbose mode 2/3)
Query HDMI input signal presence	[Esc] 0 LS ←	[X2] ← In00 • [X2] ←	(Verbose mode 2/3)
Query HDMI input signal detected rate	[Esc] 1 LS ←	[X3] ← In01 • [X3] ←	(Verbose mode 2/3)
View detected format	1 * \	[X4] ← Vtyp1 * [X4] ←	View video format on HDMI input (Verbose mode 2/3)
Input EDID (HDMI)			
Import EDID (.bin) to input (store) slot	[Esc] I [X5] , <filename> EDID ←	EdidI [X5] ←	Import EDID from <filename> to input slot [X5]
Export EDID (.bin) to PC	[Esc] E [X5] , <filename> EDID ←	EdidE [X5] ←	Export EDID from EDID table slot [X5] to <filename>
View EDID native resolution	[Esc] N [X5] EDID ←	[X6] ← EdidN [X5] * [X6] ←	View native resolution and refresh rate of EDID from EDID table slot [X5] . (Example: 1920x1080@60.00Hz) (Verbose mode 2/3)
View/read EDID of input in Hex format	[Esc] R1 EDID ←	[X7] ← EdidR1 * [X7] ←	(Verbose mode 2/3)
KEY: [X1] = Input window status 0 = HDMI window not displayed 1 = HDMI window displayed [X2] = Input signal 0 = No input signal detected 1 = Input signal detected [X3] = HDMI input signal detected rate (Example: 1920x1080@60.00Hz); no signal = 0x0@0Hz [X4] = Video format 0 = No signal, 1 = DVI, 2 = HDMI [X5] = EDID table slot [X6] = Native resolution & refresh rate Example: 1920x1080@60.00Hz [X7] = EDID data in Hex			

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Output Rate			
Set output rate	[Esc][X101]*[X8]RATE ←	Rate [X101]*[X8]←	Set output rate
View output rate	[Esc][X101]RATE ←	[X8]← Rate [X101]*[X8]←	View output rate (Verbose mode 2/3)

KEY:

[X101] = HDMI Output

Ø = HDMI Output 1 (Primary)

1 = HDMI Output 2 (Secondary)

[X8] = Output rate (see the table below; default = 45).

Resolution	23.98 Hz	24 Hz	25 Hz	29.97 Hz	30 Hz	50 Hz	59.94 Hz	60 Hz
640x480								1Ø
800x600								11
1024x768								12
1280x768								13
1280x800								14
1280x1024								15
1360x768								16
1366x768								17
1440x900								18
1400x1050								19
1600x900								2Ø
1680x1050								21
1600x1200								22
1920x1200								23
480p							24	25
576p						26		
720p			29	3Ø	31	32	33	34
1080i						35	36	37
1080p	38	39	4Ø	41	42	43	44	45*
2048x1080 (2K)	46	47	48	49	5Ø	51	52	53
2048x1200								54
2048x1536								55
2560x1080								56
2560x1440								57
2560x1600								58
3840x2160	59	6Ø	61	62	63	64	65	66
4096x2160	69	7Ø	71	72	73	74	75	76

* = Default

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Screen saver			
Set output sync mode	[Esc] M[X101]*[X9]SSAV ←	SsavM[X101]*[X9]←	
View output sync mode	[Esc] M[X101]SSAV ←	[X9]← SsavM[X101]*[X9]←	(Verbose mode 2/3)
Set time out duration	[Esc] T[X101]*[X10]SSAV ←	SsavT[X101]*[X10]←	Set the time out duration to [X10] seconds
View time out duration	[Esc] T[X101]SSAV ←	[X10]← SsavT[X101]*[X10]←	View current time out duration [X10] (Verbose mode 2/3)
View screen saver status	[Esc] S[X101]SSAV ←	[X11]← SsavS[X101]*[X11]←	View the current screen saver status value [X11] (Verbose mode 2/3)
Set connection attempt timer duration	[Esc] K[X101]*[X2]SSAV ←	SsavK[X101]*[X2]←	
View connection attempt timer duration	[Esc] K[X101]SSAV ←	[X2]← SsavK[X101]*[X2]←	(Verbose mode 2/3)
Color bit depth			
Set video bit depth	[Esc] V[X101]*[X12]BITD ←	BitdV[X101]*[X12]←	
Query video bit depth	[Esc] V[X101]BITD ←	[X12]← BitdV[X101]*[X12]←	View color bit depth (Verbose mode 2/3)
Video output format			
Set format	[Esc] [X101]*[X13]VTP0 ←	Vtpo[X101]*[X13]←	Set output video format
View setting	[Esc] [X101]VTP0 ←	[X13]← Vtpo[X101]*[X13]←	View output video format (Verbose mode 2/3)

KEY:

[X101] = HDMI Output	0 = HDMI Output 1 (Primary) 1 = HDMI Output 2 (Secondary)
[X9] = Output sync mode	0 = Sync always active (default) 1 = No signal present timer, disable output 2 = Inactivity timer, disable output
[X10] = Time out duration	0-999999 (1 second increments) 1000000 = Never times out Default = 30 seconds
[X11] = Screen saver status	0 = Active input detected; timer not running 1 = No active input; timer is running; output sync still active 2 = No active input; timer has expired; output sync disabled
[X12] = Color bit depth	0 = Auto mode (default) 1 = Force 8-bit
[X13] = Output video format	0 = Auto (default) 1 = DVI RGB 4:4:4 Full 2 = HDMI RGB 4:4:4 Full 3 = HDMI RGB 4:4:4 Limited 4 = HDMI YUV 4:4:4 Limited 5 = HDMI YUV 4:2:2 Limited 6 = HDMI YUV 4:2:0 Limited

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Output Freeze			
Set Output Freeze	1*[X100]F/f	Frz1*[X100]↵	
Query Output Freeze	1F/f	[X100]↵ Frz1*[X100]↵	(Verbose mode 2/3)
HDCP			
Set HDCP mode	[Esc]S[X101]*[X16]HDCP↵	HdcpS[X101]*[X16]↵	
Query HDCP mode	[Esc]S[X101]HDCP↵	[X16]↵ HdcpS[X101]*[X16]↵	(Verbose mode 2/3)
HDCP Authorized Device On	[Esc]E1*1HDCP↵	HdcpE1*1↵	HDMI input reports as an HDCP Authorized Device
HDCP Authorized Device Off	[Esc]E1*0HDCP↵	HdcpE1*0↵	HDMI input reports as a non-HDCP Authorized Device
Query HDCP Authorized Device Status	[Esc]E1HDCP↵	[X15]↵ HdcpE1*[X15]↵	View HDCP authorized setting (Verbose mode 2/3)
View input HDCP status	[Esc]I1HDCP↵	[X14]↵ HdcpI1*[X14]↵	View HDCP status on HDMI input (Verbose mode 2/3)
View output HDCP status	[Esc]O[X101]HDCP↵	[X14]↵ HdcpO[X101]*[X14]↵	View HDCP status on HDMI output (Verbose mode 2/3)
HDCP notification			
Enable HDCP notification	[Esc]N[X101]*1HDCP↵	HdcpN[X101]*1↵	
Disable HDCP notification	[Esc]N[X101]*0HDCP↵	HdcpN[X101]*0↵	
Query HDCP notification setting	[Esc]N[X101]HDCP↵	[X17]↵ HdcpN[X101]*[X17]↵	View current HDCP notification setting (Verbose mode 2/3)
Video Mute			
Mute video to black	[X101]*1B/b	Vmt[X101]*1↵	Mute video on HDMI output
Mute sync and video	[X101]*2B/b	Vmt[X101]*2↵	Mute sync and video on HDMI output
Video unmute	[X101]*0B/b	Vmt[X101]*0↵	Unmute video on HDMI output
View video mute	[X101]B/b	[X18]↵ Vmt[X101]*[X18]↵	View current video mute status (Verbose mode 2/3)

KEY:

[X100] = Output Freeze status	0 = Unfreeze	1 = Freeze
[X101] = HDMI Output	0 = HDMI Output 1 (Primary)	1 = HDMI Output 2 (Secondary)
[X14] = HDCP status	0 = Not connected	1 = Not HDCP encrypted
	2 = HDCP encrypted	
[X15] = HDCP authorized status	0 = HDCP authorize off	1 = HDCP authorize on (default)
[X16] = HDCP mode	0 = Follow input (default)	1 = Always encrypt
	2 = Follow input with continuous DVI trials	3 = Always encrypt with continuous DVI trials
	4 = Disable authentication	
[X17] = HDCP notification	0 = Black screen	1 = Green screen (default)
[X18] = Video mute status	0 = Unmute (default)	1 = Mute video 2 = Mute sync

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Front Panel Lockout			
Front panel executive mode	X28X	ExeX28↵	Lock/unlock front panel
View lockout status	X / x	X28↵ ExeX28↵	(Verbose mode 2/3)

KEY:

X28 = Executive mode Ø = Off (default)
1 = On

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Unit name			
Set unit name or hostname	[Esc] [X30] CN ←	Ipn• [X30] ←	
Set unit name or hostname to default	[Esc] • CN ←	Ipn• [X31] ←	Default = ShareLink-Pro-xx-xx-xx (where xx-xx-xx is the last six digits of the unique MAC address).
View unit name or hostname	[Esc] CN ←	[X30] ← Ipn• [X30] ←	View unit name or hostname (Verbose mode 2/3)
Information			
Information request (View unit information)	I / i	Frq [X2] •HdcpI [X14] •HdcpO [X14] •Vmt [X18] •Amt [X19] •Vol [X23] ← Verbose mode 2/3: Inf00*Frq [X2] •HdcpI [X14] •HdcpO [X14] •Vmt [X18] •Amt [X19] •Vol [X23] ←	
Query firmware version	Q / q	[X32] ←	View firmware version
Query firmware and build version	*Q / q	[X33] ←	View firmware version and build version
Query internal temperature	[Esc] 20STAT←	[X34] ← 20Stat [X34] ←	Query internal temperature (Verbose mode 2/3)
Query model name	1I / i	<model name>← Inf01*<model name>←	View model name (Verbose mode 2/3)
Query model description	2I / i	<model description>← Inf02*<model desc.>←	View model description (Verbose mode 2/3)
Query part number	N / n	<part number>← Pno<part number>←	View part number (Verbose mode 2/3)

KEY:

[X2] = Input signal	0 = No input signal detected 1 = Input signal detected
[X14] = HDCP status	0 = Not connected, 1 = Not HDCP Encrypted, 2 = HDCP Encrypted
[X18] = Video mute status	0 = Unmute (default), 1 = Mute video, 2 = Mute sync
[X19] = Audio mute status	0 = Unmute (default), 1 = Mute
[X23] = Volume adjustment range	- 100 to 0 (default is -30dB)
[X30] = Unit name	Alpha-numeric up to 63 characters. No blanks, spaces, or special characters except hyphen (-).
[X31] = Default unit name	Alpha-numeric name. ShareLink-Pro-xx-xx-xx (where xx-xx-xx is the last six digits of the unique MAC address).
[X32] = Firmware version (Example: 1.00)	
[X33] = Firmware version and build version (Example: 1.00.0010)	
[X34] = Internal temperature (2 digits, °C)	

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Verbose mode			
Set verbose mode	[Esc] [X35] CV ←	Vrb [X35] ↵	
View verbose mode	[Esc] CV ←	[X35] ↵	
Dual output display mode			
Set dual display mode	[Esc] D [X350] OMOD ←	OmodD [X350] ↵	
View dual display mode	[Esc] D OMOD ←	[X350] ↵ OmodD [X350] ↵	(Verbose mode 2/3)
Output display layout			
Set display layout mode	[Esc] [X36] OMOD ←	Omod [X36]*[X37] ↵	
View display layout mode	[Esc] OMOD ←	[X36]*[X37] ↵ Omod [X36]*[X37] ↵	(Verbose mode 2/3)
Extended Display Layout Mode (ShareLink Pro 2500 Extend Mode only)			
Set display layout mode	[Esc] E [X36] OMOD ←	OmodE [X36]*[X37] ↵	
View display layout mode	[Esc] E OMOD ←	[X36]*[X37] ↵ OmodE [X36]*[X37] ↵	(Verbose mode 2/3)
Auto-default to HDMI input			
Set auto-default to HDMI input mode	[Esc] [X38] AUSW ←	Ausw [X38] ↵	
View auto-default to HDMI input mode	[Esc] AUSW ←	[X38] ↵ Ausw [X38] ↵	(Verbose mode 2/3)
Apple Screen Mirroring			
Set Apple Screen Mirroring	[Esc] A1* [X39] SHAR ←	SharA1* [X39] ↵	
View Apple Screen Mirroring	[Esc] A1 SHAR ←	[X39] ↵ SharA1* [X39] ↵	(Verbose mode 2/3)
Set Apple Screen Mirroring Device Discovery Proxy Service	[Esc] A1* [X391] DVRY ←	DvryA1* [X391] ↵	
View Apple Screen Mirroring Device Discovery Proxy Service	[Esc] A1 DVRY ←	[X391] ↵ DvryA1* [X391] ↵	(Verbose mode 2/3)
mDNS Hostname			
Set mDNS hostname	[Esc] H [X78] ZCON ←	ZconH● [X78] ↵	
Clear mDNS hostname	[Esc] H● ZCON ←	ZconH● ↵	
View mDNS hostname	[Esc] H ZCON ←	[X78] ↵ ZconH● [X78] ↵	(Verbose mode 2/3)

KEY:

[X35] = Verbose response mode	0 = Clear (none) (default)	1 = Verbose mode
	2 = Tagged responses	3 = Verbose + tagged responses
[X36] = Layout mode (1-11)	1 - 11 = Layout group #1 to Layout group #11 (Default in Mirror Mode = 1; Default in Extend Mode = 6)	
[X350] = Dual output display mode	1 = Mirror (default)	2 = Extend
[X37] = Current layout number (1-25)		
[X38] = HDMI input mode	0 = Disabled	1 = Enabled (default)
[X39] = Apple screen mirroring mode	0 = Disabled	1 = Enabled (default)
[X391] = Device discovery proxy service	0 = Disabled (default)	1 = Enabled
[X78] = mDNS hostname (alpha-numeric up to 63 characters; no blanks, spaces, or special characters except hyphen (-))		

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Enable/disable HDMI input			
Enable HDMI input	[Esc] H1MODE ←	ModeH[X40]↵	
Disable HDMI input	[Esc] H0MODE ←	ModeH[X40]↵	
View HDMI input setting	[Esc] HMODE ←	[X40]↵ ModeH[X40]↵	(Verbose mode 2/3)
Show/hide HDMI client app controls			
Show HDMI client app controls	[Esc] V1APPC ←	AppcV[X401]↵	
Hide HDMI client app controls	[Esc] V0APPC ←	AppcV[X401]↵	
View HDMI client app controls setting	[Esc] VAPPC ←	[X401]↵ AppcV[X401]↵	(Verbose mode 2/3)
HDMI client app controls label			
Set client app HDMI controls label	[Esc] 1, [X41]NI ←	Nmi1, [X41]↵	
Set label back to default (HDMI)	[Esc] 1, ●NI ←	Nmi1, HDMI↵	
View client app HDMI controls label	[Esc] 1NI ←	[X41]↵ Nmi1, [X41]↵	(Verbose mode 2/3)
WebShare			
Set WebShare	[Esc] X[X402]SHAR ←	SharX[X402]↵	
View WebShare setting	[Esc] XSHAR ←	[X402]↵ SharX[X402]↵	(Verbose mode 2/3)
Hide/show IP address in client apps			
Hide IP address	[Esc] I1APPC ←	AppcI1↵	Mask IP address
Show IP address	[Esc] I0APPC ←	AppcI0↵	No IP address mask
Query IP address visibility setting	[Esc] IAPPC ←	[X403]↵ AppcI[X403]↵	(Verbose mode 2/3)
KEY: [X40] = HDMI controls setting 0 = Disabled 1 = Enabled (default) [X41] = Client app controls label UTF-8 characters permitted, maximum of 16 characters [X401] = HDMI client app controls 0 = Hide 1 = Show (default) [X402] = WebShare mode 0 = Disabled 1 = Enabled (default) [X403] = IP address visibility setting 0 = Visible (default) 1 = Masked			

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Access modes			
Set access mode	[Esc] M [X42] SHAR ←	SharM [X42]*[X43] ←	
View access mode	[Esc] MSHAR ←	[X42]*[X43] ← SharM [X42]*[X43] ←	(Verbose mode 2/3)
Set confirmation-code mode	[Esc] M [X44] PINC ←	PincM [X44] ←	
View confirmation-code mode	[Esc] MPINC ←	[X44] ← PincM [X44] ←	(Verbose mode 2/3)
Set fixed login key code	[Esc] V [X45] PINC ←	PincV [X45] ←	
View current login key code	[Esc] VPINC ←	[X45] ← PincV [X45] ←	(Verbose mode 2/3)
Set random code interval	[Esc] I [X46] PINC ←	PincI [X46] ←	
View random code interval	[Esc] IPINC ←	[X46] ← PincI [X46] ←	(Verbose mode 2/3)
Set WebView password option	[Esc] M [X47] WBSH ←	WbshM [X47] ←	
View WebView password option	[Esc] MWBSH ←	[X47] ← WbshM [X47] ←	(Verbose mode 2/3)
Set WebView password	[Esc] P<password>WBSH ←	WbshP ←	
Set WebView password back to default	[Esc] P●WBSH ←	WbshP**** ←	Default = WebView
View WebView password	[Esc] PWBSH ←	**** ← ←	If password is not set to default If password is set to default
		WbshP**** ←	(Verbose mode 2/3)
Set password	[Esc] +PSWD*<username> ← <current password> ← <new password> ← <new password> ←	Pswd*<username> ←	

NOTES:

- The PSWD command must use the carriage return character (hex 0D) and not the pipe character (|) as delimiters. This allows the pipe character to be part of a password, if desired.
- Password can be up to 128 characters. All human-readable characters are permitted. The password cannot be a single space. Passwords are case-sensitive.
- The PSWD command will return E35 if the account <username> does not exist.

KEY:

[X42] = Access mode	1 = Full control 2 = Moderated 3 = Run-time (default)
[X43] = Run time access mode	1 = Full control 2 = Moderated
[X44] = Confirmation code mode	0 = None 1 = Fixed 2 = Random (default)
[X45] = Login key code	Four digit value (default = 0000)
[X46] = Random code interval	Four digit value (1 to 9998) in minutes Default = 9999 = random code generated after every collaboration session (after the last user disconnects)
[X47] = WebView password option	0 = No access (disabled) 1 = No prompt for password (default) 2 = Custom password 3 = Follow confirmation code

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Standby screen/status bar configuration			
Set status bar mode	[Esc]M[X48] OSDL ←	Osd1M[X48]↵	
View status bar mode	[Esc]M OSDL ←	[X48]↵ Osd1M[X48]↵	(Verbose mode 2/3)
Set enable/disable status bar pop-up	[Esc]P[X79] OSDL ←	Osd1P[X79]↵	
View status bar pop-up	[Esc]P OSDL ←	[X79]↵ Osd1P[X79]↵	(Verbose mode 2/3)
Set status bar pop-up timer	[Esc]T[X791] OSDL ←	Osd1T[X791]↵	
View status bar pop-up timer	[Esc]T OSDL ←	[X791]↵ Osd1T[X791]↵	(Verbose mode 2/3)
Set label	[Esc]L[X49]*[X50] OSDL ←	Osd1L[X49]*[X50]↵	
View label	[Esc]L[X49] OSDL ←	[X50]↵ Osd1L[X49]*[X50]↵	(Verbose mode 2/3)
Show label and value	[Esc]V[X49]*1 OSDL ←	Osd1V[X49]*[X51]↵	
Hide label and value	[Esc]V[X49]*0 OSDL ←	Osd1V[X49]*[X51]↵	
Query label visibility	[Esc]V[X49] OSDL ←	[X51]↵ Osd1V[X49]*[X51]↵	(Verbose mode 2/3)
Set background color	[Esc]K[X77] OSDL ←	Osd1K[X77]↵	
View background color	[Esc]K OSDL ←	[X77]↵ Osd1K[X77]↵	(Verbose mode 2/3)
Set font color	[Esc]C[X77] OSDL ←	Osd1C[X77]↵	
View font color	[Esc]C OSDL ←	[X77]↵ Osd1C[X77]↵	(Verbose mode 2/3)
Set still image transition effect	[Esc]E[X53] SSHW ←	SshwE[X53]↵	
View still image transition effect	[Esc]E SSHW ←	[X53]↵ SshwE[X53]↵	(Verbose mode 2/3)

KEY:

[X48] = Status bar mode	0 = Hide whenever content is shared 1 = Always shown (default) 2 = Hide when one content is shared 3 = Always hidden
[X49] = Label	1 = Hostname 2 = IP address A 3 = IP address B, 4 = Login code 5 = Custom message 6 = Dynamic notifications/messages 7 = Clock
[X50] = Label value (max 128 characters)	
[X51] = Label visibility setting	0 = Hide 1 = Show (default)
[X53] = Still image transition effect	0 = Cut (default) 1 = Fade
[X77] = Color described as RGB Hex triplets (RRGGBB)	
[X79] = Status bar pop-up	0 = Disabled 1 = Enabled (default)
[X791] = Status bar pop-up timer	1s - 300s in 1s increments (default = 20s)

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Set still image transition time	[Esc] T [X54] SSHW ←	SshwT [X54] ↵	
View still image transition time	[Esc] T SSHW ←	[X54] ↵ SshwT [X54] ↵	(Verbose mode 2/3)
Set duration between still image sequences	[Esc] D [X55] SSHW ←	SshwD [X55] ↵	
View duration between still image sequences	[Esc] D SSHW ←	[X55] ↵ SshwD [X55] ↵	(Verbose mode 2/3)
Set file path for Standby/ Connected Image Gallery	[Esc] P [X56] , <filepath> SSHW ←	SshwP [X56] , <filepath> ↵	
Set file path back to default	[Esc] P [X56] , ● SSHW ←	SshwP [X56] , ● ↵	
View file path for Standby/ Connected Image Gallery	[Esc] P [X56] SSHW ←	<filepath> ↵ SshwP [X56] , <filepath> ↵	(Verbose mode 2/3)

KEY:

[X54] = Still image transition time	500 to 3000 ms increments (default = 1000 ms)
[X55] = Time between still image sequences	1000 to 60000 ms in 1 ms increments (default = 10000 ms)
[X56] = Gallery setting	1 = Standby image gallery 2 = Connected image gallery

Command	ASCII Command	Response	Additional Description
Connections			
Query list of connected user information (up to 64 entries)	[Esc] L0SHAR ←	<pre> X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵ ... X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵ X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵↵ (Verbose mode 2/3): SharLX64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵ ... X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵ X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵↵ Response example: 1358418984*Nexus*1320581533*android,extron,screen*1 *5000*0*5000*10000*7190*1057377*↵ 1406210687*user*1588900067*windows,miracast,screen*1*0*0* 5000*10000*7307*1215302*↵ 1592446298*Rick's iPhone**ios,extron,none*1*****4448**↵ 1842397516*192.168.2.100*1982175197*,sharelink,stream*1*0 *0*5000*10000*7307*4777368*BlueTeam↵↵ </pre>	
Query specific connected user information	[Esc] L[X64]SHAR ←	<pre> X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵ ... X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵↵ (Verbose mode 2/3): SharLX64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵ ... X64*X65*X66*X67*X68*X69*X70*X71*X72*X73*X75*X132↵↵ </pre>	
Query total number of users connected	[Esc] KSHAR ←	<pre> X74↵ SharKX74↵ </pre>	View total number of users connected (max 64) (Verbose mode 2/3)

KEY:

- X64** = Connection ID (10 digits)
- X65** = User name (aphanumeric text)
- X66** = Stream ID (10 digits) (if connection is not streaming, is be empty)
- X67** = platform,client,type (example: windows,miracast,screen)
 - Platform = android, iOS, iPadOS, macOS, windows, chrome, linux
 - Client = airplay, extron, miracast, miracast-infra, webshare, conferenceshare
 - Type = none, app, audio, casting, image, screen, video
- X68** = Connection approved (0 = pending, 1 = approved)
- X69** = X: x position of the window as a percentage of the screen width times 100
- X70** = Y: y position of the window as a percentage of the screen height times 100
- X71** = W: width of the window as a percentage of the screen width times 100
- X72** = H: height of the window as a percentage of the screen height times 100
- X73** = Connection age (in seconds)
- X74** = Total number of users connected (integer – maximum 64)
- X75** = Video port ID (7 digits)
- X132** = Device name (alpha-numeric client friendly name for an active learning connection)

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Force user to stop sharing	[Esc] S[X64]SHAR ←	SharS[X64] ←	Force user [X64] to stop sharing content. If [X64] = 0, stop sharing all.
Force disconnect user	[Esc] D[X64]SHAR ←	SharD[X64] ←	Force disconnection of user [X64]. If [X64] = 0, disconnect all
Swap positions of two streams	[Esc] W[X64]*[X64]SHAR ←	SharW[X64]*[X64] ←	
Show a shared content in full screen	[Esc] F[X64]*1SHAR ←	SharF[X64]*1 ←	
Revert full screen content	[Esc] F0SHAR ←	SharF0 ←	Revert full screen content back to quadrant view
Query full screen state	[Esc] FSHAR ←	[X76] ← SharF[X64]*[X76] ←	View full screen state (Verbose mode 2/3) If [X76] = 0, return response is [X76] ←
Approve user connection request (moderator mode only)	[Esc] C[X64]*1SHAR ←	SharC[X64]*1 ←	Approve user request to connect
Reject user connection request (moderator mode only)	[Esc] C[X64]*0SHAR ←	SharC[X64]*0 ←	Reject user request to connect
Approve user share request (moderator mode only)	[Esc] R[X64]*1SHAR ←	SharR[X64]*1 ←	Approve user request to share content
Reject user share request (moderator mode only)	[Esc] R[X64]*0SHAR ←	SharR[X64]*0 ←	Reject user request to share content

SIS-over-SSH

NOTES:

- The echo setting must match the type of SSH client used. With echo **enabled** (default), characters that are typed into the client window (such as PuTTY) are echoed in the window along with the SIS response, and are also sent to the server.
- With echo **disabled**, the characters are not echoed but are simply sent to the server.
- The echo setting applies only to current (not global) connection.
- **Control systems should turn echo off after connecting.**

Enable echo (default)	[Esc] 1ECHO ←	Echo1 ←	Echo on: All data sent is echoed back to the sender, followed by the response. Extra carriage returns may also be received when echo is on.
Disable echo	[Esc] 0ECHO ←	Echo0 ←	Echo off: only the response is sent to the sender.
View echo status	[Esc] ECHO ←	[X75] ←	View the echo setting
Set current port timeout	[Esc] 0*[X62]TC ←	Pti0*[X62] ←	
View current port timeout	[Esc] 0TC ←	[X62] ← Pti0*[X62] ←	(Verbose mode 2/3)
Set global port timeout	[Esc] 1*[X62]TC ←	Pti1*[X62] ←	
View global port timeout	[Esc] 1TC ←	[X62] ←	

KEY:

[X62] = Port timeout: 1 (= 10 seconds) to 65000 (650,000 seconds) (Default is 30 = 300 seconds = 5 minutes) [X64] = Connection ID (10 digits)

[X75] = Echo status: 0 = disabled, 1 = enabled (default)

[X76] = Full screen state: 0 = disabled, 1 = enabled

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Reboot			
Reboot device	[Esc] 1B00T←	Boot1↵	
Restart the network	[Esc] 2B00T←	Boot2↵	
Reset			
Reset to factory defaults	[Esc] ZXXX←	Zpx↵	Reset all device settings to default values, but retain user-loaded files and IP settings.
NOTE: This reset mode does not affect passwords and IP related settings such as IP address, subnet mask, gateway address, DHCP setting, and port mapping.			
Erase all files from flash memory	[Esc] ZFFF←	Zpf↵	Erase all files from flash (user) memory.
NOTE: This reset only removes files created in the user space, which includes those created by the backup and restore functions, software configuration tools, image captures, user logo files, and other user-supplied HTML files. Files used by firmware for internal operations such as saving non-volatile settings are not removed.			
Absolute reset, retaining IP settings	[Esc] ZY←	Zpy↵	Reset all device settings to default values and delete user-loaded files, but retain IP settings.
NOTE: - This reset removes all device settings, including the file system and passwords, but retains IP settings such as IP address, subnet mask, gateway address, DHCP setting, and port mapping (Telnet, Web, and direct access) in order to preserve communication with the device. This reset is recommended after a firmware update. - Admin password resets to extron.			
Reset network settings	[Esc] 1ZQQQ←	Zpq1↵	Reset IP settings only.
Full factory reset	[Esc] ZQQQ←	Zpq↵	Reset all device and IP settings to default values and delete user-loaded files.
NOTE: Admin password resets to extron.			

Unsolicited Responses

Response (Device to Host)		Description
Input selection and status	Pips1 $\leftarrow$	HDMI window input is selected
	Pips0 $\leftarrow$	HDMI window input is de-selected
	In1 $\leftarrow$	HDMI pass-through input is selected
	In0 $\leftarrow$	HDMI pass-through input is de-selected
	In00● $\overline{x2}$ $\leftarrow$	HDMI input signal presence changed
	Reconfig $\leftarrow$	Change of the input frequency
Detected format changed	Vtyp1* $\overline{x4}$ $\leftarrow$	Detected video format changed.
HDCP status	Hdcp $\overline{x101}$ * $\overline{x14}$ $\leftarrow$	Change in the HDCP status of the HDMI input.
	Hdcp $\overline{x101}$ * $\overline{x14}$ $\leftarrow$	Change in the HDCP status of the HDMI output.
Hot plug	Hp1g $\overline{x101}$ 0 $\leftarrow$	Hot plug occurs on the local HDMI output.
Total number of users connected	SharK $\overline{x74}$ $\leftarrow$	Unsolicited response sent upon detection of the following: A new user has connected to the ShareLink Pro. A connected user has disconnected from the ShareLink Pro.
User changes	UserChg $\leftarrow$	Unsolicited response sent upon detection of the following: A connected user has started sharing content. A connected user has stopped sharing content. A user is requesting to connect to the ShareLink Pro (in moderator mode only). A connected user is requesting to share content (in moderator mode only).

KEY:

$\overline{x2}$ = Input signal	0 = No input signal detected 1 = Input signal detected
$\overline{x4}$ = Video format	0 = No signal 1 = DVI 2 = HDMI
$\overline{x14}$ = HDCP status	0 = Not connected 1 = Not HDCP Encrypted 2 = HDCP Encrypted
$\overline{x74}$ = Total number of users connected (integer – maximum 64)	
$\overline{x101}$ = HDMI Output	0 = HDMI Output 1 (Primary) 1 = HDMI Output 2 (Secondary)

Expo and Streaming

NOTE: The following SIS commands for the Expo streaming feature require a LinkLicense.

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Expo Feature			
Enable or Disable Expo feature	[Esc] P X104 SHAR←	SharP X104 ↵	
View Expo feature	[Esc] PSHAR←	X104 ↵ SharP X104 ↵	(Verbose mode 2/3)
View player state	[Esc] QSHAR←	X105 ↵ SharQ X105 ↵	(Verbose mode 2/3)
Streaming Input			
View current stream statistics	[Esc] JBITR←	<report in JSON format>↵ <i>Example:</i> {“audio_bitrate_kbps”:0, “video_bitrate_kbps”:0, “peak_video_bitrate_kbps”:0, “stream_bitrate_kbps”:0, “received_packets”:0, “misordered_packets”:0, “duplicated_packets”:0, “lost_packets”:0, “dropped_packets”:0, “jitter_ms”:0, “jitter_audio_ms”:0, “jitter_video_ms”:0}↵	
View current stream mode	[Esc] SMOD←	X80 ↵ Smod X80 ↵	(Verbose mode 2/3)
View current source audio sample rate	[Esc] AUSR←	X81 ↵ Ausr X81 ↵	(Verbose mode 2/3)

KEY:

~~X104~~ = Expo feature

0 = Disabled (default)

1 = Continuous

2 = Temporary

~~X105~~ = Player state

1 = Standby 2 = Connected 3 = Expo

4 = Expo Standby 5 = Sharing

~~X80~~ = Stream mode

0 = Disabled

1 = Audio

2 = Video

3 = Audio and video (default)

~~X81~~ = Source audio sample rate

0 = Reserved

1 = Reserved

2 = 44.1 kHz

3 = 48 kHz

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Streaming Input Playback			
Start playback	[Esc] S1* [X83] PLYR←	PlyrS1* [X83] ←	Play channel 1 at speed [X83] .
Pause playback	[Esc] E1PLYR←	PlyrE1* [X83] ←	
Stop playback	[Esc] O1PLYR←	PlyrO1←	
View playback state	[Esc] Y1PLYR←	[X84] ← PlyrY1* [X84] ←	(Verbose mode 2/3)
Set loop play on	[Esc] R1*1PLYR←	PlyrR1*1←	
Set loop play off	[Esc] R1*0PLYR←	PlyrR1*0←	
View loop play status	[Esc] R1PLYR←	[X85] ← PlyrR1* [X85] ←	(Verbose mode 2/3)
Enable subtitles	[Esc] E1*1SUBT←	SubtE1*1←	
Disable subtitles	[Esc] E1*0SUBT←	SubtE1*0←	
View subtitle status	[Esc] E1SUBT←	[X85] ← SubtE1* [X85] ←	(Verbose mode 2/3)
Select next channel	[Esc] N1PLYR←	PlyrN1* [X86] ← PlyrT1* [X86] ← PlyrS1* [X83] ←	Response returns the current channel number (T) and the current playback speed (S).
Select previous channel	[Esc] P1PLYR←	PlyrP1* [X86] ← PlyrT1* [X86] ← PlyrS1* [X83] ←	Response returns the current channel number (T) and the current playback speed (S).
View current timecode	[Esc] K1PLYR←	[X87] ← PlyrK1* [X87] ←	(Verbose mode 2/3)
View current clip length	[Esc] Z1PLYR←	[X87] ← PlyrZ1* [X87] ←	[X87] = Timecode in HH:MM:SS:DD format (Verbose mode 2/3)
Seek by offset	[Esc] J1* [X88] PLYR←	PlyrJ1* [X88] ←	
Seek to timecode	[Esc] K1* [X87] PLYR←	PlyrK1* [X87] ←	Set playback position
View current timecode	[Esc] K1PLYR←	[X87] ← PlyrK1* [X87] ←	(Verbose mode 2/3)
Load media item path	[Esc] U1* [X89] PLYR←	PlyrU1* [X89] ←	
View current media path	[Esc] U1PLYR←	[X89] ← PlyrU1* [X89] ←	(Verbose mode 2/3)

KEY:

[X83] = Playback speed 1 = normal speed
[X84] = Player state 0 = Stop, 1 = Play, 2 = Pause
[X85] = Loop play status 0 = Off (disable) 1 = On (enable)
[X86] = Track number (1 to maximum tracks currently defined)
[X87] = Timecode (HH:MM:SS:DD, where DD is decimal seconds up to nine digits)
[X88] = Time (in seconds)
[X89] = File path

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Streaming Input Channel (Preset)			
Short Form			
View current preset	T	X93 ↵	Get current channel number. Response is 00 if no valid channel preset is loaded.
Recall preset by reference	X93 T	TvprT1* X93 ↵	Load channel X93
Next preset	+T	TvprT1* X93 ↵	Channel up
Previous preset	-T	TvprT1* X93 ↵	Channel down
Long Form			
View current preset	Esc T1TVPR↵	X93 ↵	Get current channel number. Response is 00 if no valid channel preset is loaded.
Recall preset by reference	Esc T1* X93 TVPR↵	TvprT1* X93 ↵	Load channel X93
Next preset	Esc T1+TVPR↵	TvprT1* X93 ↵	Channel up
Previous preset	Esc T1-TVPR↵	TvprT1* X93 ↵	Channel down
View all presets	Esc GTVPR↵	[{...},{...},...]↵	Get channel list
<i>Example:</i> [{"preset":1, "uri":file:///clips/ clip1.mp4,"name":"Chan1"},{...},...]			
Save URI to preset	Esc U X93 * X90 TVPR↵	TvprU X93 * X91 ↵	Save URI to channel X93
Save current URI to preset	Esc S1* X93 TVPR↵	TvprS1* X93 ↵	Save current URI to channel X93
Import channel preset	Esc I* X89 TVPR↵	TvprI* X89 ↵	
Export channel preset	Esc E* X89 TVPR↵	TvprE* X89 ↵	
Delete preset	Esc X X93 TVPR↵	TvprX X93 ↵	
Delete all presets	Esc X*0TVPR↵	TvprX↵	

KEY:

X89 = File path (file:///folder/filename, network path, network port path or RTSP stream URI)

X90 = Media URI (Uniform Resource Identifier). The prefix "file:/" is optional.

X91 = Preset number, and Media URI Example: [{"preset":1, "uri":file:///clips/clip1.mp4,
"name":"Chan1"}, ...]

X93 = Channel number 1 - 999

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
View file-system directory structure			
View file-system directory structure	<code>[Esc][X113]*[X114]TREE ←</code>		
	<code>[Esc]TREE ←</code>	<pre> /a↵ /a/b↵ /a/b/c↵ /Connected↵ /Connected/ Thumbnails↵ /media↵ /nortxe-backup↵ /shares↵ /Standby↵ /Standby/ Thumbnails↵ /tmp↵↵ </pre>	
	<code>[Esc]0TREE ←</code>	<pre> /a↵ /Connected↵ /media↵ /nortxe-backup↵ /shares↵ /Standby↵ /tmp↵↵ </pre>	
	<code>[Esc]1*/aTREE ←</code>	<pre> /b↵ /b/c↵↵ Tree1*/a*/b↵ /b/c/↵↵↵ </pre>	(Verbose mode 2/3)
KEY: <code>[X113]</code> = Recursion (optional) <code>0</code> = Disabled <code>1</code> = Enabled (default) <code>[X114]</code> = Directory path (optional)			

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
SAP (Session Announcement Protocol)			
View list of discovered streams	[Esc] X SAP ←	[list of discovered streams in JSON format] ←	<i>Example:</i> [{"sdp":"","source":"","...}, {"sdp":"","source":"","...}] ← Xsap[[], {}, ...] ← (Verbose mode 2/3)
Network Status and Statistics			
View network status	[Esc] X115 NWKS ←	<report in JSON format> ←	<i>Example:</i> {"collisions": 0, "rx_bytes": 104222342, "rx_dropped": 2197, "rx_errors": 0, "rx_packets": 98850, "tx_bytes": 20497039, "tx_dropped": 0, "tx_errors": 0, "tx_packets": 42050} ← NwksX115<report in JSON format> ← (Verbose mode 2/3)
Buffering			
Set player buffering	[Esc] E1* X85 PBUF ←	PbufE1* X85 ←	
View player buffering status	[Esc] E1 PBUF ←	X85 ← PbufE1* X85 ←	(Verbose mode 2/3)
Set initial play threshold	[Esc] I1* X116 PBUF ←	PbufI1* X116 ←	
View initial play threshold	[Esc] I1 PBUF ←	X116 ← PbufI1* X116 ←	(Verbose mode 2/3)
Set rebuffering play threshold	[Esc] R1* X117 PBUF ←	PbufR1* X117 ←	
View rebuffering play threshold	[Esc] R1 PBUF ←	X117 ← PbufR1* X117 ←	(Verbose mode 2/3)
Prefer RTSP Multicast			
Prefer RTSP Multicast	[Esc] Q1* X85 PLYR ←	PlyrQ1* X85 ←	Request multicast stream first and revert to requesting a unicast stream if necessary.
View RTSP Multicast preference	[Esc] Q1 PLYR ←	X85 ← PlyrQ1* X85 ←	(Verbose mode 2/3)
KEY: X85 = Buffering and RTSP Multicast setting 0 = Off/Disabled 1 = On/Enabled X115 = Network interface 1 = LAN A X116 = Initial play threshold (sec) X117 = Rebuffering play threshold (sec)			

Bluetooth

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Enable/Disable Bluetooth	[Esc] E [X134] BLUE ←	BlueE [X134] ←	
Query Bluetooth	[Esc] EBLUE ←	[X134] ← BlueE [X134] ←	(Verbose mode 2/3)
Set Bluetooth mode	[Esc] M [X133] * [X134] BLUE ←	BlueM [X133] * [X134] ←	
Query Bluetooth mode	[Esc] M [X133] BLUE ←	[X134] ← BlueM [X133] * [X134] ←	(Verbose mode 2/3)
Set Airplay Bluetooth	[Esc] W [X135] BLUE ←	BlueW [X135] ←	
Query Airplay Bluetooth	[Esc] WBLUE ←	[X135] ← BlueW [X135] ←	(Verbose mode 2/3)

KEY:

[X133] = Bluetooth discovery setting

0 = ShareLink Pro App

1 = Apple Screen Mirroring (AirPlay for iOS/macOS)

[X134] = Bluetooth mode

0 = Disabled

1 = Enabled (Default)

[X135] = NIC (Network Interface Card) Number

1 = eth0/LAN A (Default)

CEC Commands

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
CEC Enable/Disable			
Enable/disable input CEC	[Esc] I1 * [X16] CCEC ←	CcecI1 * [X16] ←	
View input CEC status	[Esc] I1CCEC ← Verbose mode 2/3	[X17] * [X18] * [X19] ← CcecI1 * [X17] * [X18] * [X19] ←	
Enable/disable one output CEC	[Esc] O [X1] * [X16] CCEC ←	CcecO [X1] * [X16] ←	
Enable/disable all outputs CEC	[Esc] O [X16] * CCEC ←	CcecO [X16] ←	
View output CEC status	[Esc] O [X1] CCEC ← Verbose mode 2/3	[X17] * [X18] * [X19] ← CcecO [X1] * [X17] * [X18] * [X19] ←	

KEY:

[X1] = Output

[X16] = CEC mode

[X17] = CEC status

1

0 = Disable CEC operations for this IO port (default);

1 = Reserved – currently returns E13

2 = Enable insertion (unidirectional)

4 = Enable insertion and publish received CEC messages (bidirectional)

8 = Enable insertion and publish all received CEC messages (bidirectional)

20 = Manual mode, similar to mode 8, but less automatic (for 3rd- party software)

0 = CEC mode 0 disabled

1 = CEC mode 1 (reserved for possible future use)

2 = CEC mode 2 enabled but no device detected (unidirectional)

3 = CEC mode 2 enabled and device detected (unidirectional)

4 = CEC mode 4 enabled but no device detected (bidirectional)

5 = CEC mode 4 enabled and device detected (bidirectional)

8 = CEC mode 8 enabled but no CEC device present/detected (bidirectional)

9 = CEC mode 8 enabled and CEC device present/detected (bidirectional)

20 = CEC mode 20 enabled but no CEC device present/detected (bidirectional)

21 = CEC mode 20 enabled and CEC device present/detected

[X18] = Source logical address (our pseudo) 0 through 15 (-1 = not found or port not enabled)

[X19] = Destination logical address (theirs) 0 through 15 (-1 = not found or port not enabled)

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
Send CEC Commands			
Default discovered target logical address			
Send CEC data to Input (upstream source)	Esc I1* X20 DCEC ← or Esc I1* X24 DCEC ←	DcecI1* X25 X24 * X21 ↵	For Send CEC Commands, X20 and X24 can be used interchangeably. However, the response is always a hex representation (X24). For example: %2A%07%FF.
Send CEC data to Output (downstream sink)	Esc O X1 * X20 DCEC ← or Esc O X1 * X24 DCEC ←	DcecO X1 * X25 X24 * X21 ↵	
Send Specified Logical Address to Specified Target Logical Address			
Send CEC data to Input (upstream source)	Esc I1* X18 * X19 * X20 DCEC ←	DcecI1* X20 * X21 ↵	
Send CEC data to Output (downstream sink)	Esc O X1 * X18 * X19 * X20 DCEC ←	DcecO X1 * X20 * X21 ↵	
Broadcast to all devices			
Send CEC data to Input (upstream source)	Esc I1*15* X20 DCEC ← or Esc I1*15* X24 DCEC ←	DcecI1* X25 X24 * X21 ↵	
Send CEC data to Output (downstream sink)	Esc O X1 *15* X20 DCEC ← or Esc O X1 *15* X24 DCEC ←	DcecO X1 * X25 X24 * X21 ↵	
NOTE: Attempting to send a CEC command to an input or output that is disabled returns an E14 error.			
KEY: X1 = Output X16 = CEC mode X17 = CEC status X18 = Source logical address (our pseudo) X19 = Destination logical address (theirs) X20 = CEC command X21 = Send result X24 = CEC data X25 = CEC address byte 1 0 = Disable CEC operations for this IO port (default); 1 = Reserved – currently returns E13 2 = Enable insertion (unidirectional) 4 = Enable insertion and publish received CEC messages (bidirectional) 8 = Enable insertion and publish all received CEC messages (bidirectional) 20 = Manual mode, similar to mode 8, but less automatic (for 3rd- party software) 0 = CEC mode 0 disabled 1 = CEC mode 1 (reserved for possible future use) 2 = CEC mode 2 enabled but no device detected (unidirectional) 3 = CEC mode 2 enabled and device detected (unidirectional) 4 = CEC mode 4 enabled but no device detected (bidirectional) 5 = CEC mode 4 enabled and device detected (bidirectional) 8 = CEC mode 8 enabled but no CEC device present/detected (bidirectional) 9 = CEC mode 8 enabled and CEC device present/detected (bidirectional) 20 = CEC mode 20 enabled but no CEC device present/detected (bidirectional) 21 = CEC mode 20 enabled and CEC device present/detected 0 through 15 (-1 = not found or port not enabled) 0 through 15 (-1 = not found or port not enabled) Predefined actions as strings within double quotes: “PwrOn”, “PwrOff”, or “ShowMe” 0 = Failed (NAK) device not detected 1 = Success (ACK) device detected 2 = Unable to send User selected elements (0 to 15) in the form of percent sign followed by 2 hex digits (Example: %2A%07%FF) In the form of percent sign followed by 2 hex digits (Example: %E0 = Extron output [14] to TV [0])			

Command	ASCII Command (Host to Device)	Response (Device to Host)	Additional Description
NOTE: CEC Usage Examples			
Unidirectional Mode — No CEC received data messages (including answers to queries) desired			
Set mode	[Esc] 02*2CCEC ←	Ccec02*2 ←	Power on TV on output 2.
Send data	[Esc] 02*"PwrOn"DCEC ← or [Esc] 02*%04DCEC ←	Dcec02*%E0%04*1 ←	
Bidirectional Mode — CEC received data messages desired			
Set mode	[Esc] 03*4CCEC ←	Ccec03*4 ←	Switch TV on output 3 to our signal (HDMI 2 on TV).
Send data	[Esc] 03*"ShowMe"DCEC ← or [Esc] 03*15*%82%20%00DCEC ←	Dcec03*%EF%82%20%00*1 ←	
Examples of possible unsolicited messages		Ceco3*%0F%32%65%6E%67*1 ← Ceco3*%0E*1 ←	TV broadcast command to set the menu language to English ("eng"). TV pings us to confirm we are still there.
NOTE: Asynchronous received data messages from CEC in bidirectional mode (4) format:			
		Ceci1* [X25] [X24] * [X21] ←	
		Ceco [X1] * [X25] [X24] * [X21] ←	

Set Logical Address			
Set input logical address	[Esc] I1* [X18] LCEC ←	LcecI1* [X18] ←	
View input logical address	[Esc] I1LCEC ← Verbose mode 2/3	[X18] ← LcecI1* [X18] ←	
Set output logical address	[Esc] O [X1] * [X18] LCEC ←	LcecO [X1] * [X18] ←	
View output logical address	[Esc] O [X1] LCEC ← Verbose mode 2/3	[X18] ← LcecO [X1] * [X18] ←	
KEY: [X1] = Output 1 [X18] = Source logical address (our pseudo) 0 through 15 (-1 = not found or port not enabled)			
Other CEC Commands			
List CEC device presence	[Esc] LQCEC ← Verbose mode 2/3	[X23] * [X23] ... [X23] ← QcecL* [X23] * [X23] ... [X23] ←	Input*output 1 ... output x
Rediscover device on input	[Esc] I1QCEC ←	QcecI1*1 ← QcecI1*1* [X21] ← ... QcecI1*14* [X21] ←	
Rediscover device on output	[Esc] O [X1] QCEC ←	QcecO [X1] *1 ← QcecO [X1] *0* [X21] ← ... QcecO [X1] *13* [X21] ←	
Report physical address of output port	[Esc] O [X1] PCEC ← Verbose mode 2/3 Example	[X22] ← PcecO [X1] * [X22] ← %10%00	For 1000 (usually first HDMI input on TV).
View Extron CEC engine version	39Q Verbose mode 2/3	<version number> ← Ver39* <version number> ←	
KEY: [X1] = Output 1 [X21] = Send result 0 = Failed (NAK) device not detected, 1 = Success (ACK) device detected, 2 = Unable to send [X22] = CEC physical address 4 hexadecimal digits (Example: %10%00 for 1000) [X23] = CEC device presence 0-F = Device address, X = Missing, - = CEC port is off			

Reference Information

This section covers the following:

- [Mounting](#)
- [Firmware Download](#)
- [Firewall Traversal](#)
- [Secure Sockets Layer \(SSL\) Certificates](#)
- [Troubleshooting](#)
- [Best Practices for Cleaning Your Extron Products](#)

Mounting

The ShareLink Pro 2500 can be placed on a tabletop, or mounted in a rack or underneath a desk.

NOTE: Do not block or restrict air ventilation holes on the top and sides of the ShareLink Pro 2500.

Tabletop Mounting

Attach the provided rubber feet to the bottom four corners of the enclosure.

Furniture Mounting

Go to www.extron.com for a list of available furniture mounting kits. To install this device to furniture, follow the mounting kit instructions.

Rack Mounting

UL Rack Mounting Guidelines

The following Underwriters Laboratories (UL) guidelines pertain to the safe installation of the ShareLink Pro enclosure in a rack

CAUTION:

- **Elevated operating ambient temperature** — If the equipment is installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient temperature. Therefore, install the equipment in an environment compatible with the maximum ambient temperature (TMA = +122°F, +50°C) specified by Extron.
- **Reduced air flow** — Install the equipment in a rack so that the amount of air flow required for safe operation of the equipment is not compromised.
- **Mechanical loading** — When mounting the equipment in the rack, ensure that uneven mechanical loading does not cause a hazardous condition.
- **Circuit overloading** — When connecting the equipment to the supply circuit, consider the effect that circuit overloading might have on overcurrent protection and supply wiring. Consider equipment nameplate ratings when addressing this concern.
- **Reliable earthing (grounding)** — Maintain reliable grounding of rack-mounted equipment. Pay particular attention to supply connections other than direct connections to the branch circuit (for example, use of power strips).

Consignes UL pour le montage en rack

Les consignes UL (« Underwriters Laboratories ») suivantes concernent l'installation en rack d'un boîtier ShareLink Pro :

ATTENTION :

- **Température ambiante élevée** — En cas d'installation de l'équipement dans un rack fermé ou composé de plusieurs unités, la température du rack peut être supérieure à la température ambiante. Par conséquent, il est préférable d'installer l'équipement dans un environnement qui respecte la température ambiante maximale (T_{ma}) spécifiée par Extron.
- **Réduction du flux d'air** — Si l'équipement est installé dans un rack, veillez à ce que le flux d'air nécessaire pour un fonctionnement sécurisé de l'équipement soit respecté.
- **Charge mécanique** — Installez l'équipement en rack de manière à éviter toute situation dangereuse causée par le déséquilibre de la charge mécanique.
- **Surcharge électrique** — Lorsque vous connectez l'équipement au circuit d'alimentation, observez la connexion de l'équipement et étudiez les effets possibles d'une surcharge du circuit sur les protections contre les surintensités et les conducteurs d'alimentation. Consultez à cet égard les indications de la plaque d'identification de l'équipement.
- **Mise à la terre** — Assurez-vous que l'équipement est correctement mis à la terre. Accordez une attention particulière aux connexions électriques autres que les connexions directes au circuit de dérivation (ex. : les multiprises).

Rack Mounting Procedure

The ShareLink Pro 2500 can be mounted in a rack, using an optional Extron rack mounting kit (see www.extron.com for part numbers). Follow the instructions provided with the kit.

Firmware Download

To download the latest firmware for the ShareLink Pro 2500:

1. On the Extron website, www.extron.com, go to the **Download** tab and click **Firmware** (see figure 23, ①).

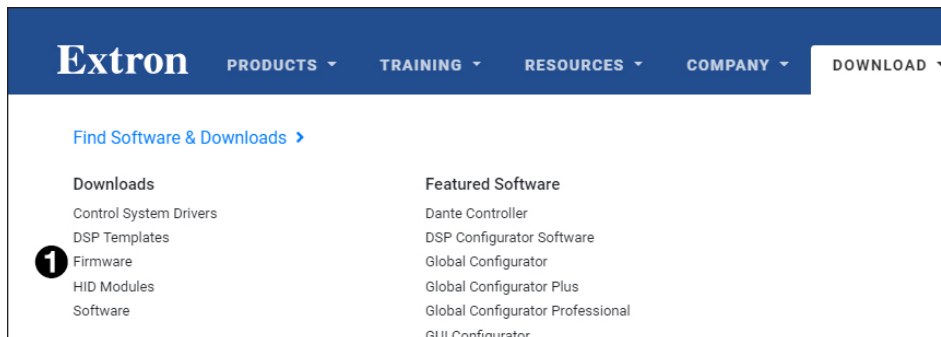


Figure 23. Firmware Link on the Download Tab

2. Search "ShareLink Pro" in the Download Center search bar (see figure 24, ②) and click **ShareLink Pro 2000 Series** in the search results.

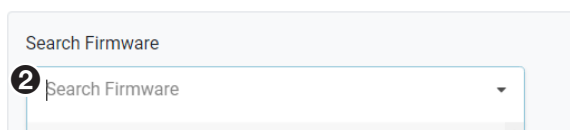


Figure 24. Firmware Download Center

3. Ensure the available firmware version is a later version than the current one on the device, and click **Download**.

NOTE: The firmware release notes provide details about the changes between different firmware versions. The file can be downloaded from the same page as the firmware.

4. Submit any required information to start the download. Note where the file is saved.

NOTE: For instructions on loading new firmware to the device, see [Figure 15](#), ⑤ on page 21.

Firewall Traversal

In order for the ShareLink Pro 2500 to function correctly with the ShareLink Pro applications, it is recommended that the following firewall rules be used to allow traffic to pass. The table below details the ports and their functions.

Port	Type	Direction	Function	Open	Notes
53	UDP/ TCP	Both	DNS	Required	This port is used for communication with a DNS server.
67	UDP	Both	DHCP	Required	This port is used for communication with a DHCP server.
68	UDP	Both	DHCP	Required	This port is used for communication with a DHCP server.
80	TCP	Both	HTTP	Required	This port is used to access the default web page.
123	UDP	Both	NTP	Required	This port is used for communication with an NTP server.
161	UDP	Both	SNMP	Optional	This port is used for SNMP management.
443	TCP	Both	HTTPS	Required	This port is used for accessing the admin configuration web page.
1041	UDP	Both	GVE discovery	Optional	This port is used for discovery of ShareLink Pro devices by GVE software.
1230	UDP	Outbound	Discovery	Required	This port is used for discovery of ShareLink Pro devices by software client applications.
1231	UDP	Inbound	Discovery	Required	This port is used for discovery of ShareLink Pro devices by software client applications.
3478	UDP	Both	WebShare	Required	This port is used for WebShare.
4502	TCP	Both	GVE	Optional	This port is used for GVE management.
4503	TCP	Both	GVE	Optional	This port is used for GVE management.
4522	TCP	Both	PCS file transfer	Required	This port is used for configuration.
4523	TCP	Both	PCS config.	Required	This port is used for configuration.
4534	TCP	Both	ID messaging service	Optional	This port is used for Extron Control System messaging.
5353	UDP	Both	Apple/Miracast Screen Mirroring discovery	Required	This port is used by Bonjour/Avahi network discovery for Apple Screen Mirroring discovery, as well as mDNS for Miracast device discovery.
2001	TCP	Both	RS-232 over Ethernet Insertion	Required	This port is used for RS-232 over Ethernet Insertion. By default, the COM port can be accessed on Port 2001 and the IR/S port (operating in serial mode) can be accessed on Port 2002.

Port	Type	Direction	Function	Open	Notes
7000	TCP	Both	Apple Screen Mirroring	Required	This port is used for Apple Screen Mirroring. If this is not available, then it uses the next available port (e.g., 7001, 7002, and so on).
7100	TCP	Both	Apple Screen Mirroring	Required	This port is used for Apple Screen Mirroring. If this is not available, then it uses the next available port (e.g., 7101, 7102, and so on).
NOTE: mDNS/Multicast must be enabled on the network in order for Apple Screen Mirroring and Miracast to function properly.					
7236	TCP	Both	Miracast	Required	This port is used for Miracast, for both Wi-Fi Direct and Miracast-over-Infrastructure, in order to establish and manage Miracast sessions between the client device and the ShareLink Pro.
7250	TCP	Both	Miracast	Required	This is the port on which the ShareLink Pro listens for Miracast packets when Miracast over Infrastructure is enabled.
554	RTSP	Both	Active Learning	Required	This port is used for Active Learning.
8554	RTSP	Both	ConferenceShare	Required	This port is used for ConferenceShare
8554	RTSP	Both	ConferenceShare	Required	This port is used for ConferenceShare.
60000	RTP	Both	ConferenceShare	Required	This port is used for ConferenceShare
1000-65384	UDP	Outbound	Video streaming	Required	These ports are used for streaming video data to the ShareLink Pro. Port is negotiated at run-time in the range 1000 to 65384 (randomly).
1000-65384	UDP	Outbound	Audio streaming	Required	These ports are used for streaming audio data to the ShareLink Pro. Port is negotiated at run-time in the range 1000 to 65384 (randomly).
19302	UDP	Both	WebShare	Required	This port is used for WebShare
22022	TCP	Both	Internal storage access	Required	This port is used by PCS to access the internal file storage of the ShareLink Pro.
22023	TCP	Inbound	Control	Required	This port is used for controlling the ShareLink Pro via SIS-over-SSH.
29053	TCP	Both	Apple Screen Mirroring	Required	This port is used for Apple Screen Mirroring.
50000	RTP	Both	Active Learning	Required	This port + the next 99 consecutive ports are used for Active Learning.
60000	RTP	Both	ConferenceShare	Required	This port + the next 99 consecutive ports are used for ConferenceShare.

Toolbelt

The Extron Toolbelt utility is available on the Extron website. Toolbelt is a stand-alone Windows application for the management of control systems. Toolbelt can automatically discover ShareLink Pro devices on a network (see the *Toolbelt Help file*). You also can manually add devices, using the known IP addresses. Once you log in to a ShareLink Pro device, you can perform tasks such as:

- View the device and system information.
- View and edit network information.
- View and set SSL certifications.
- Use utilities such as **Ping**, **Reset**, and **Reboot**.
- Configure 802.1X security settings.
- View 802.1X status logs.
- Update the firmware to a selected device or group of devices.

Secure Sockets Layer (SSL) Certificates

The ShareLink Pro 2500 ships with factory-installed SSL certificates created by Extron. If you want or are required to use a different SSL certificate at your installation site, then you can use PCS to change the SSL certificate at any time. The PCS Help File provides instructions on how to apply an SSL certificate.

NOTE: Some certificates require a passphrase that is created when the certificate is created. If a passphrase is required, you must enter that passphrase before uploading and applying the certificate.

IP Link Pro controllers and devices such as the ShareLink Pro 2500 support standard OpenSSL certificate encodings such as .pem (Privacy-enhanced Electronic Mail) and .der file types. PEM file types are ASCII encoded and are the required format for uploading to the ShareLink Pro 2500 receiver. DER (Distinguished Encoding Rules) file types are binary encoded and can typically have several file extension variations, such as .crt and .cer. There are many standard tools that can convert from DER to PEM file encodings if needed.

NOTE: A DER format file must be converted to PEM encoding before uploading it to the unit.

To properly create the certificate for uploading to Extron devices, ensure that the certificate file meets the following requirements:

- Contains X.509 certificate information
- Contains public and private keys
- Uses PEM encoding

NOTE: ITU-T standard X.509 covers aspects of public key encryption, digital cryptography, certificates, and validation.

Contact your IT administrator for more information on what tools and policies are required to obtain or create the SSL certificate and, if necessary, the corresponding passphrase.

Troubleshooting

The following table gives recommended actions to solve problems that may occur during setup or operation. If the problem persists after performing the recommended action, contact Extron Technical Support.

Problem	Actions
(Windows only) Audio level lowers while using the Mirror Screen or Mirror Application features	Open the Sound settings on your PC, and check the following: - Check that Dolby Digital Audio is disabled in your PC sound settings as follows: - Select the Playback tab on the Sounds settings window. - Right-click Speakers/Headphones and click Properties. - Select the Enhancements tab. - Make sure Dolby Digital Audio is disabled. - In the Communications tab, make sure the setting for “When Windows detects communication activity” is set to Do nothing.
(Windows only) No audio for the Mirror Screen or Mirror Application features	- Make sure that the ShareLink Pro application is not muted in the PC volume mixer. - In the Recording tab (within the PC Sounds settings), make sure that Stereo Mix is enabled and set as the default device. - In the Playback tab, check that Speaker is enabled and set as default device. - In the Recording and Playback tabs, check that the ShareLink Pro Audio Driver is enabled. - Download and install the ShareLink Pro software from the Extron website (see page 12 for instructions).
(Windows only) Extron Audio Driver has no audio support after being installed	- In the Recording and Playback tabs, check that the ShareLink Pro Audio Driver is enabled and set as default device when the ShareLink Pro application is running. - Download and install the ShareLink Pro software from the Extron website.
(iOS only) The ShareLink Pro device is not listed in the Screen Mirroring list of devices	- Make sure the iOS device is on the same network as the ShareLink Pro device. - In PCS, go to General Settings, then select the Access/Role Setup tab and make sure IOS Airplay is enabled. - Make sure the specific network ports required for Apple Screen Mirroring are open (see Firewall Traversal on page 90 for port requirements).
4K/60 is not outputting on a 4K/60 capable display	- Test the connection using a shorter HDMI cable. - In PCS, go to EDID Minder. In the EDID Assignment panel, make sure HDMI Pass-Through is set to 4K @ 60 Hz. - In PCS, go to Input/Output Config. In the Output Configuration panel, set the Format to the appropriate color space for the display.
(Windows only) Mirror Screen and Mirror Application features are slow or not working	- Make sure that the graphics drivers are up to date. - Download and reinstall graphics drivers directly from the driver website (such as Intel®, NVIDIA® GeForce®, or AMD® Radeon™).
(iOS only) The Share Website feature on the iOS app shows a blank page	Make sure the device is connected to the internet.
Unable to install NET 4.6.2 on a Windows 8.1 system	Install Windows update KB2919355.

Best Practices for Cleaning Your Extron Products

There may be times when it becomes necessary to clean your Extron product. Plastic surfaces and cosmetic finishes can be damaged by long term exposure to chemicals. Therefore, Extron recommends the following guidelines when cleaning our products.

All Extron products can be safely cleaned with:

1. 70% concentration or higher Isopropyl Alcohol
2. Disinfectant cleaners that:
 - Are non-ammonium based (for example, contains no ammonium chloride)
 - Contain 2% or less sodium hypochlorite (for example, 2% bleach, 98% water)

It is important to follow these general guidelines when cleaning:

1. If possible, unplug the device.
2. Spray the cleaner on a lint-free cloth until the cloth is damp.
3. Do not spray the cleaner directly onto the product.
4. Gently clean the product surface using the cloth.

Your health and safety are our top priority. Keeping devices clean, especially those in high-traffic environments and high-use applications, is a crucial step in minimizing the spread of infections. Please contact us if you have any questions about the guidelines or if you have a question about cleaning the product.



Extron Warranty



This Limited Warranty does not apply if the fault has been caused by misuse, improper handling care, electrical or mechanical abuse, abnormal operating conditions or non-Extron authorized modification to the product. Extron Electronics makes no further warranties either expressed or implied with respect to the product and its quality, performance, merchantability, or fitness for any particular use. In no event will Extron Electronics be liable for direct, indirect, or consequential damages resulting from any defect in this product even if Extron Electronics has been advised of such damage. Please note that laws vary from state to state and country to country, and that some provisions of this warranty may not apply to you.

Powered Warranty

Extron warrants its powered products against defects in materials and workmanship for a period of three years from the date of invoice. In the event of malfunction during the warranty period, Extron will repair or replace a product to whatever extent it shall deem necessary to restore the product to proper operating condition.

Powered Warranty Exception

Everlast™ Power Supplies — Extron warrants Everlast power supplies against any defects in materials and workmanship for a period of seven years from the date of invoice. In the event of a malfunction during the warranty period, Extron will repair or replace the power supply to its original operating condition. Extron engineers will examine the returned product and determine whether the Everlast Power Supply Warranty or Powered Product Warranty applies.

Speakers — Extron warrants Flat Field®, SoundField®, SpeedMount®, Column Array, and System INTEGRATOR® speakers against any defects in materials and workmanship for a period of five years from the date of invoice.

Touchscreens — Extron warrants touchscreen display and overlay components against any defects in materials and workmanship for a period of one year from the date of invoice.

Annotator 300 — Extron warrants the Annotator 300 against any defects in materials and workmanship for a period of five years from the date of invoice.

Non-Powered Warranty Exception

Cable Cubby, Hideaway Surface Access Enclosures and Retractors — Extron warrants Cable Cubby cable access enclosures, HSA Hideaway Surface Access enclosures, and Retractor cable retraction modules for a period of three years from the date of invoice.

Active Cables and Active Adapters — Extron warrants active cables and active adapter cables for a period of three years from the date of invoice.

Cable Termination Tools and Dies — Extron warrants cable termination tools for a period of three years from the date of invoice, excluding the die.

Return Information

Units must be returned insured, with shipping charges prepaid. If not insured, you assume the risk of loss or damage during shipment. Returned units must include the serial number and a description of the problem, as well as the name of the person to contact in case there are any questions.

NOTE: To assure the highest level of service, a return authorization number must be obtained from Extron before products are returned for service. Products must be shipped to Extron, prepaid along with proof of purchase **only** after obtaining a Return Authorization (RA) number from the Extron Customer Support department.

Please contact Extron to receive an RA (Return Authorization) number:

USA: 714.491.1500 or 800.633.9876

Asia: 65.6383.4400

Europe: 31.33.453.4040 or 800.3987.6673

Japan: 81.3.3511.7655

Africa and Middle East: 971.4.299.1800

Worldwide Headquarters: Extron USA West, 1025 E. Ball Road, Anaheim, CA 92805, 800.633.9876