


Ferrite Bead Kit • Installation Guide

After installation, the Extron® DFX 100 and HFX 100 series extenders should provide clear video output signals. If there are problems with EMI interference, place the provided ferrite bead around the cable of the **receiver** (DFX 100 Rx or HFX 100 Rx) by following these instructions:

1. If necessary, release the catch on the ferrite bead and open it.
2. Place the bead around the video output cable. It should be positioned 2.0 inches (5.1 cm) from the rear panel of the receiver.
3. Close the bead. When the catch closes, the bead clamps securely around the cable.

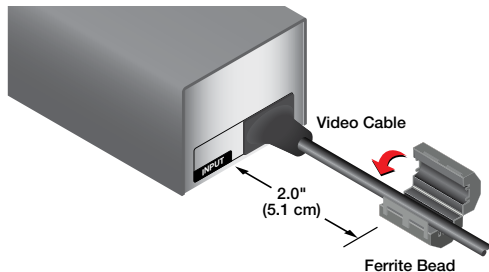

Extron USA - West - Headquarters +800.633.9876 Inside USA/Canada Only +1.714.491.1500 +1.714.491.1517 FAX	Extron USA - East +800.633.9876 Inside USA/Canada Only +1.919.850.1000 +1.919.850.1001 FAX	Extron Europe +800.3987.6673 Inside Europe Only +31.33.453.4040 +31.33.453.4050 FAX	Extron Asia +800.7339.8766 Inside Asia Only +65.6383.4400 +65.6383.4664 FAX	Extron Japan +81.3.3511.7655 +81.3.3511.7656 FAX	Extron China +4000.398766 Inside China Only +86.21.3760.1568 +86.21.3760.1566 FAX	Extron Middle East +971.4.299.1800 +971.4.299.1880 FAX
--	---	--	--	---	--	---

68-2375-01
Rev. A
03 13