

CableCover™ Setup Guide


The Extron CableCover bag mounts to most AVEdge and Cable Cubby® enclosures to minimize tangles and accidental disconnections, and improve cable management. The bag attaches to the enclosure using hook-and-loop fasteners, as shown in the instructions below.

- 1 Determine the height at which to attach the provided hook tape on the outside of the enclosure. Wipe that area using the included alcohol wipe.
- 2 Attach the adhesive hook tape around the outside of the enclosure at the chosen height.

NOTE: Cut the tape as necessary to leave any installation holes accessible.


- 3 Wrap the CableCover over the cables. Allow all necessary cables to exit the pass-through openings on either side or at the bottom.

- 4 Secure the CableCover to the tape on the enclosure.

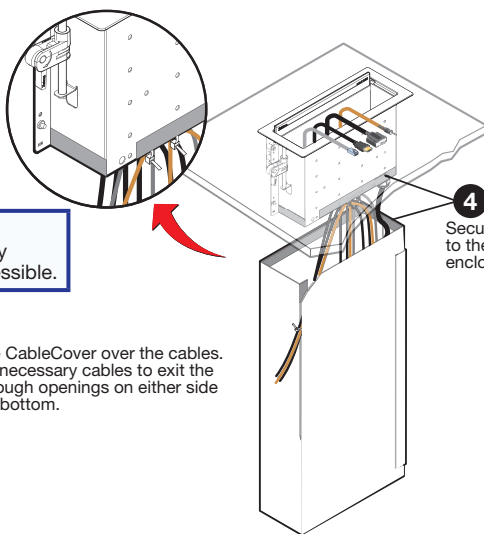

- 5 Adjust the bag at the top as necessary, depending on enclosure size.

- 6 Ensure that cables are routed properly inside the bag to prevent tangling or obstruction of cable movement.

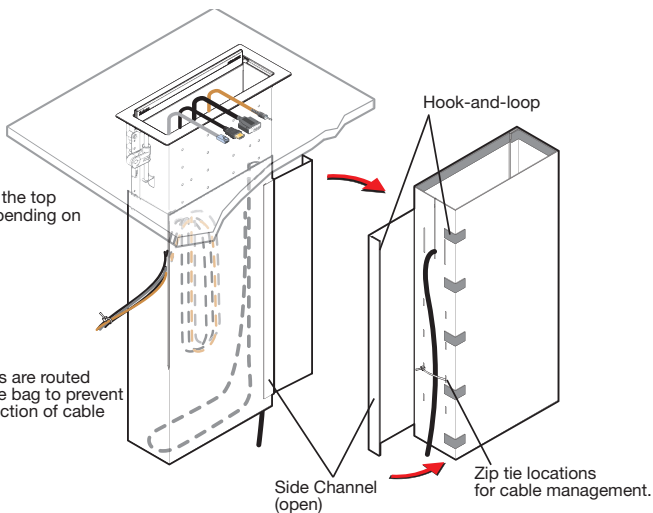

68-2982-01 Rev. A
09 16

Extron Headquarters +1.800.633.9876 (Inside USA/Canada Only)	Extron Asia +65.6383.4400	Extron China +86.21.3760.1568	Extron Australia +61.8.8351.2188
Extron Europe +31.33.453.4040	Extron Japan +81.3.3511.7655	Extron Middle East +971.4.299.1800	Extron India +91.80.3055.3777