

HSA 822M / HSA 822MS Hideaway Enclosure User's Guide

About the HSA 822M and HSA 822MS

The Extron HSA 822M and HSA 822MS are furniture mounted, motorized architectural solutions for inconspicuous computer video interface connector access and control.


The HSA 822M has an ultra-thin metal surface that rests almost flush on the tabletop.

The HSA 822MS uses the removed portion of the table or similar material to rest flush within the table surface.

The motorized action is controlled by a remote control or pressure on the top surface. Safety devices prevent injury and equipment damage.



HSA 822M hideaway enclosure

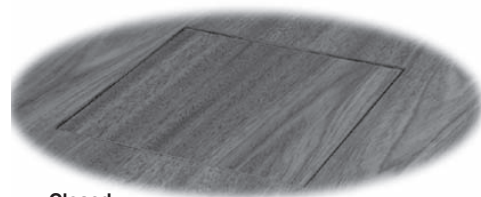

Closed



Open

HSA 822MS hideaway enclosure



www.extron.com

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
USA
714.491.1500
Fax 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands
+31.33.453.4040
Fax +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Building
Singapore 368363
+65.6383.4400
Fax +65.6383.4664

Extron Electronics, Japan
Kyodo Building
16 Ichibancho
Chiyoda-ku, Tokyo 102-0082 Japan
+81.3.3511.7655
Fax +81.3.3511.7656

68-617-05
Rev. A 01 05

Installation Configuration

The HSA can be installed and configured to be operated locally by pushing on the top surface or remotely by any number of means, such as a computer keystroke, a control system command, or a pushbutton controller. Work with your installer to create a system that meets your needs.

Operation

Raise or lower the platform to access or conceal the AAPs and connectors in any of the following ways (if enabled in your system):

- Touch a button on a locally constructed device.
- Make a control system command.
- Press down on the top of the enclosure.

WARNING Do not insert fingers or other objects into the HSA as it closes. The HSA has a safety mechanism that reverses the carriage direction and lifts the carriage when it detects an obstruction.

WARNING Do not rest beverage containers such as coffee cups on top of the HSA. There is danger of electrical shock and equipment damage if liquid is spilled into the HSA.

CAUTION Do not rest heavy objects on top of the HSA. The stepper motor can lift approximately 5 pounds only.