

IMPORTANT:
Go to www.extron.com for the complete user guide, installation instructions, and specifications before connecting the product to the power source.

HAI 100 4K • Setup Guide


The Extron HAI 100 4K is an audio embedder that embeds either two-channel analog audio, or two-channel or multi-channel S/PDIF digital audio onto the HDMI output signal. The HAI 100 4K includes an HDMI input, analog stereo audio and S/PDIF audio inputs, as well as an HDMI output.

Mounting

The HAI 100 4K can be placed on a desktop or tabletop using the included rubber feet, or mounted to a rack or furniture (see the *HAI 100 4K User Guide*, available at www.extron.com, for mounting options and instructions).

Cabling

Rear Panel Features and Cabling

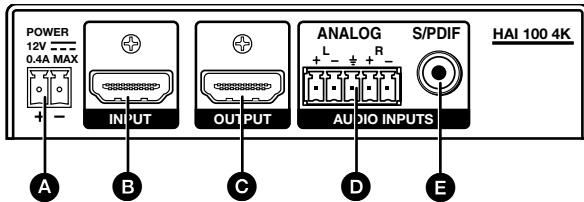


- A** Power input
- B** HDMI input
- C** HDMI output
- D** Analog audio input
- E** S/PDIF audio input (see the next page)

Figure 1. HAI 100 4K Rear Panel

A Power input — Connect the provided power supply to the 3.5 mm, 2-pole captive screw power receptacle (see the image at right).

ATTENTION:

- Do not connect the power supply before reading the Attention in the Power Supply section of the *HAI 100 4K User Guide*.
- Ne branchez pas la source d'alimentation externes avant d'avoir lu les mises en garde dans la section « Power Supply » du *HAI 100 4K User Guide*.

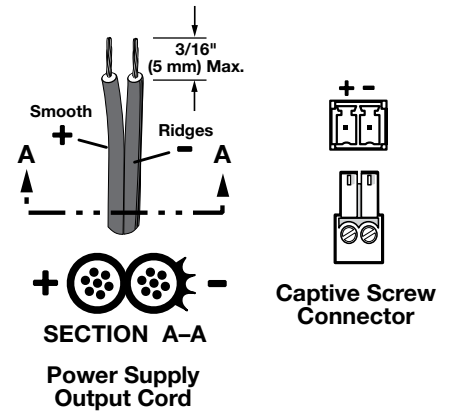

B HDMI input — Connect an HDMI input source into this female HDMI type A connector.

NOTE: By default, the EDID stored at the HDMI input is set to 720p at 60 Hz with 2-channel audio. EDID can be configured using Extron PCS software or SIS commands (see **Configuration** on the next page).

C HDMI output — Connect an HDMI output device into this female HDMI type A connector.

D Analog audio input — Connect an analog audio device to this 5-pole 3.5 mm captive screw connector (see figure 2). This connector accepts 2-channel stereo balanced or unbalanced audio.

NOTE: Analog audio is embedded automatically by default, replacing any existing embedded digital audio. The input audio format setting can be configured using PCS or SIS commands (see **Configuration** on the next page).

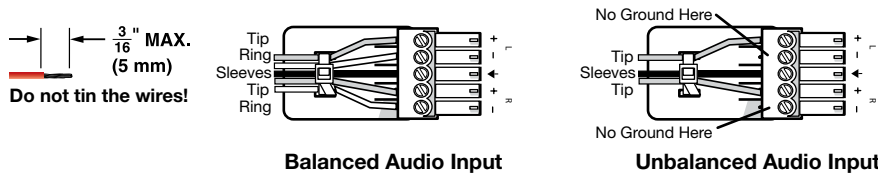


Figure 2. Analog Input Connector Wiring

ATTENTION:

- Connect the sleeve to the ground (Gnd) terminal. Connecting the sleeve to a negative (-) terminal will damage the audio output circuits.
- Connectez le manchon à la terminaison terre (Gnd). Connecter le manchon à une terminaison négative (-) endommagera les circuits de la sortie audio.

- E S/DPID audio input** — Connect a S/DPID audio output device into this female RCA connector. This connector accepts digital S/DPID audio formats (2-channel LPCM, Dolby Digital, or DTS).

NOTE: By default, the unit is configured to always embed analog audio. Therefore, the S/DPID input is inactive. The input audio format setting can be configured using PCS or SIS commands (see “Configuration” below).

Front Panel Features and Cabling

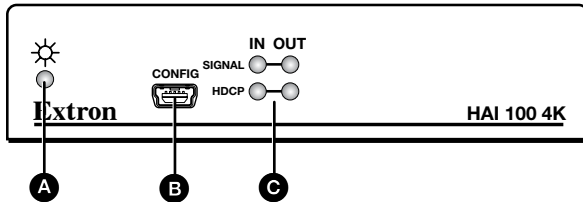


Figure 3. HAI 100 4K Front Panel

- A Power LED** — The LED indicator lights when the unit is receiving power.
- B Config port** — Connect a control PC to this female type B mini USB Config port to update the firmware, configure various functions of the unit, and view the current status of the unit.
- C Input and Output LEDs** — These four LEDs provide the status of the HDMI input and output:
 - Signal — Input LED lights when the unit is receiving a signal on the HDMI input. Output LED lights when a sink device is connected to the HDMI output.
 - HDCP — Input LED lights when the input signal is HDCP encrypted. Output LED lights when an HDCP compliant sink device is detected and the output is encrypted.

Configuration

Several HAI 100 4K features, including EDID Minder®, can be configured using Extron PCS software or SIS commands:

- Extron Product Configuration Software (PCS):** To configure the unit using PCS, download the software from www.extron.com (see the *HAI 100 4K User Guide* for details).
- Simple Instruction Set™ (SIS) commands:** SIS commands can be sent from a PC to the HAI 100 4K using Extron DataViewer or other command interface (see the “SIS Commands” section of the *HAI 100 4K User Guide*).

68-2801-50
Rev. A
04 16

Extron Headquarters +800.633.9876 Inside USA/Canada Only	Extron Europe +800.3987.6673 Inside Europe Only	Extron Asia +65.6383.4400 +65.6383.4664 FAX	Extron Japan +81.3.3511.7655 +81.3.3511.7656 FAX	Extron China +86.21.3760.1568 +86.21.3760.1566 FAX	Extron Middle East +971.4.299.1800 +971.4.299.1880 FAX	Extron Korea +82.2.3444.1571 +82.2.3444.1575 FAX	Extron India 1800.3070.3777 (Inside India Only)
Extron USA - West +1.714.491.1500 +1.714.491.1517 FAX	Extron USA - East +1.919.850.1000 +1.919.850.1001 FAX	+31.33.453.4040 +31.33.453.4050 FAX					+91.80.3055.3777 +91.80.3055.3737 FAX